

SECTION **BL**

**BODY, LOCK & SECURITY SYSTEM**

**CONTENTS**

<b>PRECAUTIONS</b> .....	<b>4</b>	<b>OUTLINE</b> .....	<b>18</b>
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	4	Schematic .....	19
Precautions for work .....	4	Wiring Diagram — D/LOCK — .....	20
<b>PREPARATION</b> .....	<b>5</b>	Terminals and Reference Value for BCM .....	24
Special service tool .....	5	Work Flow .....	24
Commercial Service Tool .....	5	CONSULT-II Function (BCM) .....	25
<b>SQUEAK AND RATTLE TROUBLE DIAGNOSES</b> .....	<b>6</b>	CONSULT-II INSPECTION PROCEDURE .....	25
Work Flow .....	6	DATA MONITOR .....	26
CUSTOMER INTERVIEW .....	6	ACTIVE TEST .....	26
DUPLICATE THE NOISE AND TEST DRIVE .....	7	Trouble Diagnoses Symptom Chart .....	27
CHECK RELATED SERVICE BULLETINS .....	7	BCM Power Supply and Ground Circuit Check .....	27
LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE .....	7	Door Switch Check .....	28
REPAIR THE CAUSE .....	7	Key Switch (Insert) Check .....	30
CONFIRM THE REPAIR .....	8	Door Lock/Unlock Switch Check .....	31
Generic Squeak and Rattle Troubleshooting .....	8	Front Door Lock Assembly LH (Actuator) Check ...	33
INSTRUMENT PANEL .....	8	Front Door Lock Actuator RH Check .....	35
CENTER CONSOLE .....	8	Rear Door Lock Actuator RH/LH/Back (Without Power Back Door) Check .....	36
DOORS .....	8	FrontDoorLockAssemblyLH(KeyCylinderSwitch) Check .....	37
TRUNK .....	9	<b>REMOTE KEYLESS ENTRY SYSTEM</b> .....	<b>39</b>
SUNROOF/HEADLINING .....	9	Component Parts and Harness Connector Location..	39
OVERHEAD CONSOLE (FRONT AND REAR).....	9	System Description .....	40
SEATS .....	9	INPUTS .....	40
UNDERHOOD .....	9	OPERATED PROCEDURE .....	41
Diagnostic Worksheet .....	10	CAN Communication System Description .....	43
<b>HOOD</b> .....	<b>12</b>	Schematic .....	44
Fitting Adjustment .....	12	Wiring Diagram — KEYLES — .....	45
CLEARANCE AND SURFACE HEIGHT ADJUSTMENT .....	13	.....	45
HOOD LOCK ADJUSTMENT .....	13	.....	46
Removal and Installation of Hood Assembly .....	13	.....	47
Removal and Installation of Hood Lock Control ....	14	Terminals and Reference Value for BCM .....	48
REMOVAL .....	14	Terminals and Reference Value for IPDM E/R .....	49
INSTALLATION .....	14	CONSULT-II Function (BCM) .....	49
Hood Lock Control Inspection .....	15	CONSULT-II Inspection Procedure .....	50
<b>POWER DOOR LOCK SYSTEM</b> .....	<b>16</b>	"MULTI REMOTE ENT" .....	50
Component Parts and Harness Connector Location..	16	CONSULT-II Application Items .....	51
System Description .....	17	"MULTI REMOTE ENT" .....	51
		Trouble Diagnosis Procedure .....	53
		BCM Power Supply and Ground Circuit Inspection..	53

Trouble Diagnoses .....	54	Trouble Diagnosis Procedure .....	108
SYMPTOM CHART .....	54	Self-Diagnosis Procedures .....	108
Key Switch (Insert) Check .....	56	INPUT SIGNAL CHECK MODE .....	108
Door Switch Check .....	57	OPERATING CHECK MODE .....	108
Keyfob Battery and Function Check .....	59	Diagnosis Chart .....	109
Remote Keyless Entry Receiver System Inspection..	60	Back Door Power Supply and Ground Circuit	
ACC Power Check .....	62	Inspection .....	110
IPDM E/R Operation Check .....	62	Power Liftgate Switch System Inspection .....	111
Check Hazard Function .....	64	GLASS HATCH AJAR SWITCH CHECK .....	112
Check Horn Function .....	64	Back Door Close (Close) Switch System Inspection	113
Check Headlamp Function .....	64	Back Door Close (Cancel) Switch System Inspec-	
Check Map Lamp Illumination Function .....	64	tion .....	114
ID Code Entry Procedure .....	65	Pinch Strip System Inspection .....	116
KEYFOB ID SET UP WITH CONSULT-II .....	65	Back Door Warning Chime System Inspection ....	117
KEYFOB ID SET UP WITHOUT CONSULT-II ....	67	Half-Latch Switch System Inspection .....	117
Keyfob Battery Replacement .....	68	Open Switch System Inspection .....	118
<b>VEHICLE SECURITY (THEFT WARNING) SYSTEM.. 69</b>		Close Switch System Inspection .....	119
Component Parts and Harness Connector Location..	69	Back Door Handle Switch System Inspection .....	120
System Description .....	70	Cinch Latch Motor System Inspection .....	121
DESCRIPTION .....	70	<b>DOOR .....</b>	<b>123</b>
POWER SUPPLY AND GROUND CIRCUIT .....	71	Fitting Adjustment .....	123
INITIAL CONDITION TO ACTIVATE THE SYS-		FRONT DOOR .....	123
TEM .....	71	REAR DOOR .....	123
VEHICLE SECURITY SYSTEM ALARM OPER-		STRIKER ADJUSTMENT .....	123
ATION .....	71	Removal and Installation .....	124
VEHICLE SECURITY SYSTEM DEACTIVATION..	72	FRONT DOOR .....	124
PANIC ALARM OPERATION .....	72	REAR DOOR .....	124
CAN Communication System Description .....	72	BACK DOOR .....	125
Schematic .....	73	<b>FRONT DOOR LOCK .....</b>	<b>126</b>
Wiring Diagram — VEHSEC — .....	74	Component Structure .....	126
.....	74	Removal and Installation .....	126
.....	75	REMOVAL .....	126
.....	76	INSTALLATION .....	128
.....	77	Disassembly and Assembly .....	128
.....	78	DOOR KEY CYLINDER ASSEMBLY .....	128
Terminals and Reference Value for BCM .....	79	<b>REAR DOOR LOCK .....</b>	<b>129</b>
Terminals and Reference Value for IPDM E/R .....	79	Component Structure .....	129
CONSULT-II Function (BCM) .....	80	Removal and Installation .....	129
CONSULT-II INSPECTION PROCEDURE .....	80	REMOVAL .....	129
CONSULT-II APPLICATION ITEM .....	81	INSTALLATION .....	129
Trouble Diagnosis .....	82	<b>BACK DOOR LOCK .....</b>	<b>130</b>
WORK FLOW .....	82	Power Back Door Opener .....	130
Preliminary Check .....	83	REMOVAL .....	130
Symptom Chart .....	84	INSTALLATION .....	130
Diagnostic Procedure 1 .....	85	Door Lock Assembly .....	131
Diagnostic Procedure 2 .....	89	REMOVAL .....	131
Diagnostic Procedure 3 .....	90	INSTALLATION .....	131
Diagnostic Procedure 4 .....	91	<b>NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-</b>	
Diagnostic Procedure 5 .....	91	<b>NATS) .....</b>	<b>132</b>
Diagnostic Procedure 6 .....	92	Component Parts and Harness Connector Location	132
<b>AUTOMATIC BACK DOOR SYSTEM .....</b>	<b>93</b>	System Description .....	133
Component Parts and Harness Connector Location..	93	System Composition .....	133
System Description .....	94	ECM Re-communicating Function .....	134
OPERATION DESCRIPTION .....	94	Wiring Diagram — NATS — .....	135
Schematic .....	99	Terminals and Reference Value for BCM .....	136
Wiring Diagram — B/CLOS — .....	100	CONSULT-II .....	136
Terminals and Reference Value for Back Door Con-		CONSULT-II INSPECTION PROCEDURE .....	136
trol Unit .....	105	CONSULT-II DIAGNOSTIC TEST MODE FUNC-	
Terminals and Reference Value for BCM .....	107	TION .....	137

HOW TO READ SELF-DIAGNOSTIC RESULTS	138	Body Sealing	165	
NVIS (NATS) SELF-DIAGNOSTIC RESULTS		DESCRIPTION	165	A
ITEM CHART	138	Body Construction	168	
Work Flow	139	BODY CONSTRUCTION	168	B
Trouble Diagnoses	140	Body Alignment	169	
SYMPTOM MATRIX CHART 1	140	BODY CENTER MARKS	169	
SYMPTOM MATRIX CHART 2	141	PANEL PARTS MATCHING MARKS	171	
DIAGNOSTIC SYSTEM DIAGRAM	141	DESCRIPTION	172	C
Diagnostic Procedure 1	142	ENGINE COMPARTMENT	173	
Diagnostic Procedure 2	143	UNDERBODY	175	
Diagnostic Procedure 3	144	PASSENGER COMPARTMENT	178	
Diagnostic Procedure 4	145	REAR BODY	183	D
Diagnostic Procedure 5	146	Handling Precautions for Plastics	185	
Diagnostic Procedure 6	149	HANDLING PRECAUTIONS FOR PLASTICS	185	
How to Replace NATS Antenna Amp.	150	LOCATION OF PLASTIC PARTS	186	E
<b>HOMELINK UNIVERSAL TRANSCEIVER</b>	<b>151</b>	Precautions in Repairing High Strength Steel	188	
Wiring Diagram — TRNSCV —	151	HIGH STRENGTH STEEL (HSS) USED IN NIS-		
Trouble Diagnoses	152	SAN VEHICLES	188	F
DIAGNOSTIC PROCEDURE	152	Foam Repair	190	
<b>CAB AND REAR BODY</b>	<b>154</b>	URETHANE FOAM APPLICATIONS	190	
Body Mounting	154	FILL PROCEDURES	190	
<b>BODY REPAIR</b>	<b>155</b>	Replacement Operations	191	G
Body Exterior Paint Color	155	DESCRIPTION	191	
Body Component Parts	156	HOODLEDGE	194	
UNDERBODY COMPONENT PARTS	156	FRONT PILLAR	195	H
BODY COMPONENT PARTS	158	CENTER PILLAR	198	
FRAME COMPONENT PARTS	160	OUTER SILL	200	
Corrosion Protection	162	REAR FENDER	201	
DESCRIPTION	162	REAR SIDE MEMBER	203	BL
ANTI-CORROSIVE WAX	163	REAR FLOOR REAR	204	
UNDERCOATING	164	CRUSH HORN	205	J
				K
				L
				M

# PRECAUTIONS

## PRECAUTIONS

PF0:00001

### Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EIS00630

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### Precautions for work

EIS004H0

- After removing and installing the opening/closing parts, be sure to carry out fitting adjustments to check their operation.
- Check the lubrication level, damage, and wear of each part. If necessary, grease or replace it.

# PREPARATION


## PREPARATION

PFP:00002

### Special service tool

EIS004H2


The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

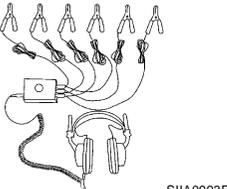Tool number (Kent-Moore No.) Tool name	Description
— (J-39570) Chassis ear	 SIIA0993E Locating the noise
— (J-43980) NISSAN Squeak and Rattle Kit	 SIIA0994E Repairing the cause of noise
— (J-43241) Remote Keyless Entry Tester	 LEL946A Used to test keyfobs

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L

## Commercial Service Tool

EIS004H3

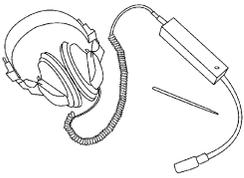(Kent-Moore No.) Tool name	Description
(J-39565) Engine ear	 SIIA0995E Locating the noise

M


# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## SQUEAK AND RATTLE TROUBLE DIAGNOSES

PF0:0000

### Work Flow

EIS004H4

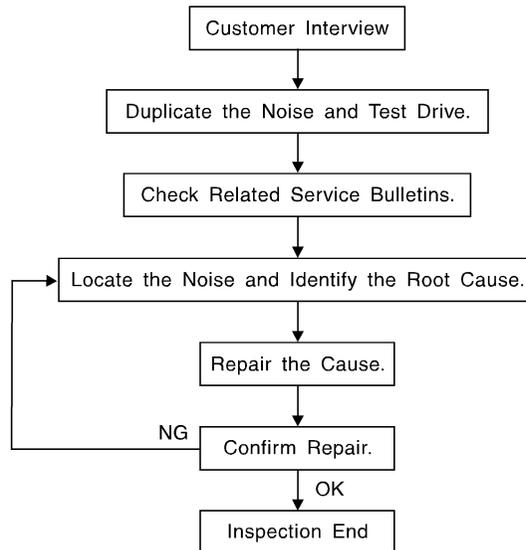

SBT842

### CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [BL-10, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)  
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping.
- Creak—(Like walking on an old wooden floor)  
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)  
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)  
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)  
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)  
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)  
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
  - 2) Tap or push/pull around the area where the noise appears to be coming from.
  - 3) Rev the engine.
  - 4) Use a floor jack to recreate vehicle "twist".
  - 5) At idle, apply engine load (electrical load, half-clutch on M/T model, drive position on A/T model).
  - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
  - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

## CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

## LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear: J-39565 and mechanic's stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
  - removing the components in the area that you suspect the noise is coming from. Do not use too much force when removing clips and fasteners, otherwise clips and fasteners can be broken or lost during the repair, resulting in the creation of new noise.
  - tapping or pushing/pulling the component that you suspect is causing the noise. Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
  - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
  - placing a piece of paper between components that you suspect are causing the noise.
  - looking for loose components and contact marks.  
Refer to [BL-8, "Generic Squeak and Rattle Troubleshooting"](#).

## REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
  - separate components by repositioning or loosening and retightening the component, if possible.
  - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A NISSAN Squeak and Rattle Kit (J-43980) is available through your authorized NISSAN Parts Department.

### CAUTION:

**Do not use excessive force as many components are constructed of plastic and may be damaged.**

**Always check with the Parts Department for the latest parts information.**

**The following materials are contained in the NISSAN Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.**

**URETHANE PADS [1.5 mm (0.059 in) thick]**

**Insulates connectors, harness, etc.**

**76268-9E005: 100×135 mm (3.94×5.31 in)/76884-71L01: 60×85 mm (2.36×3.35 in)/76884-71L02: 15×25 mm (0.59×0.98 in)**

**INSULATOR (Foam blocks)**

**Insulates components from contact. Can be used to fill space behind a panel.**

**73982-9E000: 45 mm (1.77 in) thick, 50×50 mm (1.97×1.97 in)/73982-50Y00: 10 mm (0.39 in) thick, 50×50 mm (1.97×1.97 in)**

**INSULATOR (Light foam block)**

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

---

**80845-71L00:** 30 mm (1.18 in) thick, 30×50 mm (1.18×1.97 in)

## FELT CLOTH TAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

**68370-4B000:** 15×25 mm (0.59×0.98 in) pad/**68239-13E00:** 5 mm (0.20 in) wide tape roll. The following materials not found in the kit can also be used to repair squeaks and rattles.

## UHMW (TEFLON) TAPE

Insulates where slight movement is present. Ideal for instrument panel applications.

## SILICONE GREASE

Used instead of UHMW tape that will be visible or not fit.

**Note:** Will only last a few months.

## SILICONE SPRAY

Use when grease cannot be applied.

## DUCT TAPE

Use to eliminate movement.

## CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

## Generic Squeak and Rattle Troubleshooting

EIS004H5

Refer to Table of Contents for specific component removal and installation information.

## INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicone spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

### CAUTION:

**Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.**

## CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

## DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the NISSAN Squeak and Rattle Kit (J-43980) to repair the noise.

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner. In addition look for:

1. Trunk lid bumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

## SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sun visor shaft shaking in the holder
3. Front or rear windshield touching headliner and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

## OVERHEAD CONSOLE (FRONT AND REAR)

Overhead console noises are often caused by the console panel clips not being engaged correctly. Most of these incidents are repaired by pushing up on the console at the clip locations until the clips engage.

In addition look for:

1. Loose harness or harness connectors.
2. Front console map/reading lamp lense loose.
3. Loose screws at console attachment points.

## SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

## UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

A

B

C

D

E

F

G

H

BL

J

K

L

M

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

EIS004H6

## Diagnostic Worksheet





Dear Customer:

We are concerned about your satisfaction with your vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your vehicle right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

### SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

#### I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

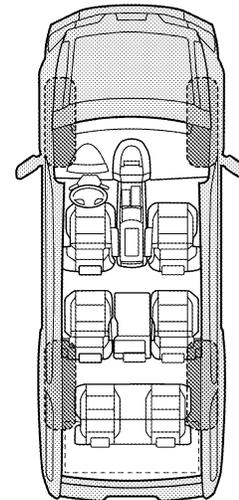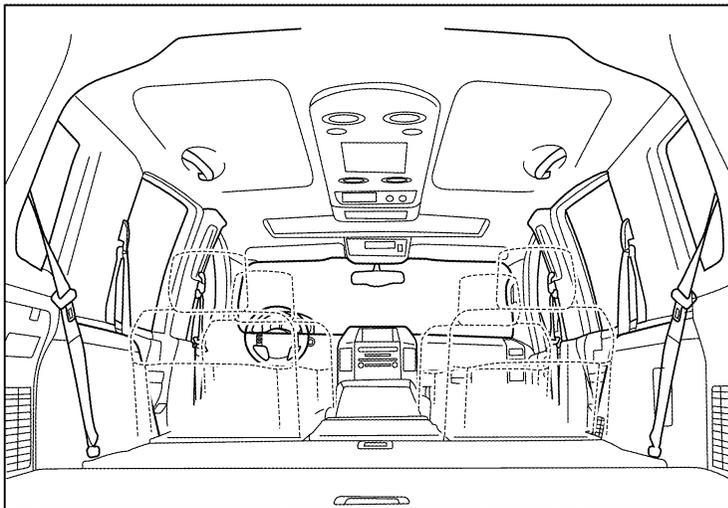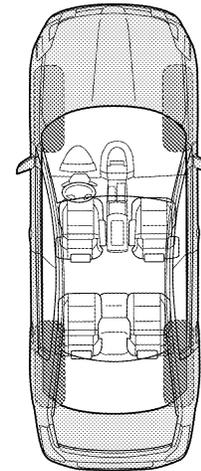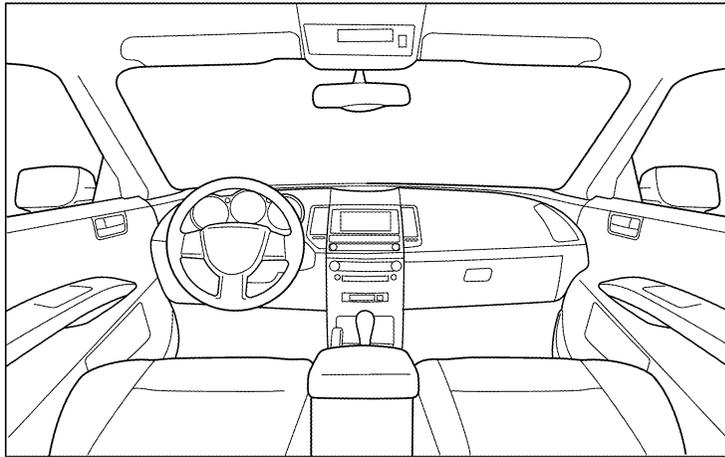

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

---

---

### II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- |   |  |
|---|--|
| <input type="checkbox"/> Anytime                      | <input type="checkbox"/> After sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning      | <input type="checkbox"/> When it is raining or wet     |
| <input type="checkbox"/> Only when it is cold outside | <input type="checkbox"/> Dry or dusty conditions       |
| <input type="checkbox"/> Only when it is hot outside  | <input type="checkbox"/> Other:                        |

### III. WHEN DRIVING:

- Through driveways
- Over rough roads
- Over speed bumps
- Only about \_\_\_\_ mph
- On acceleration
- Coming to a stop
- On turns: left, right or either (circle)
- With passengers or cargo
- Other: \_\_\_\_\_
- After driving \_\_\_\_ miles or \_\_\_\_ minutes

### IV. WHAT TYPE OF NOISE

- Squeak (like tennis shoes on a clean floor)
- Creak (like walking on an old wooden floor)
- Rattle (like shaking a baby rattle)
- Knock (like a knock at the door)
- Tick (like a clock second hand)
- Thump (heavy muffled knock noise)
- Buzz (like a bumble bee)

### TO BE COMPLETED BY DEALERSHIP PERSONNEL

#### Test Drive Notes:

---

---

---

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

LAI0071E

# HOOD







## HOOD

PF5:F5100

## Fitting Adjustment

EIS004H7

SEC. 650

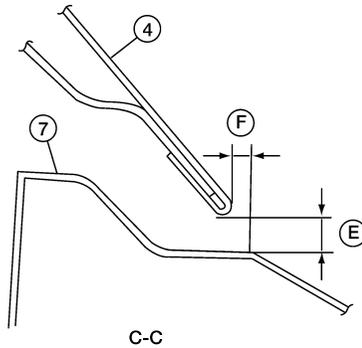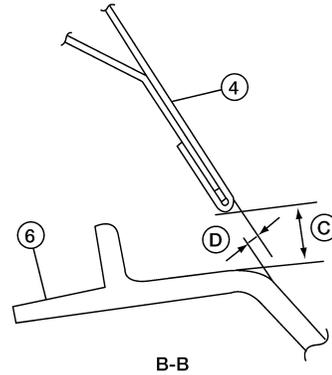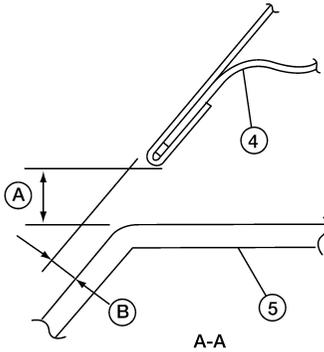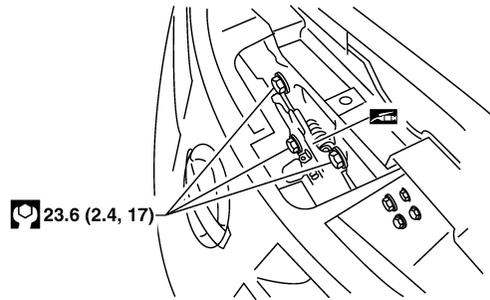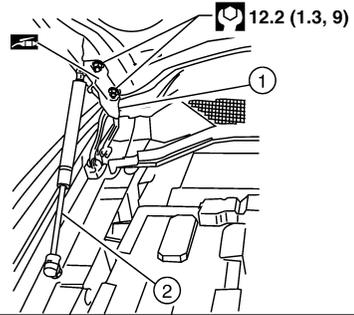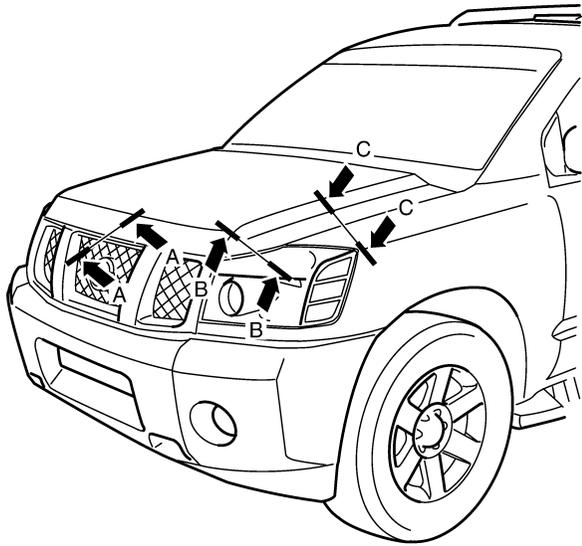

W1A0883E

# HOOD

- |                     |                      |                       |
|---------------------|----------------------|-----------------------|
| 1. Hood hinge       | 2. Hood stay         | 3. Hood lock assembly |
| 4. Hood assembly    | 5. Front grille      | 6. Headlamp           |
| 7. Front fender     | A. 8.0 mm (0.315 in) | B. 2.0 mm (0.079 in)  |
| C. 8.0mm (0.315 in) | D. 0.8 mm (0.031 in) | E. 5.0 mm (0.197 in)  |
| F. 0.0 mm (0.00 in) |                      |                       |

## CLEARANCE AND SURFACE HEIGHT ADJUSTMENT

1. Remove the front grille. Refer to [EI-17, "FRONT GRILLE"](#).
2. Remove the hood lock assembly and adjust the height by rotating the bumper rubber until the hood clearance of hood and fender becomes 1 mm (0.04 in) lower than fitting standard dimension.
3. Temporarily tighten the hood lock, and position it by engaging it with the hood striker. Check the lock and striker for looseness, and tighten the lock bolt to the specified torque.
4. Adjust the clearance and surface height of hood and fender according to the fitting standard dimension by rotating right and left bumper rubbers.

### CAUTION:

Adjust right/left gap between hood and each part to the following specification.

**Hood and headlamp (B–B) : Less than 8.0 mm**

5. Install the front grille. Refer to [EI-17, "FRONT GRILLE"](#).


## HOOD LOCK ADJUSTMENT

1. Remove the front grille. Refer to [EI-17, "FRONT GRILLE"](#).
2. Move the hood lock to the left or right so that striker center is vertically aligned with hood lock center (when viewed from vehicle front).
3. Make sure the secondary latch is properly engaged with the secondary striker with hood's own weight by dropping it from approx. 200 mm (7.87 in) height or by pressing it lightly approx. 3 kg (29 N, 7lb).

### CAUTION:

Do not drop the hood from 300 mm (11.81 in) height or higher.

4. After adjusting hood lock, tighten the lock bolts to the specified torque.
5. Install the front grille. Refer to [EI-17, "FRONT GRILLE"](#).

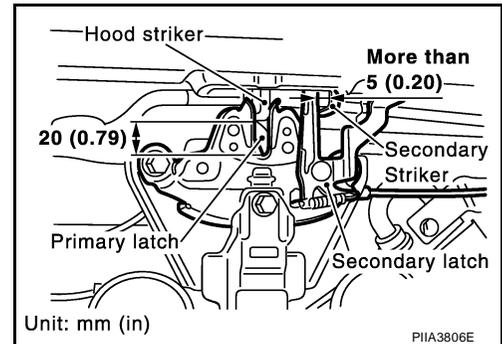

## Removal and Installation of Hood Assembly

1. Support the hood with a suitable tool.

### WARNING:

Body injury may occur if no supporting rod is holding the hood open when removing the damper stay.


2. Remove the hinge nuts from the hood to remove the hood assembly.

### CAUTION:

Operate with two workers, because of its heavy weight.

Installation is in the reverse order of removal.


- Adjust the hood. Refer to [BL-13, "CLEARANCE AND SURFACE HEIGHT ADJUSTMENT"](#).
- Adjust the hood lock. Refer to [BL-13, "HOOD LOCK ADJUSTMENT"](#).

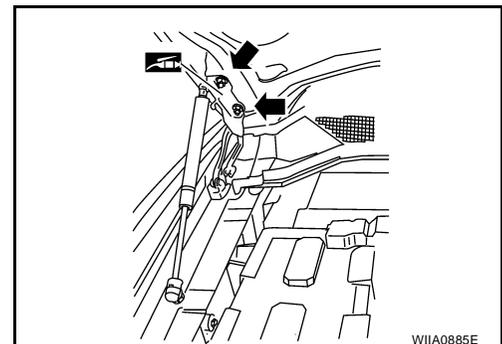

# HOOD

## Removal and Installation of Hood Lock Control

EIS004H9

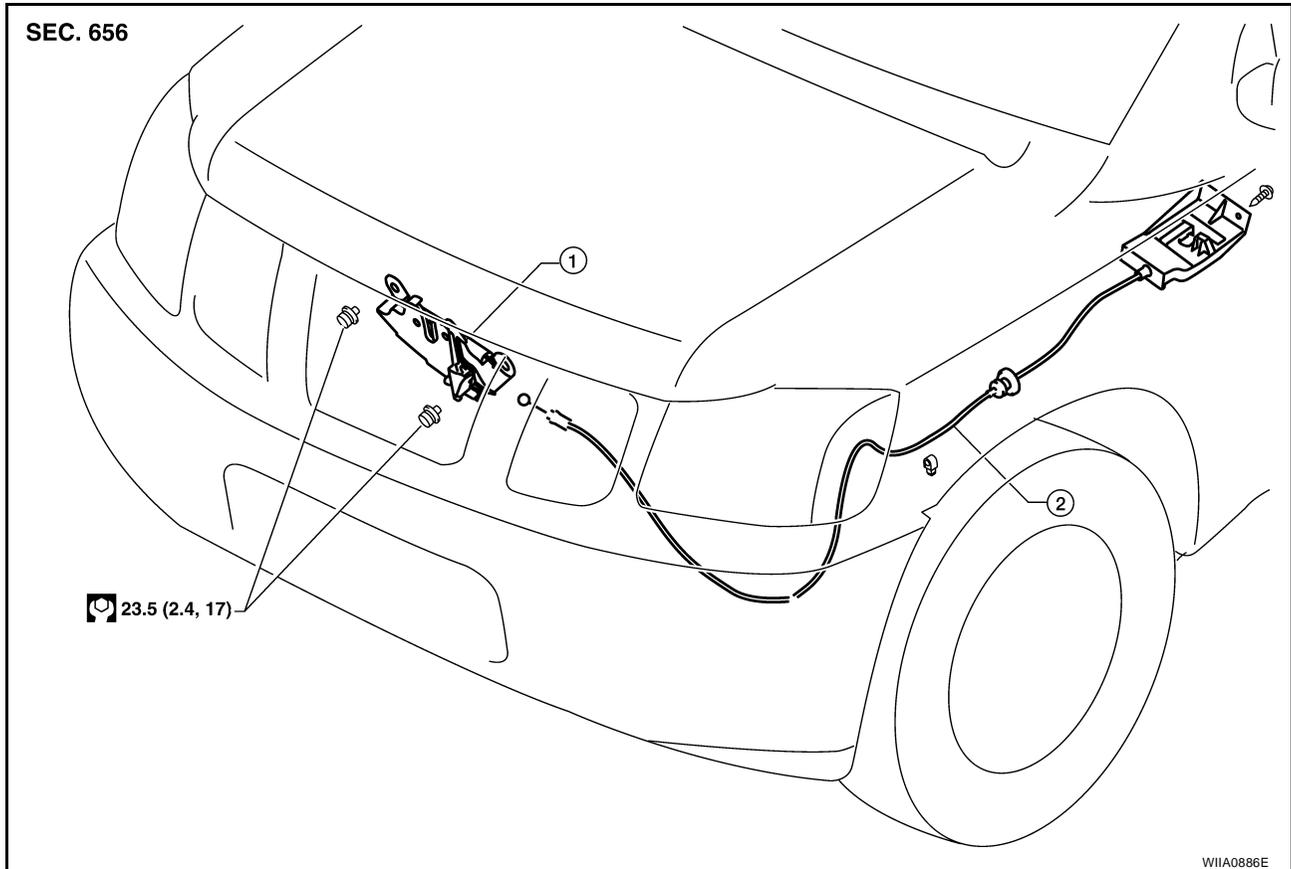

1. Hood lock assembly

2. Hood lock cable

### REMOVAL

1. Remove the front grill. Refer to [EI-17, "FRONT GRILLE"](#).
2. Remove the front fender protector (LH). Refer to [EI-21, "FENDER PROTECTOR"](#).
3. Disconnect the hood lock cable from the hood lock, and unclip it from the radiator core support upper and hoodedge.
4. Remove the bolt and the hood opener.
5. Remove the grommet from the dash lower, and pull the hood lock cable toward the passenger room.

#### **CAUTION:**

**While pulling, be careful not to damage the outside of the hood lock cable.**


### INSTALLATION

1. Pull the hood lock cable through the hole in dash lower panel into the engine room.


# HOOD

Be careful not to bend the cable too much, keeping the radius 100mm (3.94 in) or more.

2. Make sure the cable is not offset from the positioning grommet, and from inside the vehicle, push the grommet into the dash lower hole securely.
3. Apply the sealant around the grommet at (\*) mark.

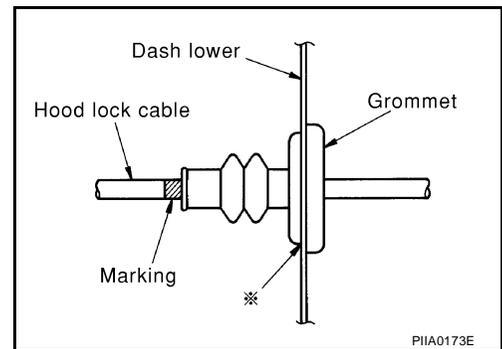

4. Install the cable securely to the lock.
5. After installing, check the hood lock adjustment and hood opener operation.

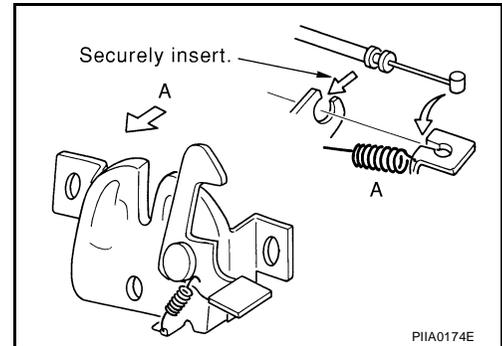


## Hood Lock Control Inspection

### CAUTION:


If the hood lock cable is bent or deformed, replace it.

1. Make sure the secondary latch is properly engaged with the secondary striker with hood's own weight by dropping it from approx. 200 mm (7.87 in) height.
2. While operating the hood opener, carefully make sure the front end of the hood is raised by approx. 20 mm (0.79 in). Also make sure the hood opener returns to the original position.

EIS004HA

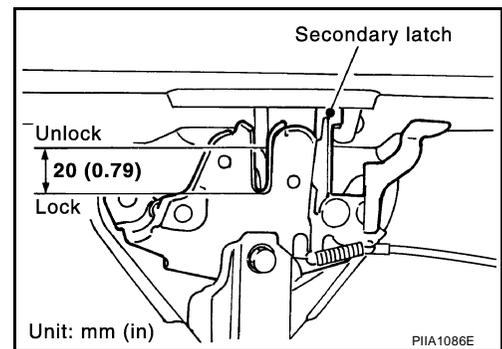

3. Check the hood lock lubrication condition. If necessary, apply "body grease" to the points shown in the figure.

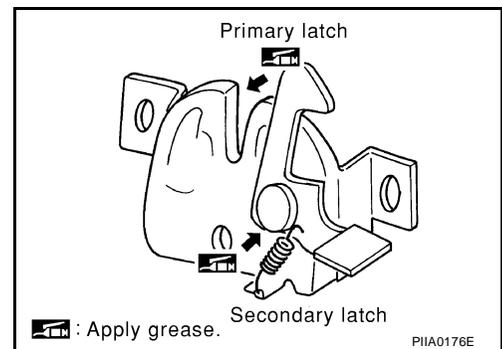


# POWER DOOR LOCK SYSTEM

## POWER DOOR LOCK SYSTEM

PFP:24814

### Component Parts and Harness Connector Location

EIS007YI

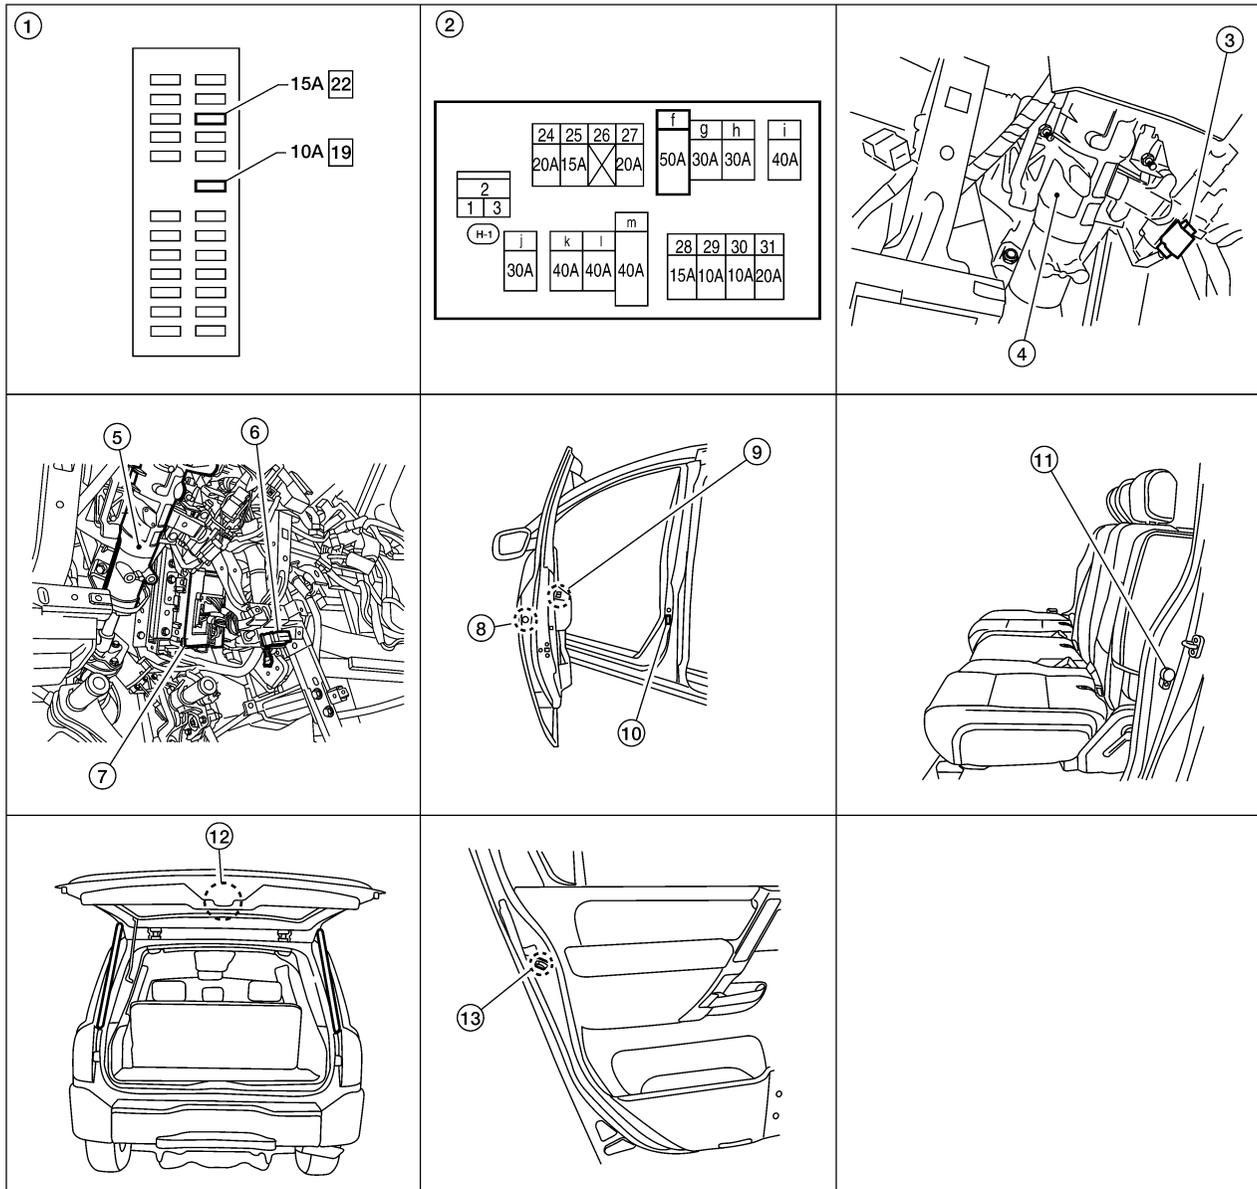

WIIA0871E

- |   |  |   |
|---|--|---|
| 1. Fuse block (J/B)   | 2. Fuse and fusible link box   | 3. Key switch and key lock solenoid M27   |
| 4. Steering column assembly                                     | 5. Steering column<br>(view with instrument panel LH removed)                                | 6. Data link connector M22<br>(view with instrument panel LH removed)   |
| 7. BCM M18, M19, M20<br>(view with instrument panel LH removed) | 8. Front door lock assembly LH (key cylinder switch) D14<br>Front door lock actuator RH D114 | 9. Main power window and door lock/unlock switch D7, D8<br>Power window and door lock/unlock switch RH D105   |
| 10. Front door switch<br>LH B8<br>RH B108                       | 11. Rear door switch<br>LH B18<br>RH B116  | 12. Back door switch (without power back door) D502<br>Back door latch (door ajar switch) (with power back door) D503<br>Back door lock actuator D708 |
| 13. Rear door lock actuator<br>LH D205<br>RHD305                |  |   |

# POWER DOOR LOCK SYSTEM

EIS007YJ

## System Description

Power is supplied at all times

- through 50A fusible link (letter **f**, located in the fuse and fusible link box)
- to BCM terminal 70 and
- through 15A fuse [No. 22, located in the fuse block (J/B)]
- to BCM terminal 57.
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to key switch and key lock solenoid terminal 3

With ignition key inserted, power is supplied

- through key switch and key lock solenoid terminal 4
- to BCM terminal 37.

Ground is supplied to terminal 67 of BCM through body grounds M57, M61 and M79.

When the door is locked or unlocked with main power window and door lock/unlock switch, ground is supplied

- to CPU of main power window and door lock/unlock switch
- through main power window and door lock/unlock switch terminal 17
- through grounds M57, M61 and M79.

Then main power window and door lock/unlock switch operation signal is supplied.

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14.

When the door is locked or unlocked with power window and door lock/unlock switch RH, ground is supplied

- to CPU of power window and door lock/unlock switch RH
- through power window and door lock/unlock switch RH terminal 11
- through grounds M57, M61 and M79.

Then power window and door lock/unlock switch RH operation signal is supplied

- to BCM terminal 22
- through power window and door lock/unlock switch RH terminal 16.

When the door is locked with front door lock assembly LH, ground is supplied

- to main power window and door lock/unlock switch terminal 4
- through key cylinder switch terminals 1 and 5
- through grounds M57, M61 and M79.

Then key cylinder switch operation signal is supplied

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14.

When the door is unlocked with front door lock assembly LH, ground is supplied

- to main power window and door lock/unlock switch terminal 6
- through key cylinder switch terminals 6 and 5
- through grounds M57, M61 and M79.

Then key cylinder switch operation signal is supplied

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14.

BCM is connected to main power window and door lock/unlock switch and power window and door lock/unlock switch RH through a serial link.

When the front door switch LH is ON (door is open), ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2
- through front door switch LH case ground.

When the front door switch RH is ON (door is open), ground is supplied

- to BCM terminal 12
- through front door switch RH terminal 2

A  
B  
C  
D  
E  
F  
G  
H  
J  
K  
L  
M

BL

# POWER DOOR LOCK SYSTEM

---

- through front door switch RH case ground.

When the rear door switch LH is ON (door is open), ground is supplied

- to BCM terminal 48
- through rear door switch LH terminal 2
- through rear door switch LH case ground.

When the rear door switch RH is ON (door is open), ground is supplied

- to BCM terminal 13
- through rear door switch RH terminal 2
- through rear door switch RH case ground.

With power back door: When the back door latch (door ajar switch) is ON (door is open), ground is supplied

- to BCM terminal 43
- through back door latch terminal 7
- through back door latch terminal 8
- through grounds B7 and B19.

Without power back door: When the back door switch is ON (door is open), ground is supplied

- to BCM terminal 43
- through back door switch terminal 3
- through back door switch terminal 1
- through grounds B7 and B19.

## OUTLINE

### **Functions available by operating the door lock and unlock switches on driver door and passenger door**

- Interlocked with the locking operation of door lock and unlock switch, door lock actuators of all doors are locked.
- Interlocked with the unlocking operation of door lock and unlock switch, door lock actuators of all doors are unlocked.

### **Functions available by operating the key cylinder switch on driver door**

- Interlocked with the locking operation of door key cylinder, door lock actuators of all doors are locked.
- When door key cylinder is unlocked, front door lock assembly LH is unlocked.
- When door key cylinder is unlocked for the second time within 5 seconds after the first operation, door lock actuators on all doors are unlocked.


### **Key reminder door system**

When door lock and unlock switch is operated to lock doors with ignition key in key cylinder and any door open, all door lock actuators are locked and then unlocked.

# POWER DOOR LOCK SYSTEM

## Schematic

EIS007YK

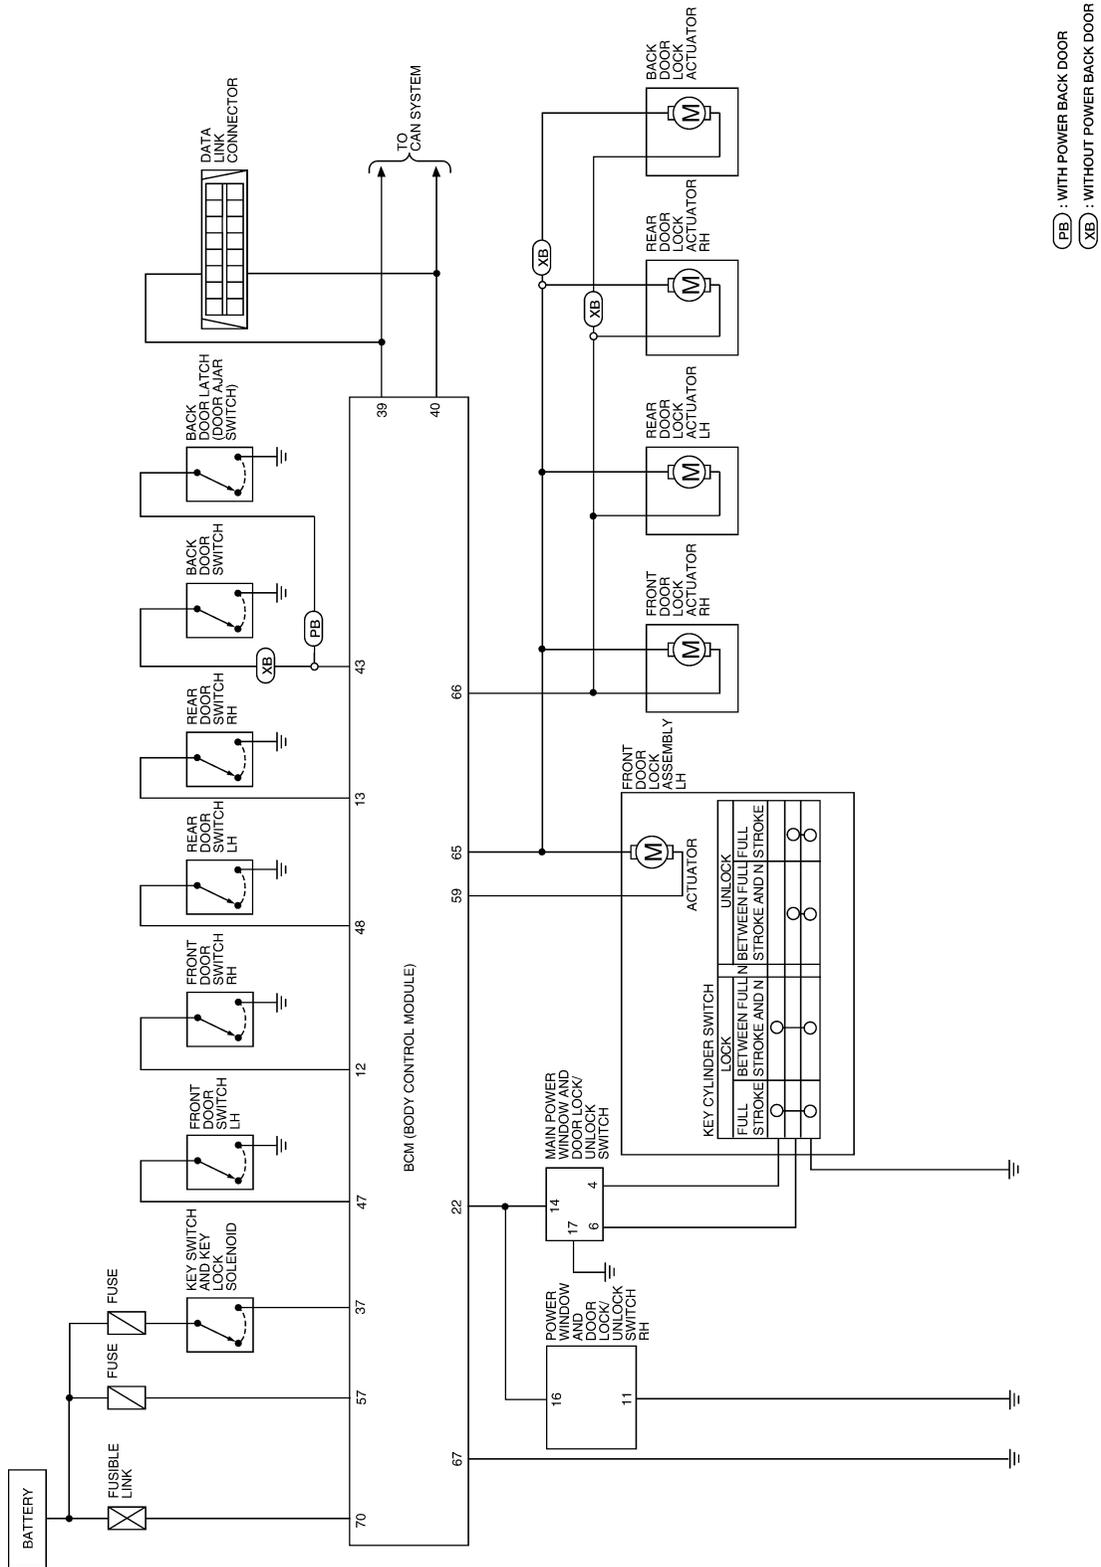

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M




# POWER DOOR LOCK SYSTEM

## Wiring Diagram — D/LOCK —

EIS007YL

### BL-D/LOCK-01

— : DATA LINE

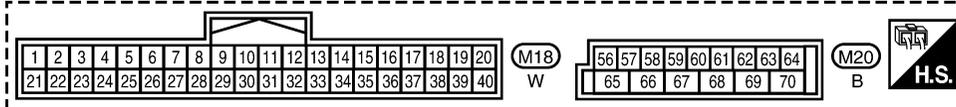
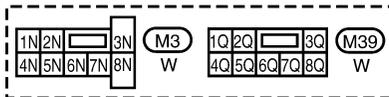
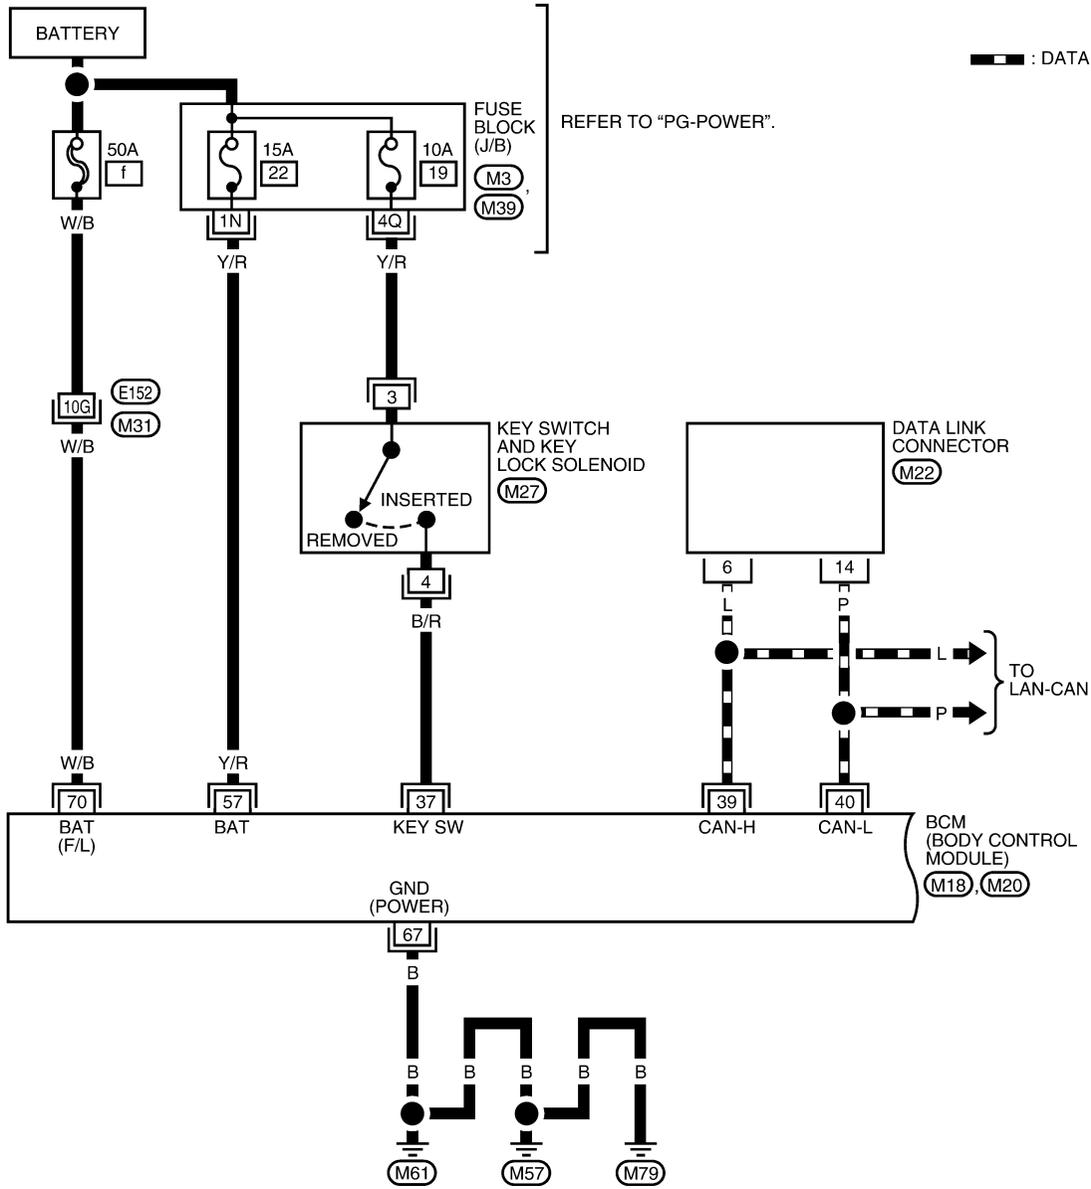


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WIWA0742E

# POWER DOOR LOCK SYSTEM

BL-D/LOCK-02

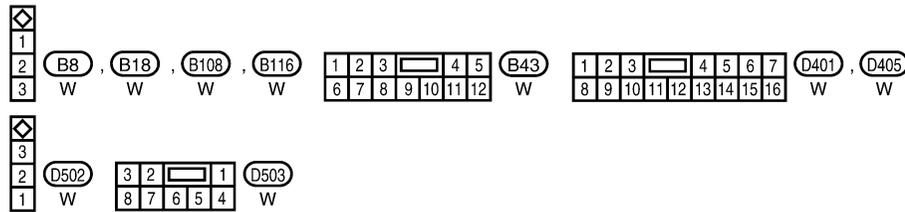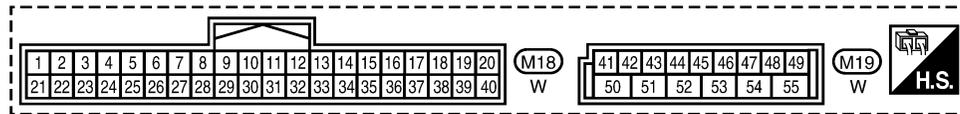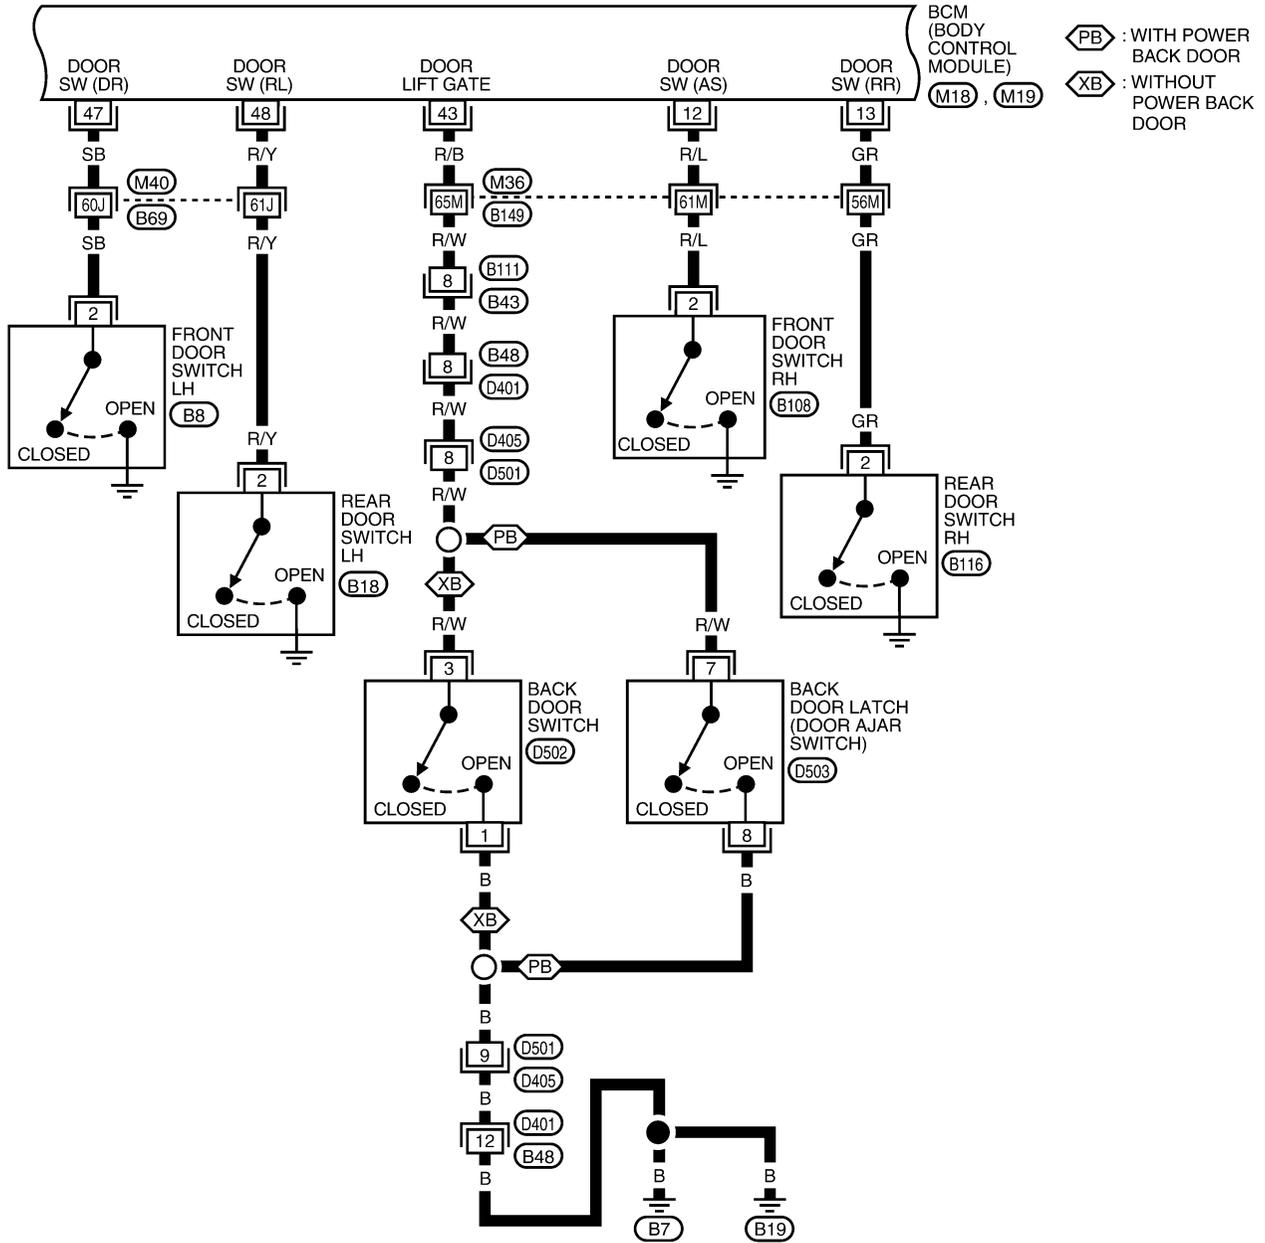

REFER TO THE FOLLOWING.



(M36, M40) - SUPER MULTIPLE JUNCTION (SMJ)



WIWA0743E

# POWER DOOR LOCK SYSTEM

BL-D/LOCK-03







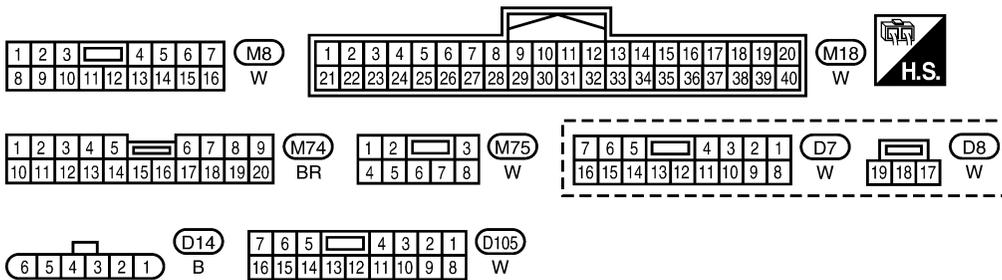
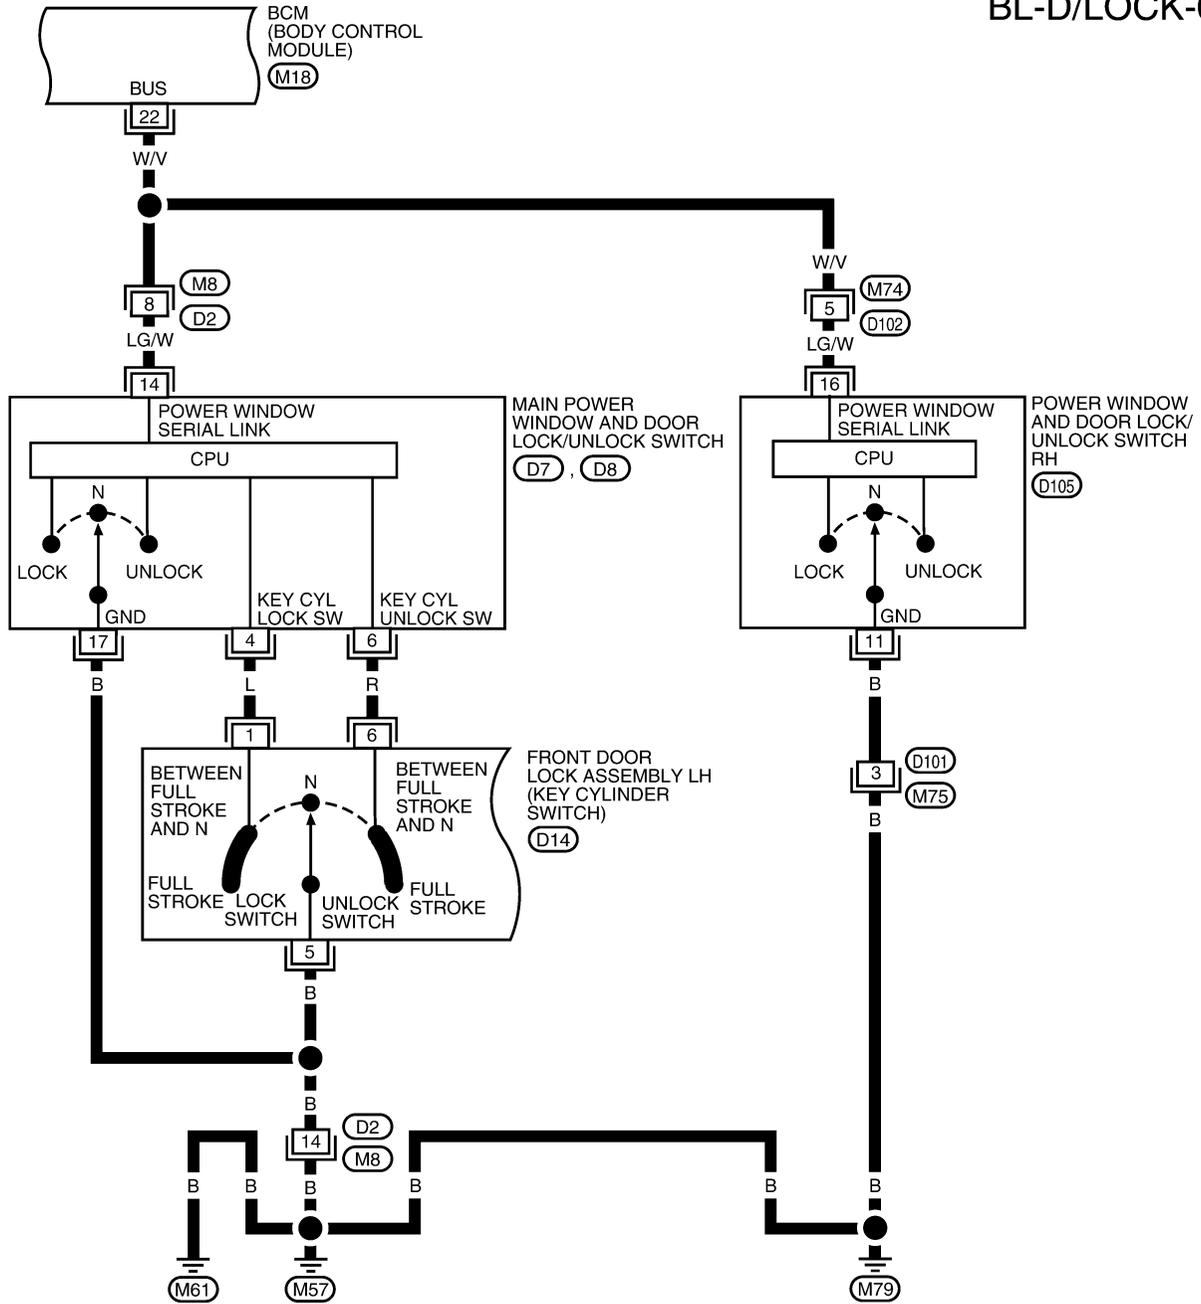


WIWA1521E

# POWER DOOR LOCK SYSTEM

BL-D/LOCK-04

: WITHOUT POWER BACK DOOR

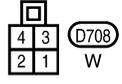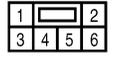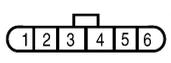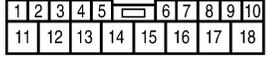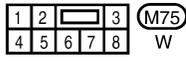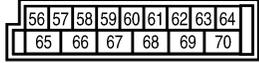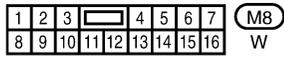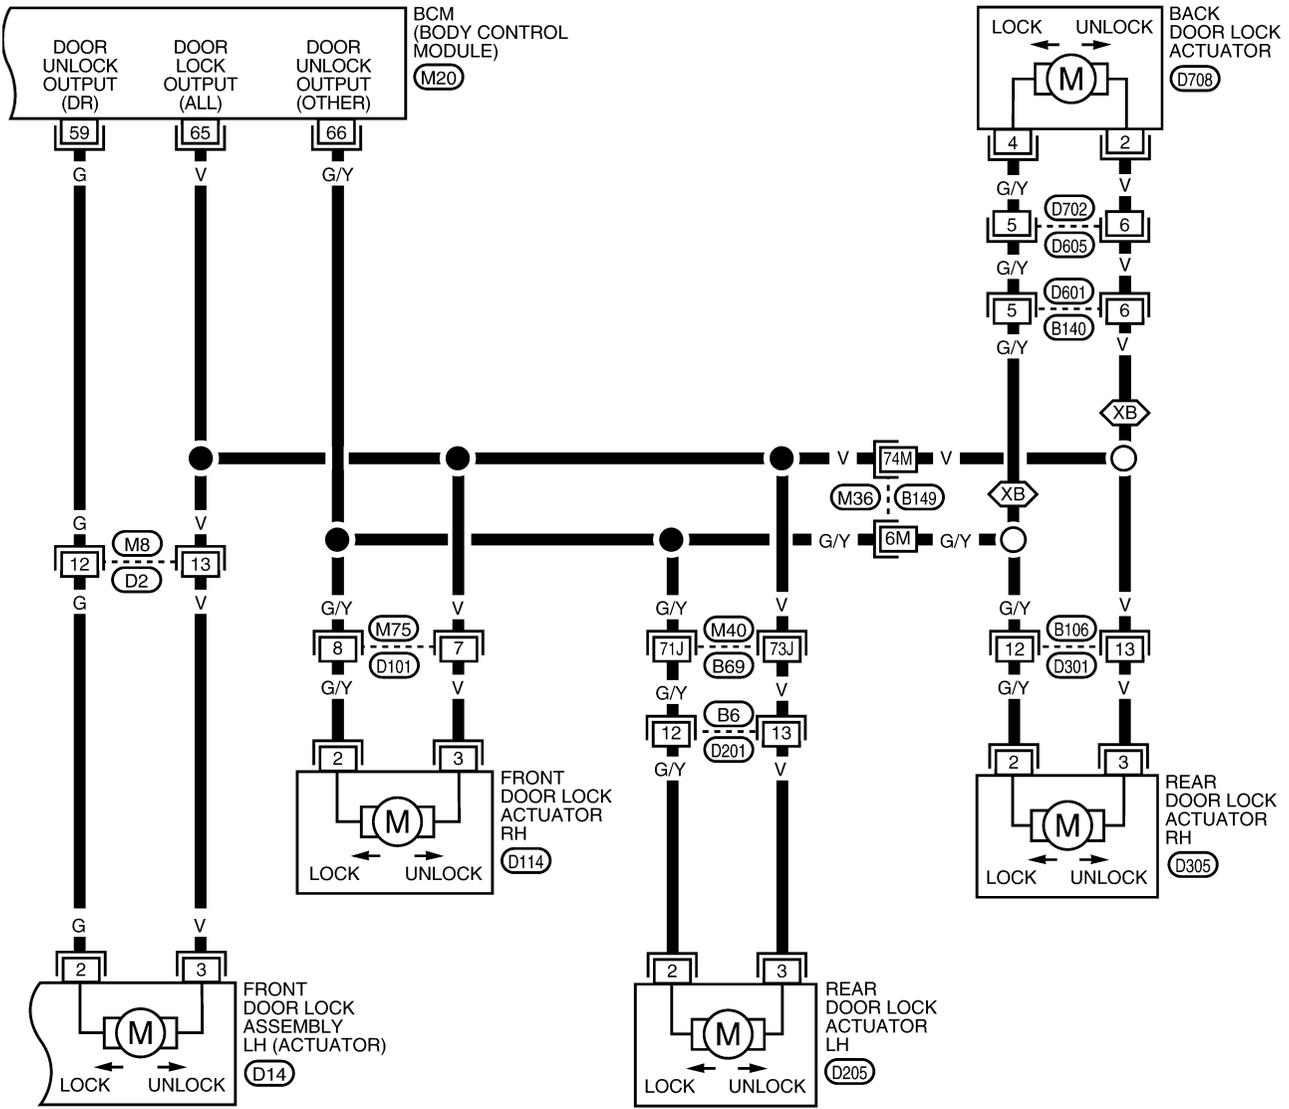


REFER TO THE FOLLOWING.  
 (M36), (M40) - SUPER  
 MULTIPLE JUNCTION (SMJ)

WIWA1394E

# POWER DOOR LOCK SYSTEM

## Terminals and Reference Value for BCM

EIS007YM

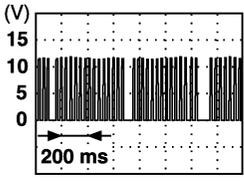Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)
12	R/L	Front door switch RH	Door open (ON) → Door close (OFF)	0 → Battery voltage
13	GR	Rear door switch RH	Door open (ON) → Door close (OFF)	0 → Battery voltage
22	W/V	Bus	When ignition switch is ON or power window timer operates	
37	B/R	Key switch (insert)	Key inserted in IGN key cylinder (ON) → Key removed from IGN key cylinder (OFF)	Battery voltage → 0
39	L	CAN-H	—	—
40	P	CAN-L	—	—
43	R/B	Back door switch (without power back door) or back door latch (with power back door)	Door open (ON) → Door close (OFF)	0 → Battery voltage
47	SB	Front door switch LH	Door open (ON) → Door close (OFF)	0 → Battery voltage
48	R/Y	Rear door switch LH	Door open (ON) → Door close (OFF)	0 → Battery voltage
57	Y/R	Battery power supply	—	Battery voltage
59	G	Front door lock assembly LH (unlock)	Driver door lock knob (locked → unlocked)	0 → Battery voltage
65	V	All door lock actuators (lock)	Driver door lock knob (neutral → lock)	0 → Battery voltage
66	G/Y	Front door lock actuator RH, rear door lock actuators LH/RH and back door lock actuator (unlock)	Door lock and unlock switch (locked → unlocked)	0 → Battery voltage
67	B	Ground	—	—
70	W/B	BAT power supply	—	Battery voltage

## Work Flow

EIS007YN

1. Check the symptom and customer's requests.
2. Understand the outline of system. Refer to [BL-17, "System Description"](#) .
3. According to the trouble diagnosis chart, repair or replace the cause of the malfunction. Refer to [BL-27, "Trouble Diagnoses Symptom Chart"](#) .
4. Does power door lock system operate normally? OK: GO TO 5, NG: GO TO 3.
5. INSPECTION END.

# POWER DOOR LOCK SYSTEM

## CONSULT-II Function (BCM)

EIS007YO

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.


## CONSULT-II INSPECTION PROCEDURE

### "DOOR LOCK"


#### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. Turn ignition switch OFF.
2. Connect "CONSULT-II" and "CONSULT-II CONVERTER" to the data link connector.

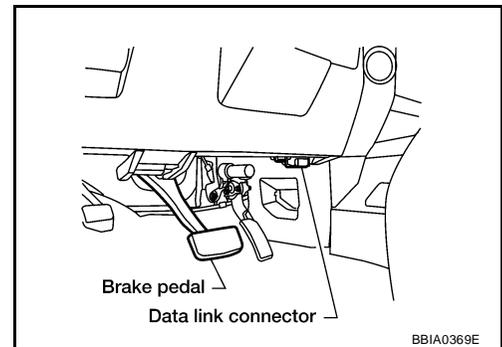

3. Turn ignition switch ON.
4. Touch "START (NISSAN BASED VHCL)".

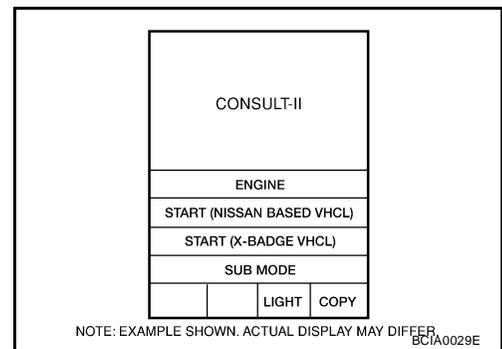

5. Touch "BCM".  
If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

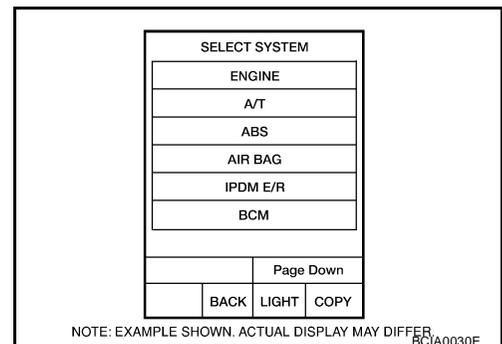



# POWER DOOR LOCK SYSTEM

## Trouble Diagnoses Symptom Chart

EIS007YP

A  
B  
C  
D  
E  
F  
G  
H

Symptom	Repair order	Refer to page
Key reminder door function does not operate properly.	1. Door switch check	<a href="#">BL-28</a>
	2. Key switch (Insert) check	<a href="#">BL-30</a>
	3. Replace BCM.	<a href="#">BCS-20</a>
Power door lock does not operate with door lock and unlock switch on main power window and door lock/unlock switch or power window and door lock/unlock switch RH.	1. Door lock/unlock switch check	<a href="#">BL-31</a>
Front door lock assembly LH does not operate.	1. Door lock actuator check (Front LH)	<a href="#">BL-33</a>
Specific door lock actuator does not operate.	1. Door lock actuator check (Front RH)	<a href="#">BL-35</a>
	2. Rear door (RH/LH), Back door (without power back door)	<a href="#">BL-36</a>
	3. Back door (with power back door)	<a href="#">BL-108</a>
Power door lock does not operate with front door key cylinder LH operation.	1. Front door lock assembly LH (key cylinder switch) check	<a href="#">BL-37</a>
	2. Replace BCM.	<a href="#">BCS-20</a>
Power door lock does not operate	1. BCM power supply and ground circuit check	<a href="#">BL-27</a>
	2. Door lock/unlock switch check	<a href="#">BL-31</a>

## BCM Power Supply and Ground Circuit Check

EIS007YQ

### 1. CHECK FUSE

Check the following BCM fuse and fusible link.

Component Parts	Terminal No. (SIGNAL)	Ampere	No.	Location
BCM	57 (BAT power supply)	10A	22	Fuse block (J/B)
BCM	70 (BAT power supply)	50A	f	Fuse and fusible link box

#### NOTE:

Refer to [BL-16, "Component Parts and Harness Connector Location"](#).

#### OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse, refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

### 2. CHECK POWER SUPPLY CIRCUIT


- Turn ignition switch OFF.
- Disconnect BCM.
- Check voltage between BCM connector M20 terminals 57, 70 and ground.

Connector	Terminals		Voltage (V) (Approx.)
	(+)	(-)	
M20	57	Ground	Battery voltage
	70		

#### OK or NG

OK >> GO TO 3.

NG >> Repair or replace harness.

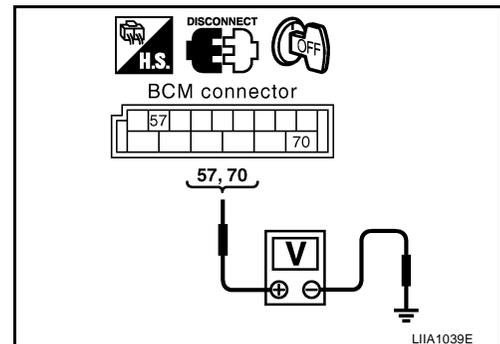

# POWER DOOR LOCK SYSTEM


## 3. CHECK GROUND CIRCUIT

Check continuity between BCM connector M20 terminal 67 and ground.

Connector	Terminals		Continuity
	M20	67	
			Yes

OK or NG

- OK >> Power supply and ground circuit is OK.
- NG >> Repair or replace harness.

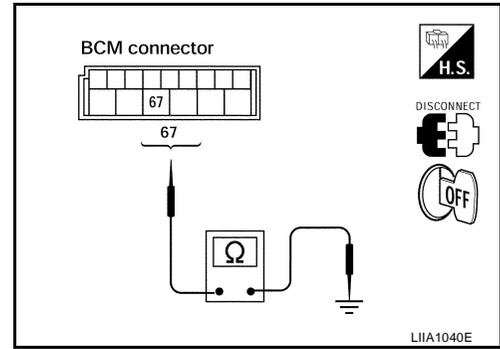

## Door Switch Check

### 1. CHECK DOOR SWITCHES INPUT SIGNAL

With CONSULT-II

Check door switches ("DOOR SW-DR", "DOOR SW-AS", "DOOR SW-RL", "DOOR SW-RR", "BACK DOOR SW") in DATA MONITOR mode with CONSULT-II. Refer to [BL-26, "DATA MONITOR"](#).

- When doors are open:

**DOOR SW-DR :ON**  
**DOOR SW-AS :ON**  
**DOOR SW-RL :ON**  
**DOOR SW-RR :ON**  
**BACK DOOR SW :ON**

- When doors are closed:

**DOOR SW-DR :OFF**  
**DOOR SW-AS :OFF**  
**DOOR SW-RL :OFF**  
**DOOR SW-RR :OFF**  
**BACK DOOR SW :OFF**


DATA MONITOR	
MONITOR	
DOOR SW - DR	OFF
DOOR SW - AS	OFF
DOOR SW - RR	OFF
DOOR SW - RL	OFF
BACK DOOR SW	OFF

LIA0665E

Without CONSULT-II

Check voltage between BCM connector M18 or M19 terminals 12, 13, 43, 47, 48 and ground.

Connector	Item	Terminals		Condition	Voltage (V) (Approx.)
		(+)	(-)		
M19	Back door switch	43	Ground	Open ↓ Closed	0 ↓ Battery voltage
	Front door switch LH	47			
	Rear door switch LH	48			
M18	Front door switch RH	12			
	Rear door switch RH	13			

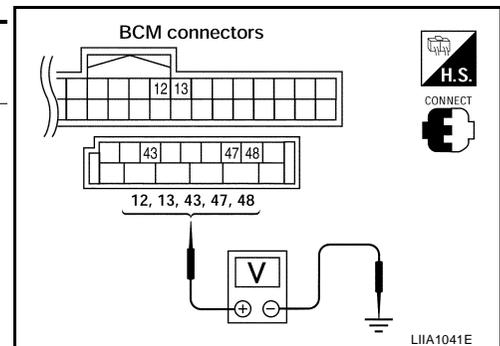

OK or NG

- OK >> Door switch circuit is OK.
- NG >> GO TO 2.

# POWER DOOR LOCK SYSTEM

## 2. CHECK DOOR SWITCH CIRCUIT

- Turn ignition switch OFF.
- Disconnect door switch and BCM.
- Check continuity between door switch connector (B) B8 (Front LH), B108 (Front RH), B18 (Rear LH), B116 (Rear RH) terminal 2 or (D) D502 (Back without power back door) terminal 3 or (C) D503 (Back with power back door) terminal 7 and BCM connector (A) M18, M19 terminals 12, 13, 43, 47 and 48.


**2 - 47 :Continuity should exist**  
**2 - 12 :Continuity should exist**  
**2 - 48 :Continuity should exist**  
**2 - 13 :Continuity should exist**  
**3 - 43 :Continuity should exist**  
**7 - 43 :Continuity should exist**

- Check continuity between door switch connector (B) B8 (Front LH), B108 (Front RH), B18 (Rear LH), B116 (Rear RH) terminal 2 or (D) D502 (Back without power back door) terminal 3 or (C) D503 (Back with power back door) terminal 7 and ground.

**2 - Ground :Continuity should not exist**  
**3 - Ground :Continuity should not exist**  
**7 - Ground :Continuity should not exist**

### OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace harness.

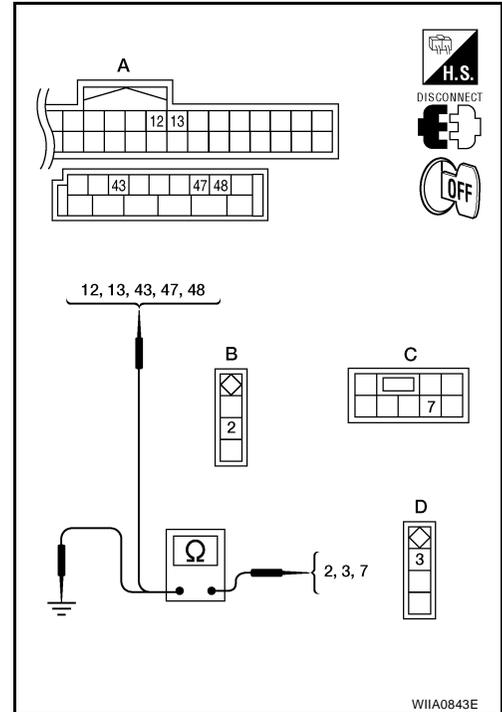


## 3. CHECK DOOR SWITCHES

- Disconnect door switch harness.
- Check continuity between door switch connector terminals.

Switch	Terminals	Condition	Continuity
Door switch (front and rear)	2 - Ground	Open	Yes
		Closed	No
Back door switch (without power back door)	3 - Ground	Open	Yes
		Closed	No
Back door switch (with power back door)	7 - Ground	Open	Yes
		Closed	No

### OK or NG

- OK >> Door switch circuit is OK.  
 NG >> (Front and rear doors) Replace door switch.  
 NG >> (Back door) GO TO 4.

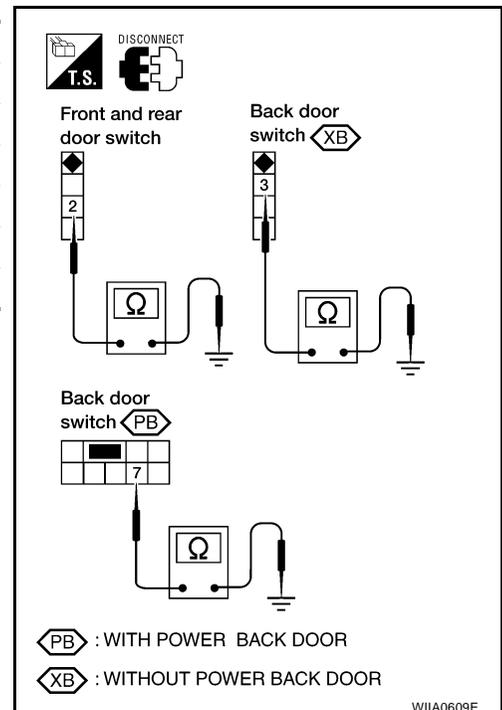

# POWER DOOR LOCK SYSTEM


## 4. CHECK BACK DOOR SWITCH CIRCUIT

- Check continuity between door switch connector terminal and ground.

Connector	Terminals	Continuity
A: Back door switch (without power back door)	1 – Ground	Yes
B: Back door switch (with power back door)	8 – Ground	Yes

OK or NG

- OK >> Replace back door switch.
- NG >> Repair or replace harness.

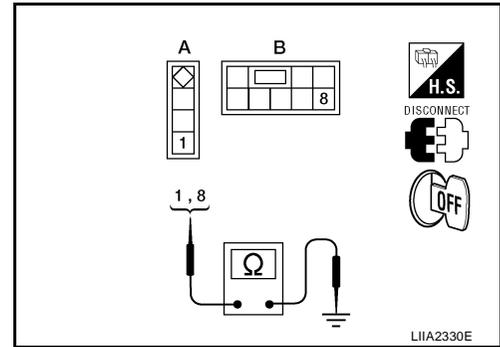

EIS007YS


## Key Switch (Insert) Check

### 1. CHECK KEY SWITCH INPUT SIGNAL

With CONSULT-II

Check key switch "KEY ON SW" in DATA MONITOR mode with CONSULT-II. Refer to [BL-26, "DATA MONITOR"](#).

- When key is inserted to ignition key cylinder:  
**KEY ON SW : ON**
- When key is removed from ignition key cylinder:  
**KEY ON SW : OFF**

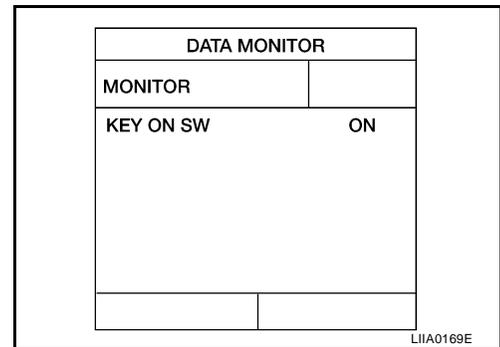


Without CONSULT-II

Check voltage between BCM connector M18 terminal 37 and ground.

Connector	Terminal		Condition	Voltage (V)
	(+)	(-)		
M18	37	Ground	Key is inserted.	Battery voltage
			Key is removed.	0

OK or NG

- OK >> Key switch (insert) circuit is OK.
- NG >> GO TO 2.

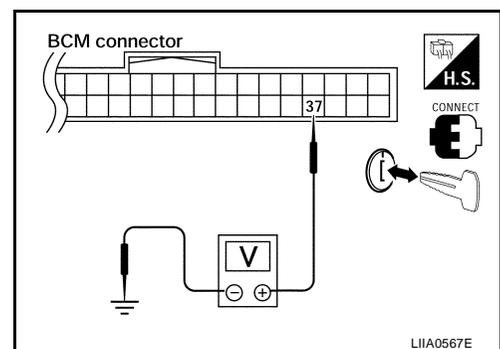

# POWER DOOR LOCK SYSTEM


## 2. CHECK KEY SWITCH (INSERT)

1. Turn ignition switch OFF.
2. Disconnect key switch and key lock solenoid.
3. Check continuity between key switch and key lock solenoid terminals 3, 4.

Terminals	Condition	Continuity
3 - 4	Key is inserted.	Yes
	Key is removed.	No

OK or NG

- OK >> Repair or replace harness.
- NG >> Replace key switch.

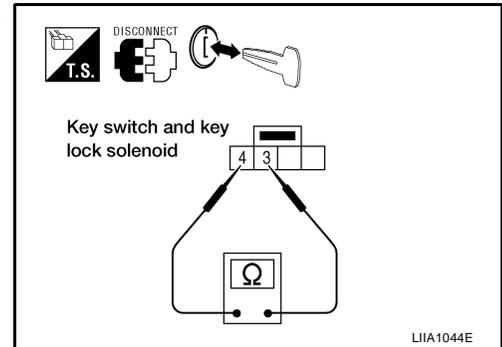

LIA1044E

EIS007YT


## Door Lock/Unlock Switch Check

### 1. CHECK DOOR LOCK/UNLOCK SWITCH INPUT SIGNAL

With CONSULT-II

Check door lock/unlock switch ("CDL LOCK SW", "CDL UNLOCK SW") in DATA MONITOR mode in CONSULT-II. Refer to [BL-26, "DATA MONITOR"](#).


- When door lock/unlock switch is turned to LOCK:  
**CDL LOCK SW :ON**
- When door lock/unlock switch is turned to UNLOCK:  
**CDL UNLOCK SW :ON**

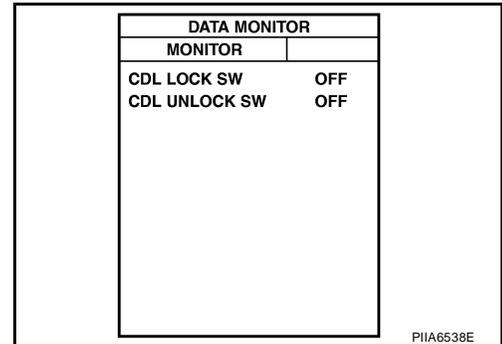

Without CONSULT-II

1. Remove key from ignition key cylinder.
2. Check the signal between BCM connector M18 terminal 22 and ground with oscilloscope when door lock/unlock switch is turned to LOCK or UNLOCK.
3. Make sure the signals which are shown in the figure below can be detected during 10 seconds just after the door lock/unlock switch is turned to LOCK or UNLOCK.

Connector	Terminal		Voltage (V)
	(+)	(-)	
M18	22	Ground	<p>PIIA1297E</p>

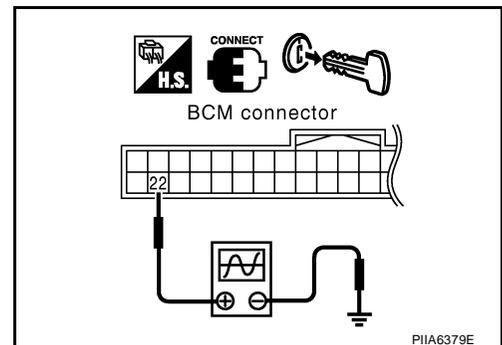

PIIA6379E

OK or NG

- OK >> Door lock and unlock switch circuit is OK.
- NG >> GO TO 2.

# POWER DOOR LOCK SYSTEM

## 2. CHECK BCM OUTPUT SIGNAL


Check ("POWER WINDOW DOWN") in ACTIVE TEST mode for "MULTI REMOTE ENT" with CONSULT-II. Refer to [BL-51, "Active Test"](#) .

**When "ACTIVE TEST" is performed, are the front windows lowered?**

OK or NG

OK >> GO TO 3.


NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#) .

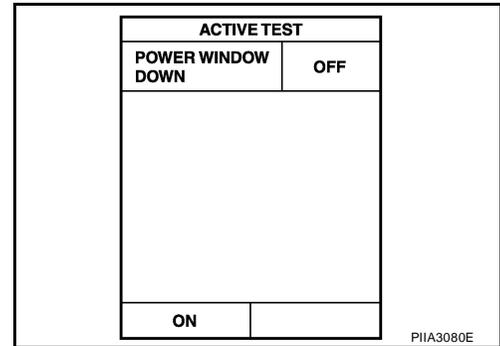

## 3. CHECK DOOR LOCK/UNLOCK SWITCH GROUND HARNESS

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch or power window and door LOCK/UNLOCK switch RH
3. Check continuity between main power window and door lock/unlock switch connector D8 terminal 17 and ground.

**17 - Ground : Continuity should exist.**

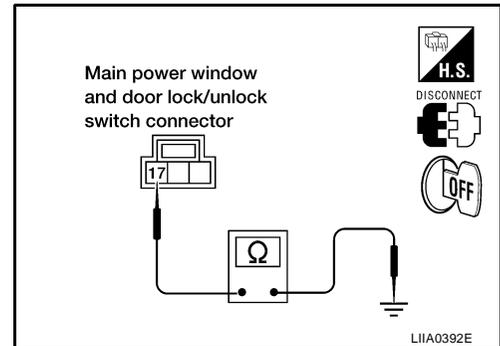


4. Check continuity between power window and door lock/unlock switch RH connector D105 terminal 11 and ground

**11 - Ground : Continuity should exist.**

OK or NG

OK >> GO TO 4.

NG >> Repair or replace harness.

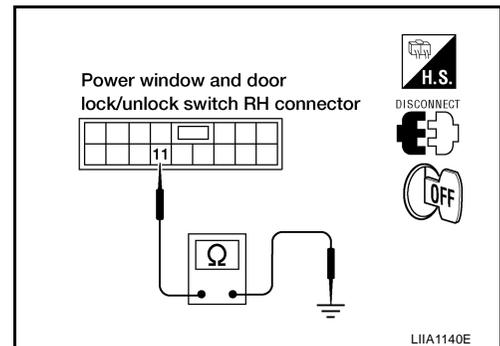


# POWER DOOR LOCK SYSTEM

## 4. CHECK POWER WINDOW SERIAL LINK CIRCUIT

1. Disconnect BCM.
2. Check continuity between BCM connector M18 terminal 22 and main power window and door lock/unlock switch connector D7 terminal 14.

**22 - 14** : Continuity should exist.

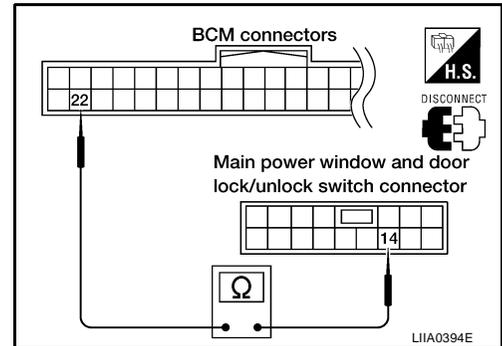


3. Check continuity between BCM connector M18 terminal 22 and power window and door lock/unlock switch RH connector D105 terminal 16.

**22 - 16** : Continuity should exist.

OK or NG

- OK >> Replace main power window and door lock/unlock switch or power window and door lock/unlock switch RH.
- NG >> Repair or replace harness.

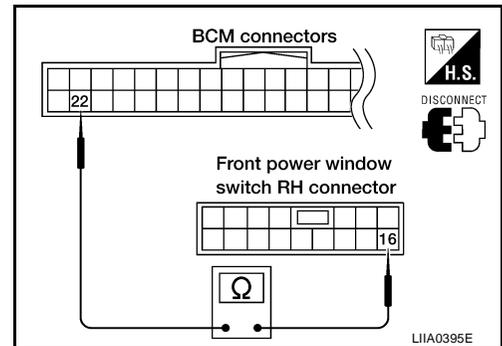


## Front Door Lock Assembly LH (Actuator) Check

### 1. CHECK DOOR LOCK ACTUATOR SIGNAL

1. Turn ignition switch OFF.
2. Check voltage between BCM connector M20 terminals 59, 65 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
M20	59	Ground	Driver door lock/unlock switch is turned to UNLOCK	0 → Battery voltage
	65		Driver door lock/unlock switch is turned to LOCK	0 → Battery voltage

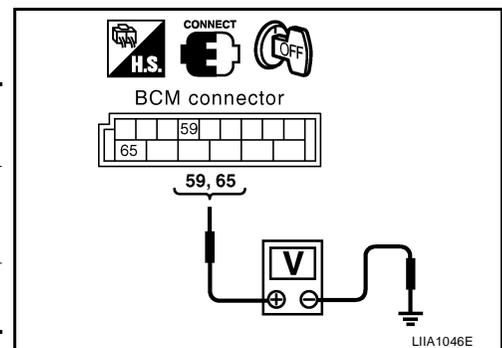

OK or NG

- OK >> GO TO 2.
- NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#) .

# POWER DOOR LOCK SYSTEM


## 2. CHECK DOOR LOCK ACTUATOR HARNESS

1. Disconnect BCM and front door lock assembly LH (actuator).
2. Check continuity between BCM connector M20 terminals 59, 65 and front door lock assembly LH (actuator) connector D14 terminals 2, 3.

Connector	Terminals	Connector	Terminals	Continuity
M20	59	D14	2	Yes
	65		3	Yes

3. Check continuity between BCM connector M20 terminals 59, 65 and ground.

Connector	Terminals	Continuity
M20	59	No
	65	No

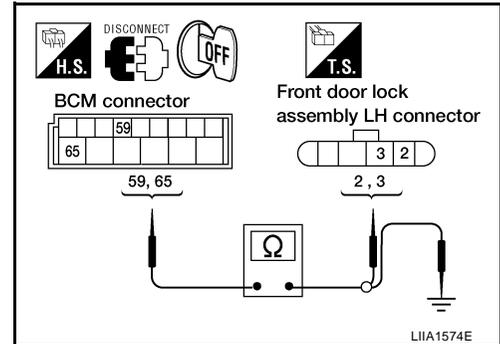

### OK or NG

- OK >> Replace front door lock assembly LH (actuator).
- NG >> Repair or replace harness.

# POWER DOOR LOCK SYSTEM


EIS007YV

## Front Door Lock Actuator RH Check

### 1. CHECK FRONT DOOR LOCK ACTUATOR RH SIGNAL

1. Turn ignition switch OFF.
2. Check voltage between BCM connector M20 terminals 65, 66 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
M20	65	Ground	Door lock/unlock switch is turned to LOCK	0 → Battery voltage for 300 ms
	66		Door lock/unlock switch is turned to UNLOCK	0 → Battery voltage for 300 ms

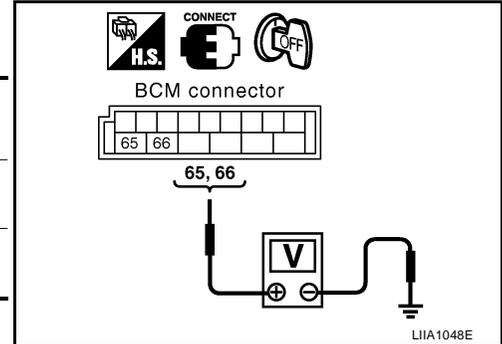

#### OK or NG

- OK >> GO TO 2.  
 NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#).


### 2. CHECK DOOR LOCK ACTUATOR HARNESS

1. Disconnect BCM and front door lock actuator RH.
2. Check continuity between BCM connector M20 terminals 65, 66 and front door lock actuator RH D114 terminals 2, 3.

Terminal	Terminal	Continuity
65	3	Yes
66	2	Yes

3. Check continuity between BCM connector M19 terminals 65, 66 and ground.

Terminals	Continuity
65	No
66	No

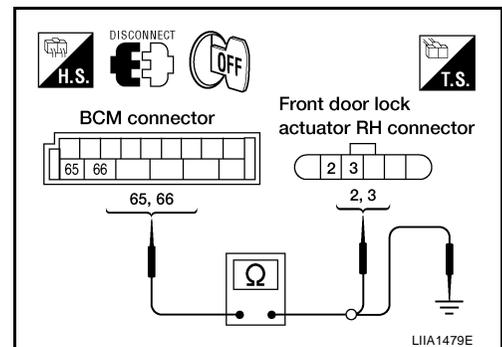

#### OK or NG

- OK >> Replace front door lock actuator RH. Refer to [BL-126, "FRONT DOOR LOCK"](#).  
 NG >> Repair or replace harness.

# POWER DOOR LOCK SYSTEM


## Rear Door Lock Actuator RH/LH/Back (Without Power Back Door) Check

EIS007YW

### 1. CHECK DOOR LOCK ACTUATOR SIGNAL

1. Turn ignition switch OFF.
2. Check voltage between BCM connector M20 terminals 65, 66 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
M20	65	Ground	Door lock/unlock switch is turned to LOCK	0 → Battery voltage for 300 ms
	66		Door lock/unlock switch is turned to UNLOCK	0 → Battery voltage for 300 ms

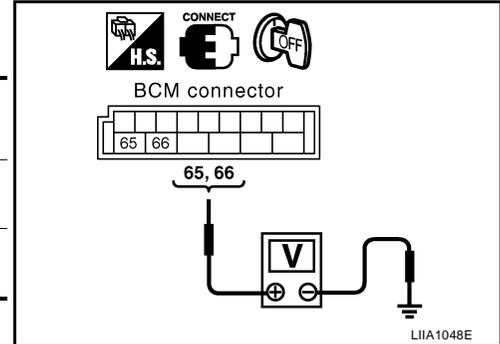

#### OK or NG

- OK >> GO TO 2.  
 NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#).


### 2. CHECK DOOR LOCK ACTUATOR HARNESS

1. Disconnect BCM and each door lock actuator.
2. Check continuity between BCM connector M20 terminals 65, 66 and rear door lock actuator RH/LH connectors terminals 2, 3 or back door lock actuator connector (without power back door) terminals 2, 4.

Terminals		Continuity
65	2, 3	Yes
66	2, 4	Yes

3. Check continuity between BCM connector M20 terminals 65, 66 and ground.

Terminals		Continuity
65	Ground	No
66		No

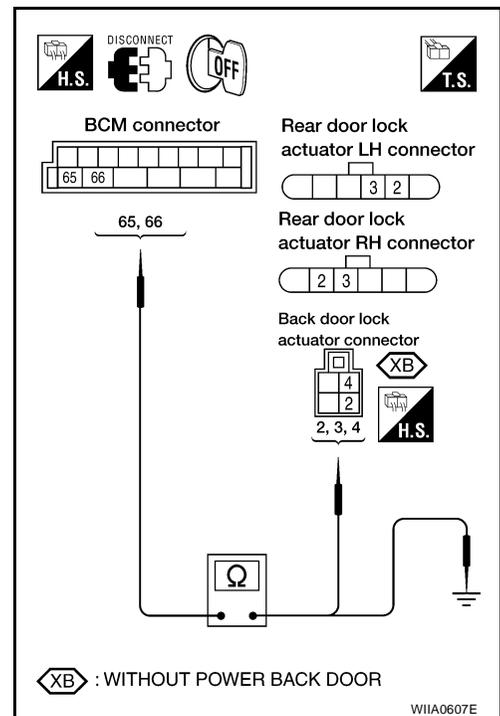

#### OK or NG

- OK >> Replace door lock actuator.  
 NG >> Repair or replace harness.

# POWER DOOR LOCK SYSTEM

## Front Door Lock Assembly LH (Key Cylinder Switch) Check

EIS007YX

### 1. CHECK DOOR KEY CYLINDER SWITCH LH

☑ With CONSULT-II


Check front door lock assembly LH (key cylinder switch) ("KEY CYL LK-SW") and ("KEY CYL UN-SW") in DATA MONITOR mode with CONSULT-II. Refer to [BL-26, "DATA MONITOR"](#).

- When key inserted in left front key cylinder is turned to LOCK:

**KEY CYL LK-SW : ON**

- When key inserted in left front key cylinder is turned to UNLOCK:


**KEY CYL UN-SW : ON**

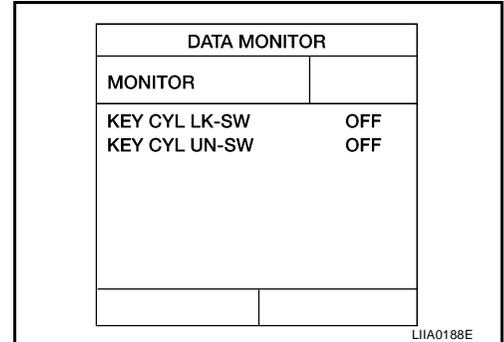

☒ Without CONSULT-II

Check voltage between main power window and door lock/unlock switch connector D7 terminals 4, 6 and ground.

Connector	Terminals		Condition of left front key cylinder	Voltage (V) (Approx.)
	(+)	(-)		
D7	4	Ground	Neutral/Unlock	5
			Lock	0
	6		Neutral/Lock	5
			Unlock	0

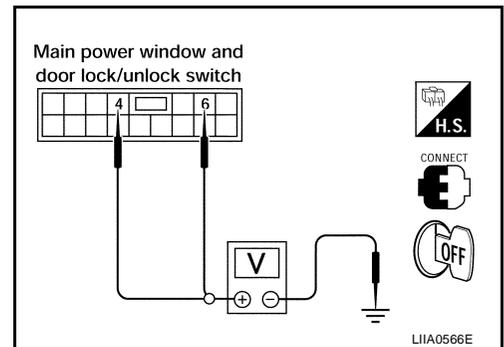


OK or NG

- OK >> Key cylinder switch signal is OK.
- NG >> GO TO 2.

### 2. CHECK DOOR KEY CYLINDER SWITCH LH GROUND HARNESS

Check continuity between front door lock assembly LH (key cylinder switch) connector (A) D14 terminal 5 and body ground.

Connector	Terminals	Continuity
D14	5 - Ground	Yes

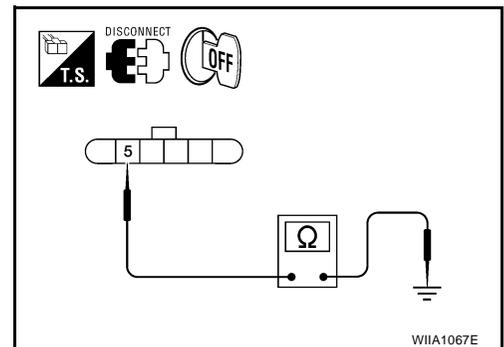

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace harness.

# POWER DOOR LOCK SYSTEM

## 3. CHECK DOOR KEY CYLINDER SWITCH LH


Check continuity between front door lock assembly LH (key cylinder switch) terminals.

Terminals	Condition	Continuity
1 – 5	Key is turned to UNLOCK or neutral.	No
	Key is turned to LOCK.	Yes
5 – 6	Key is turned to LOCK or neutral.	No
	Key is turned to UNLOCK.	Yes

OK or NG

OK >> GO TO 4.


NG >> Replace front door lock assembly LH (key cylinder switch). Refer to [BL-126, "Removal and Installation"](#).

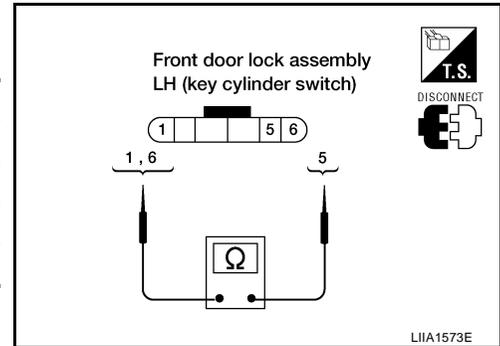

## 4. CHECK DOOR KEY CYLINDER HARNESS

Check continuity between main power window and door lock/unlock switch connector (A) D7 terminals 4, 6 and front door lock assembly LH (key cylinder switch) connector (B) D14 terminals 1, 6 and body ground.

Connector	Terminals	Connector	Terminals	Continuity
A: Main power window and door lock/unlock switch	4	B: Front door lock assembly LH (key cylinder switch)	1	Yes
	6		6	Yes
	4, 6	Ground	No	

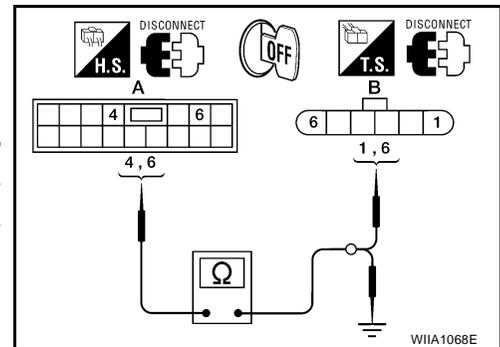

OK or NG

OK >> Replace main power window and door lock/unlock switch.

NG >> Repair or replace harness.


# REMOTE KEYLESS ENTRY SYSTEM

## REMOTE KEYLESS ENTRY SYSTEM

PF2:28596

### Component Parts and Harness Connector Location

EIS004HR

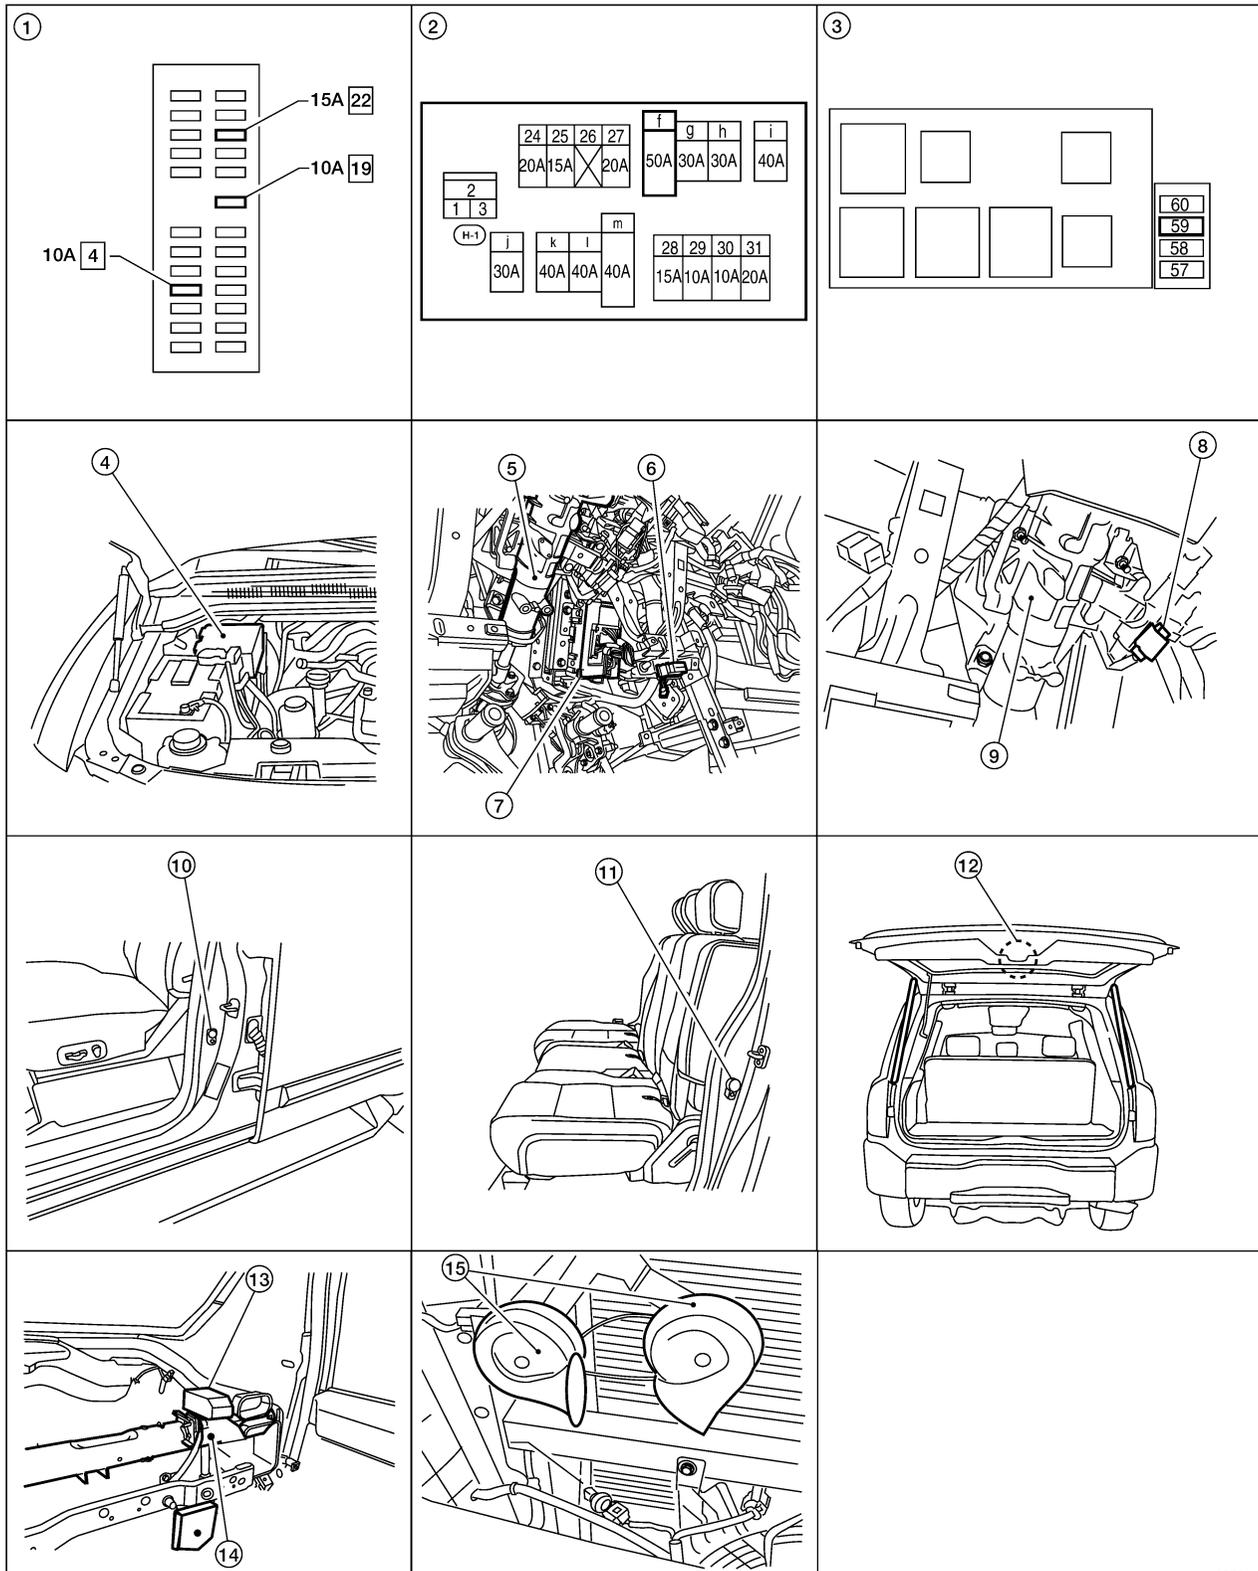

1. Fuse block (J/B)
4. IPDM E/R E119, E122, E123

2. Fuse and fusible link box
5. Steering column  
(view with instrument panel LH removed)

3. Fuse and relay box
6. Data link connector M22

W11A0873E

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

BL

# REMOTE KEYLESS ENTRY SYSTEM

- 
- |   |  |   |
|---|--|---|
| 7. BCM M18, M19, M20  | 8. Key switch and key lock solenoid M27<br>(view with instrument panel LH removed) | 9. Steering column assembly   |
| 10. Front door switch<br>LH B8<br>RH B108   | 11. Rear door switch<br>LH B18<br>RH B116  | 12. Back door switch (without power back door) D502<br>Back door latch (door ajar switch) (with power back door) D503<br>Back door lock actuator D708 |
| 13. Remote keyless entry receiver M120<br>(view with instrument panel RH removed) | 14. Steering member  | 15. Horn E3<br>(view with grille removed)   |

## System Description

### INPUTS

EIS004HS

Power is supplied at all times

- to BCM terminal 70
- through 50A fusible link (letter f , located in the fuse and fusible link box).
- to BCM terminal 57
- through 10A fuse [No. 22, located in the fuse block (J/B)].

When the key is inserted in key switch and key lock solenoid, power is supplied

- to BCM terminal 37
- through key switch terminals 3 and 4
- through 10A fuse [No. 19, located in the fuse block (J/B)].

When the key switch is in ACC or ON, power is supplied

- to BCM terminal 11
- through 10A fuse [No. 4, located in the fuse block (J/B)].

When the key switch is in ON or START, power is supplied

- to BCM terminal 38
- through 10A fuse (No. 59, located in the fuse and relay box).

When the front door switch LH is ON (door is OPEN), ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2
- through front door switch LH case ground.

When the front door switch RH is ON (door is OPEN), ground is supplied

- to BCM terminal 12
- through front door switch RH terminal 2
- through front door switch RH case ground.

When the rear door switch LH is ON (door is OPEN), ground is supplied

- to BCM terminal 48
- through rear door switch LH terminal 2
- through rear door switch LH case ground.

When the rear door switch RH is ON (door is OPEN), ground is supplied

- to BCM terminal 13
- through rear door switch RH terminal 2
- through rear door switch RH case ground.

With power back door: When the back door latch (door ajar switch) is ON (door is open), ground is supplied

- to BCM terminal 43
- through back door latch terminal 7
- through back door latch terminal 8
- through grounds B7 and B19.

Without power back door: When the back door switch is ON (door is open), ground is supplied

- to BCM terminal 43

# REMOTE KEYLESS ENTRY SYSTEM

- through back door switch terminal 3
- through back door switch terminal 1
- through grounds B7 and B19.

Keyfob signal is inputted to BCM from the remote keyless entry receiver.  
The remote keyless entry system controls operation of the

- power door lock
- back door opener (with power back door)
- interior lamp and step lamps
- panic alarm
- hazard and horn reminder
- keyless power window down (open)
- auto door lock operation

## OPERATED PROCEDURE

- When the keyfob is operated, the signal from the keyfob is sent and the remote keyless entry receiver receives the signal and sends it to the BCM. The BCM only locks/unlocks the doors if the ID number matches. (Remote control entry functions)
- Using the keyfob, the transmitter sends radio waves to the remote keyless entry receiver, which then sends the received waves to the BCM. Only if the ID number matches does the BCM lock/unlock the doors. (Remote control door function)
- Unless the key is inserted into the ignition key cylinder or one of the doors is opened within 1 minute after the UNLOCK switch on the keyfob is pressed, all the doors are automatically locked. (Auto lock function)
- When a door is locked or unlocked, the vehicle turn signal lamps flash and the horn sounds to verify operation. (Active check function)
- When the key is in the ignition key cylinder (when the key switch is ON) and one of the doors is open, the door lock function does not work even when the door lock is operated with the keyfob.
- Keyfob ID set up is available.
- If a keyfob is lost, a new keyfob can be set up. A maximum of 5 IDs can be set up simultaneously.

## Remote Control Entry Functions

Operation Description

- When a button on the keyfob is operated, the signal is sent from the keyfob and received by the remote keyless entry receiver.
- The received signal is sent to the BCM and compared with the registered ID number.
- If the ID number matches, the BCM sends the lock/unlock signal to each door lock actuator.
- When the door lock actuators receive this signal, each operates to lock/unlock its door.
- BCM locks all doors with input of LOCK signal from keyfob.
- When an UNLOCK signal is sent from keyfob once, driver's door will be unlocked.
- Then, if an UNLOCK signal is sent from keyfob again within 5 seconds, all other doors will be unlocked.

Remote control entry operation conditions

Keyfob operation	Operation condition
Door lock operation (locking)	<ul style="list-style-type: none"> <li>● With key removed (key switch: OFF)</li> <li>● Closing all doors (door switch: OFF)</li> </ul>
Door lock operation (unlocking)	With key removed (key switch: OFF)

## Auto Lock Function

Operation Description

- Unless the key is inserted into the ignition key cylinder, one of the doors is opened, or the keyfob is operated within 1 minute after a door lock is unlocked by keyfob operation, all the doors are automatically locked.  
The 1 minute timer count is executed by the BCM and after 1 minute, the BCM sends the lock signal to all doors.  
Lock operations are the same as for the remote control entry function.

# REMOTE KEYLESS ENTRY SYSTEM

## Remote Control Automatic Back Door Function (Vehicles With Automatic Back Door System)

Switching from all closed to all open

- When a button on the keyfob is operated, the signal is sent from the keyfob and received by the remote keyless entry receiver.
- The received signal is sent to the BCM and compared with the registered ID number.
- If the ID number matches, the BCM uses power window serial link communication to send the back door open signal to the back door control unit
- When the back door control unit receives the back door open signal for 0.5 continuous seconds, if the remote control automatic back door operation enable conditions are met, the warning chime is sounded and the back door unlock signal is sent to the back door latch using communication.
- When the back door latch receives the back door unlock signal, it operates the release actuator and releases to back door latch.
- The back door control unit operates the back door motor to open the back door. (At this time, speed control, input reverse, and overload reverse control are executed.)
- When the back door is opened to the fully open position, the full-open position is detected with the rotation sensor, the back door motor is stopped.
- The door held by the back door stays at the full open position.

Full open → full closed operation

- When a button of the keyfob is operated, the signal is sent from the keyfob and received by the remote keyless entry receiver.
- The received signal is sent to the BCM and compared with the registered ID number.
- If the ID number matches, the BCM uses communication to send the back door close request signal to the back door control unit.
- When the back door control unit receives the back door close request signal for 0.5 continuous seconds, if the remote control automatic back door operation enable conditions are met, the warning chime is sounded and the back door motor begins closing the back door.
- The back door control unit operates the magnetic clutch and the back door motor to close the back door. (At this time, the back door control unit executes speed control, input reverse, and overload reverse control.)
- When the back door comes to the half-latch state, the back door latch detects the half-latch state through half-latch switch operation. The back door latch latches the back door.

For the automatic back door system operation enable conditions, refer to [BL-93, "AUTOMATIC BACK DOOR SYSTEM"](#).

## Active Check Function

Operation Description

When a door is locked or unlocked by keyfob operation, the vehicle turn signals flash and the horn sounds to verify operation.

- When a button on the keyfob is operated, the signal is sent from the remote controller and received by the keyless remote entry receiver.
- The received signal is sent to the BCM and compared with the registered ID number.
- If the ID number matches, the BCM uses communication to send the turn signal flashing and horn signal to the IPDM E/R.
- The IPDM E/R flashes the turn signal lamps and sounds the horn for each keyfob operation.

## Operating function of hazard and horn reminder

	C mode		S mode	
	Lock	Unlock	Lock	Unlock
Keyfob operation	Lock	Unlock	Lock	Unlock
Hazard warning lamp flash	Twice	Once	Twice	—
Horn sound	Once	—	—	—

## Hazard and Horn Reminder

BCM output to IPDM E/R for horn reminder signal as DATA LINE (CAN-H line and CAN-L line).

The hazard and horn reminder has C mode (horn chirp mode) and S mode (non-horn chirp mode).

# REMOTE KEYLESS ENTRY SYSTEM

## How to change hazard and horn reminder mode

Ⓜ With CONSULT-II

Hazard and horn reminder can be changed using "WORK SUPPORT" mode in "MULTI ANSWER BACK SET".

ⓧ Without CONSULT-II

Refer to Owner's Manual for instructions.

## Interior Lamp Operation

When the following input signals are both supplied:

- all door switches are in the OFF position. (when all the doors are closed);
- interior lamp switch is in DOOR position.

Remote keyless entry system turns on interior lamp and ignition keyhole illumination (for 30 seconds) with input of UNLOCK signal from keyfob.

For detailed description, refer to [LT-136, "ROOM LAMP TIMER OPERATION"](#) .

## Panic Alarm Operation

When key switch is OFF (when ignition key is not inserted in key cylinder), remote keyless entry system turns on and off horn and headlamp intermittently with input of PANIC ALARM signal from keyfob.

The alarm automatically turns off after 25 seconds or when BCM receives any signal from keyfob.

## Keyless Power Window Down (open) Operation

When keyfob unlock switch is turned ON with ignition switch OFF, and the switch is detected to be on continuously for more than 1 second, the driver's door and passenger's door power windows are simultaneously opened.

Power window is operated to open and the operation continues as long as the keyfob unlock switch is pressed.

## CAN Communication System Description

EIS004HT

Refer to [LAN-25, "CAN COMMUNICATION"](#) .

A

B

C

D

E

F

G

H

BL

J

K


L

M

# REMOTE KEYLESS ENTRY SYSTEM

## Schematic

EIS004HU

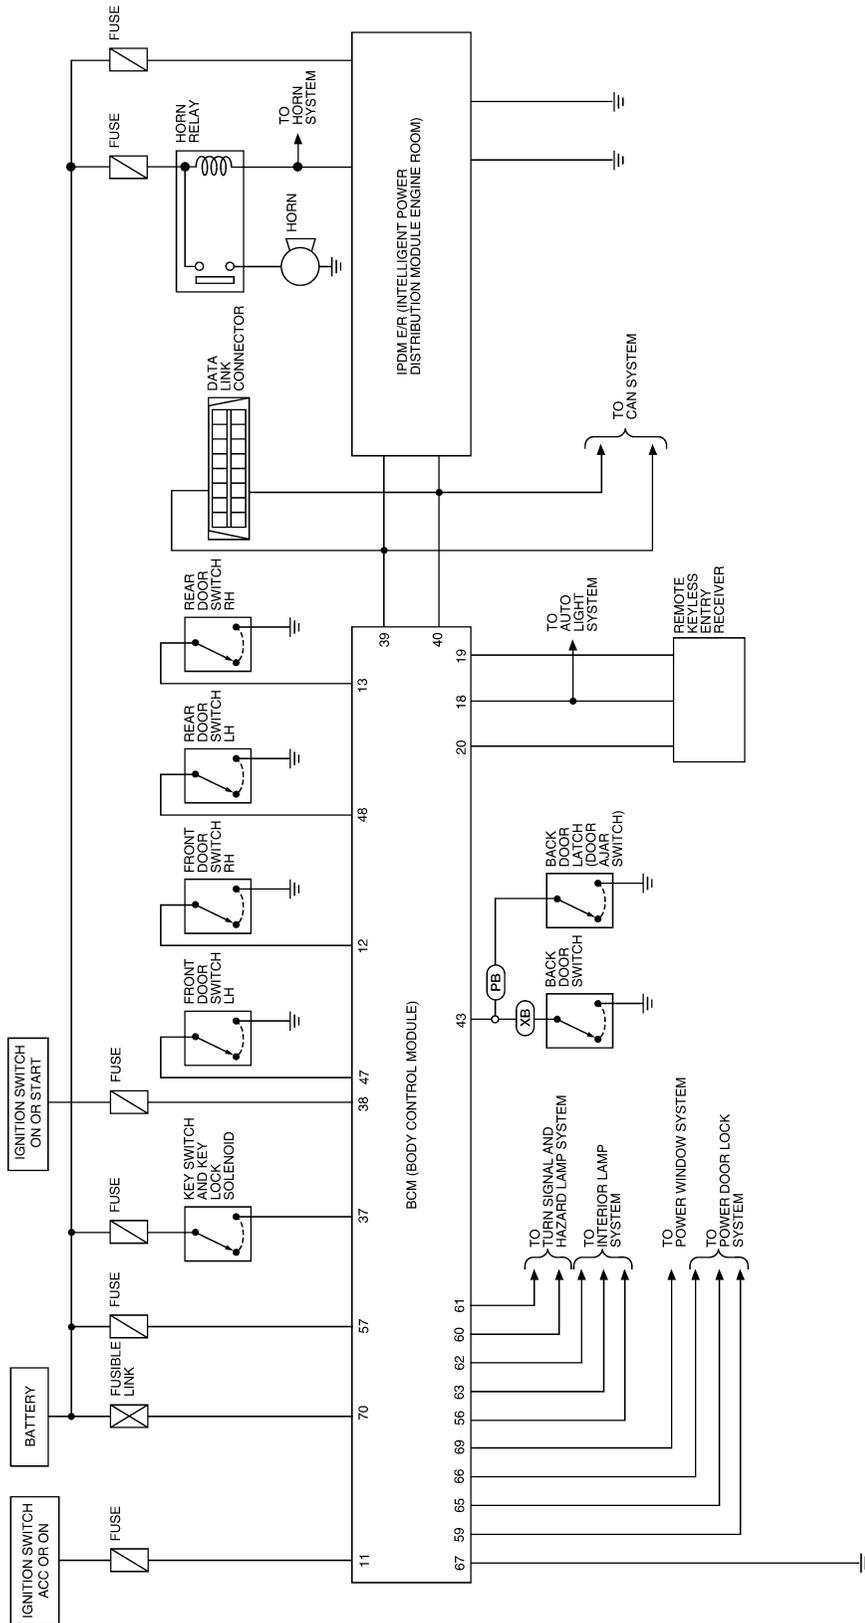

PB : WITH POWER BACK DOOR  
 XB : WITHOUT POWER BACK DOOR





WIWA1225E

# REMOTE KEYLESS ENTRY SYSTEM

## Wiring Diagram — KEYLES —

EIS004HV

BL-KEYLES-01

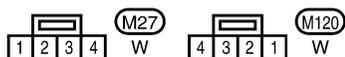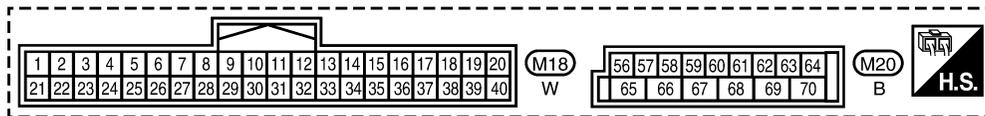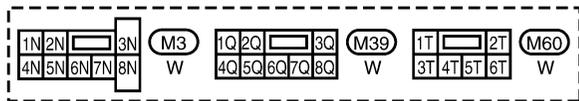
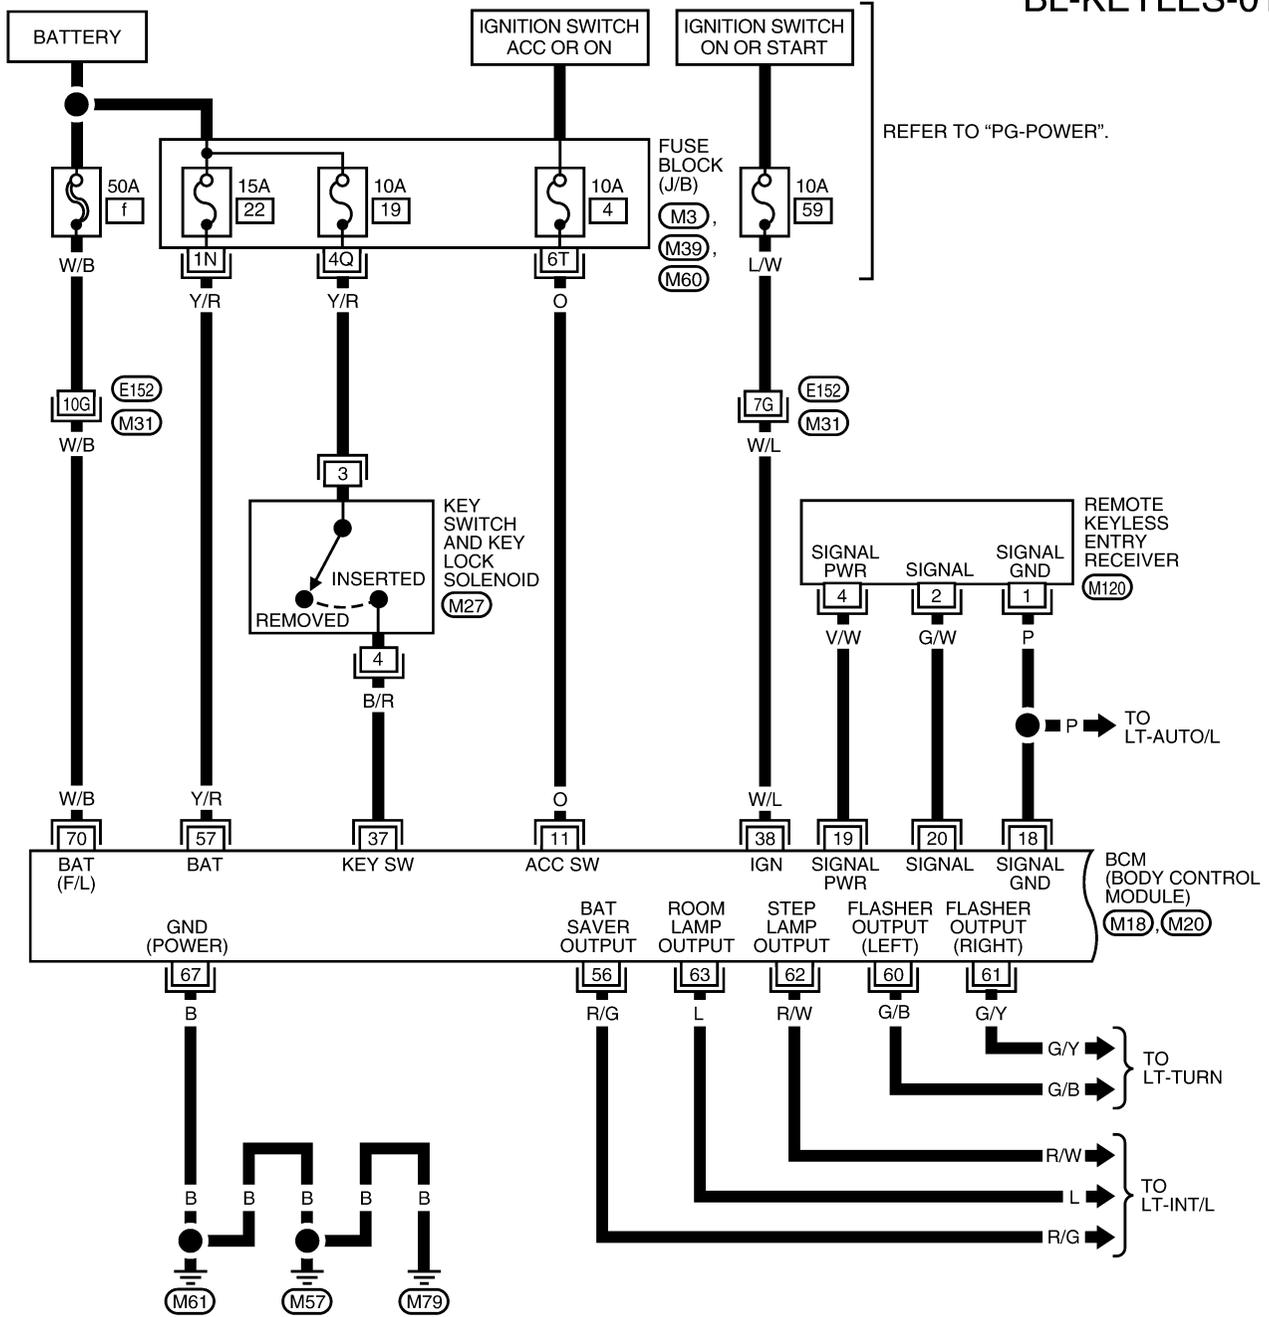


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WIWA1395E

# REMOTE KEYLESS ENTRY SYSTEM

## BL-KEYLES-02

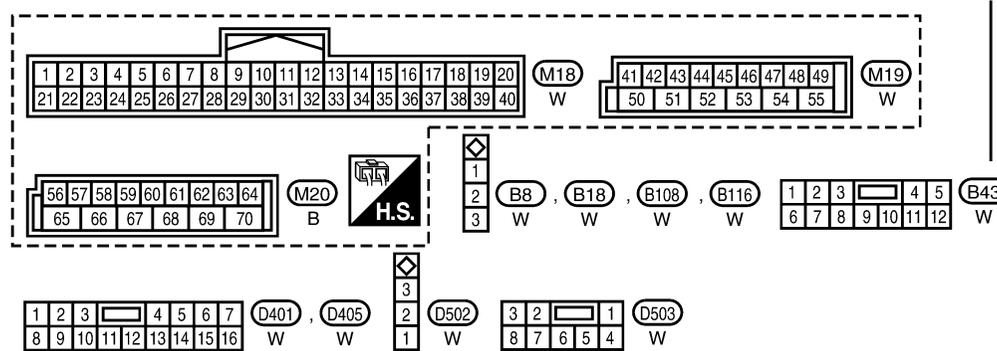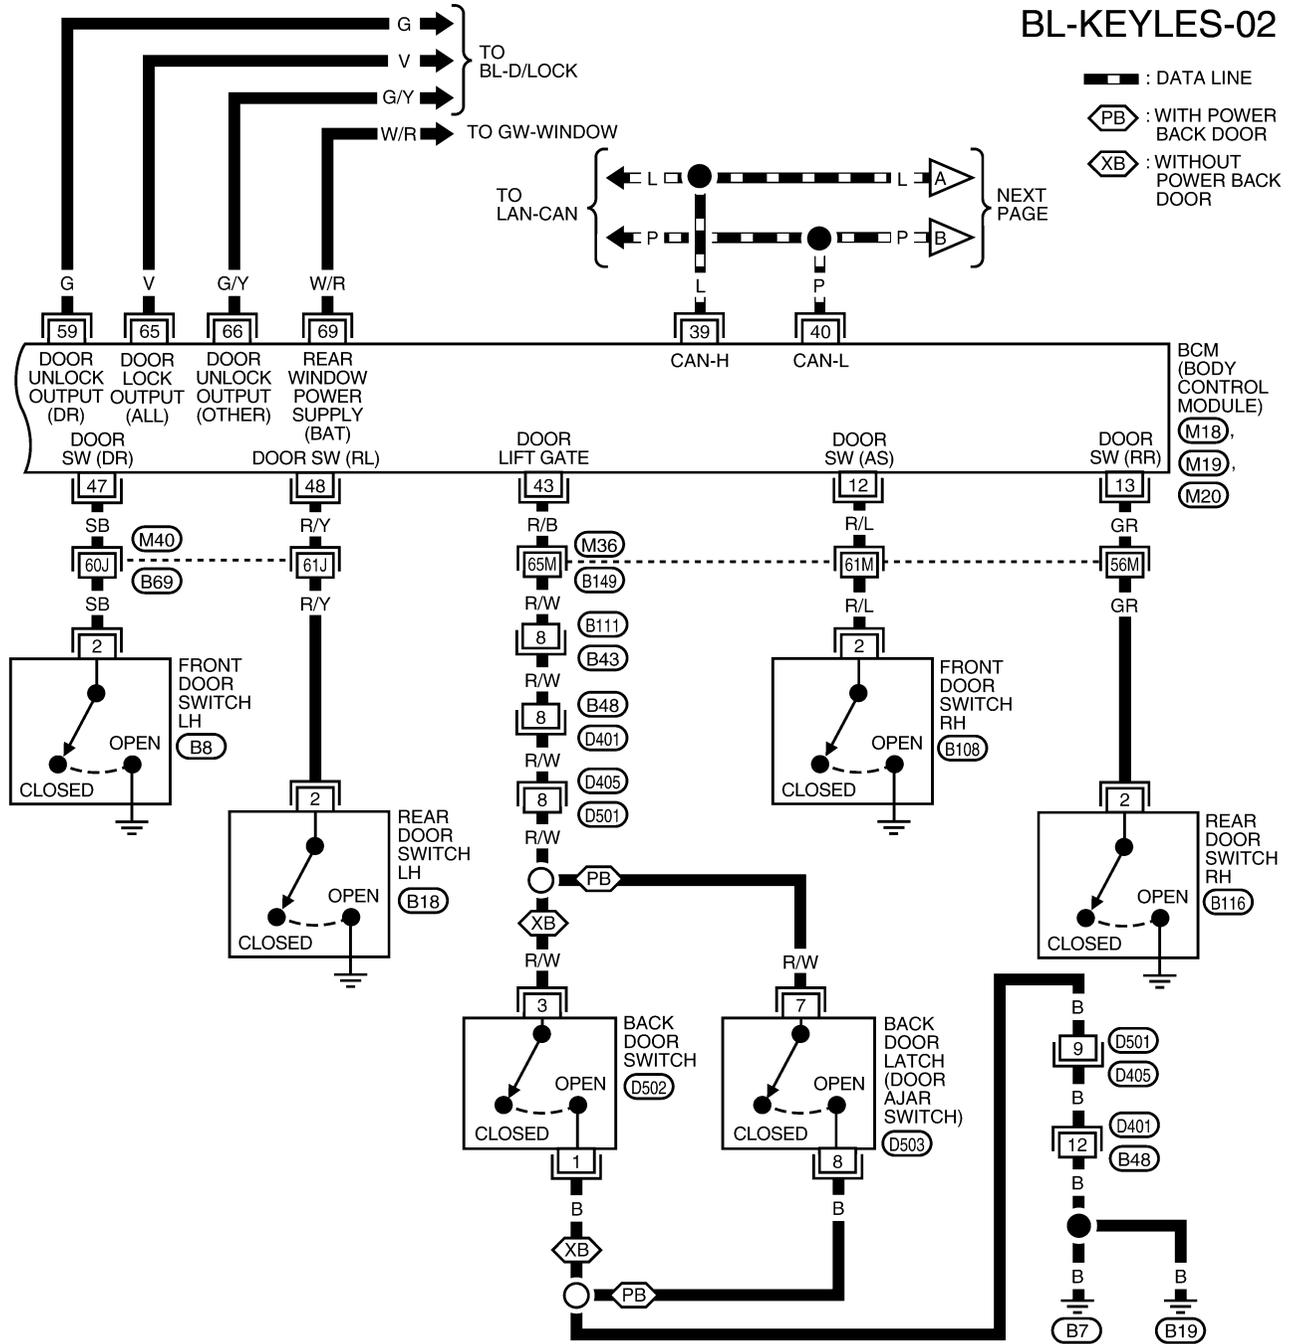


REFER TO THE FOLLOWING.  
 (M36), (M40) - SUPER  
 MULTIPLE JUNCTION (SMJ)


WIWA1526E

# REMOTE KEYLESS ENTRY SYSTEM

BL-KEYLES-03

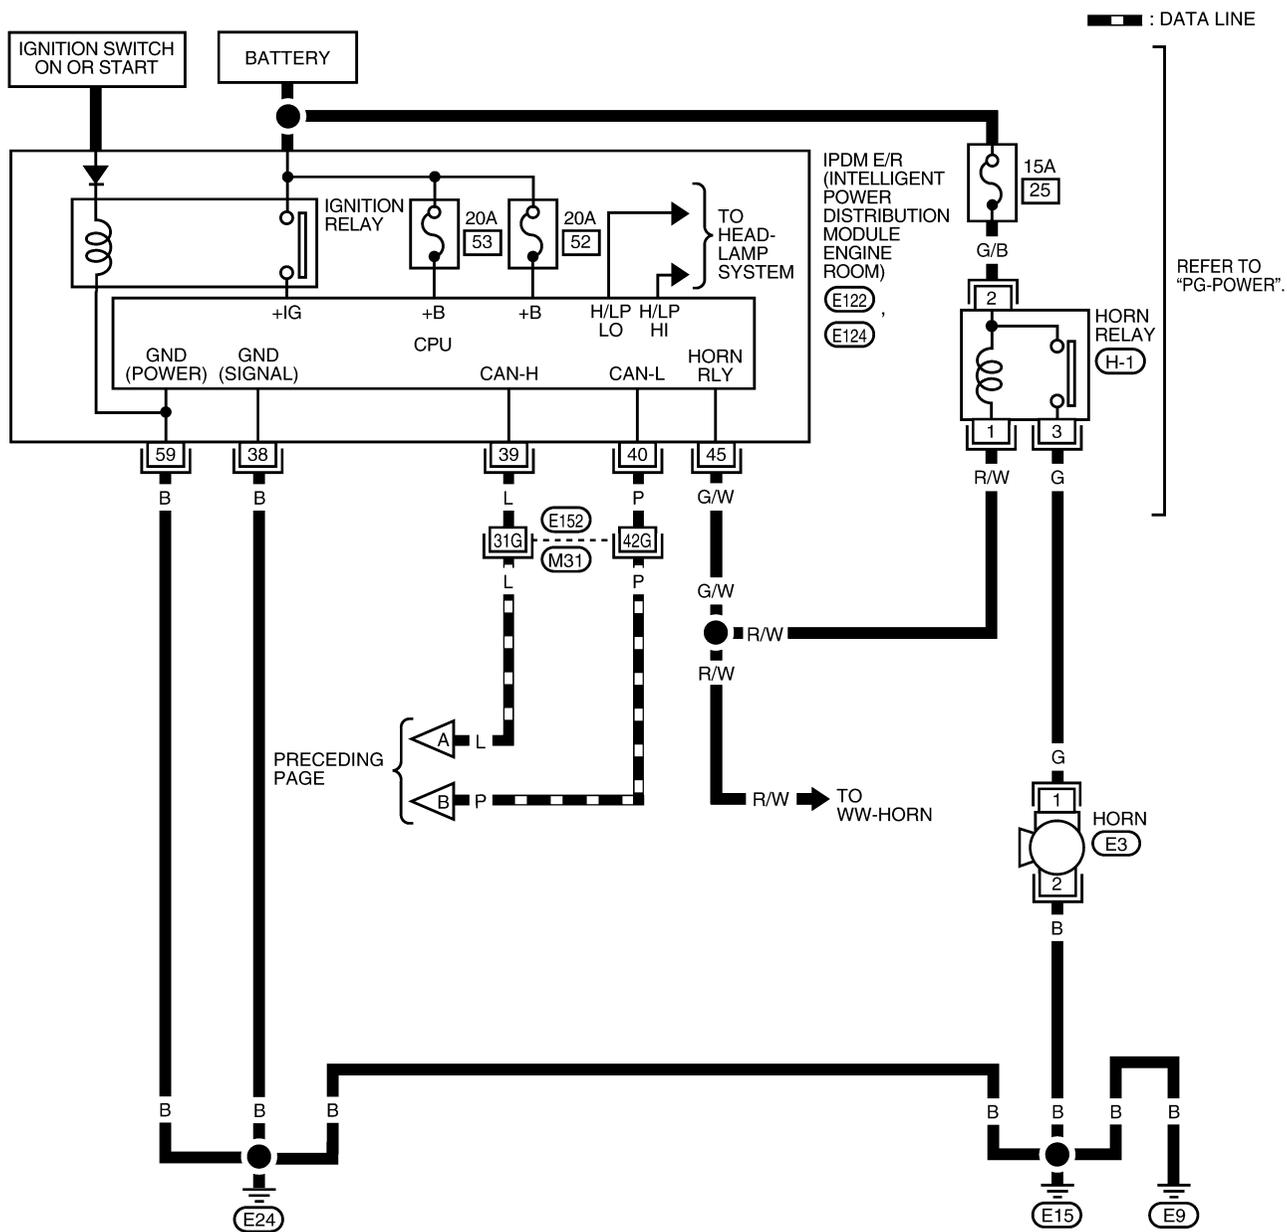

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

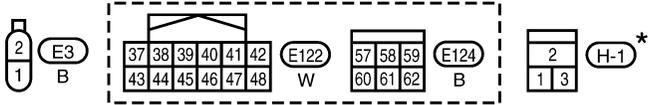

REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)



\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WIWA1396E

# REMOTE KEYLESS ENTRY SYSTEM

## Terminals and Reference Value for BCM

EIS004HW

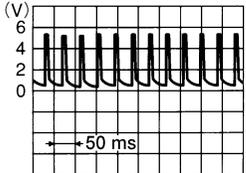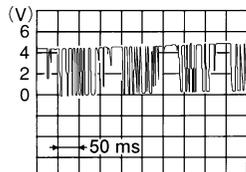Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)
11	O	Ignition switch (ACC)	Ignition switch in ACC	Battery voltage
12	R/L	Front door switch RH	Door close (OFF) → Open (ON)	Battery voltage → 0
13	GR	Rear door switch RH	Door close (OFF) → Open (ON)	Battery voltage → 0
18	P	Remote keyless entry receiver (Ground)	—	0
19	V/W	Remote keyless entry receiver (Power supply)	Ignition switch OFF	 <p style="text-align: right; font-size: small;">LIIA1893E</p>
20	G/W	Remote keyless entry receiver signal (Signal)	Stand-by (keyfob buttons released)	 <p style="text-align: right; font-size: small;">LIIA1894E</p>
			When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 <p style="text-align: right; font-size: small;">LIIA1895E</p>
37	B/R	Key switch	Key inserted in IGN key cylinder → Key removed from IGN key cylinder	Battery voltage → 0
38	W/L	Ignition switch (ON)	Ignition switch ON	Battery voltage
39	L	CAN H	—	—
40	P	CAN L	—	—
43	R/B	Back door switch (without power back door) or back door latch (with power back door)	Door close (OFF) → Open (ON)	Battery voltage → 0
47	SB	Front door switch LH	Door close (OFF) → Open (ON)	Battery voltage → 0
48	R/Y	Rear door switch LH	Door close (OFF) → Open (ON)	Battery voltage → 0
56	R/G	Battery saver (Interior lamp)	Battery saver does operated → Does not operated (ON → OFF)	Battery voltage → 0
57	Y/R	Power source (BAT)	—	Battery voltage
59	G	Driver door lock actuator	Door lock & unlock switch (Neutral → Unlock)	0 → Battery voltage
60	G/B	Turn signal LH	When doors are locked or unlocked using keyfob (OFF → ON) *2	0 → Battery voltage
61	G/Y	Turn signal RH	When doors are locked or unlocked using keyfob (OFF → ON) *2	0 → Battery voltage
62	R/W	Step lamp LH and RH	Step lamp ON	0
			Step lamp OFF	Battery voltage

# REMOTE KEYLESS ENTRY SYSTEM

Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)
63	L	Room lamp	Room lamp ON *1	Battery voltage
			Room Lamp OFF *1	0
65	V	Door lock actuators	Door lock & unlock switch (Neutral → Lock)	0 → Battery voltage
66	G/Y	Passenger and rear doors lock actuator	Door lock & unlock switch (Neutral → Unlock)	0 → Battery voltage
67	B	Ground	—	0
69	W/R	Power window power source	—	Battery voltage
70	W/B	Power source (BAT)	—	Battery voltage

- \*1: when room lamp switch is in "DOOR" position.
- \*2: when hazard reminder is ON.

## Terminals and Reference Value for IPDM E/R

EIS004HX

Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)
38	B	Ground	—	0
39	L	CAN H	—	—
40	P	CAN L	—	—
45	G/W	Horn relay	When doors locks are operated using keyfob (OFF → ON) *	Battery voltage → 0
59	B	Ground	—	0

\*: when horn reminder is ON.

## CONSULT-II Function (BCM)

EIS004HY

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

# REMOTE KEYLESS ENTRY SYSTEM


EIS004HZ

## CONSULT-II Inspection Procedure "MULTI REMOTE ENT"


### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. Turn ignition switch OFF.
2. Connect CONSULT-II and CONSULT-II CONVERTER to the data link connector.

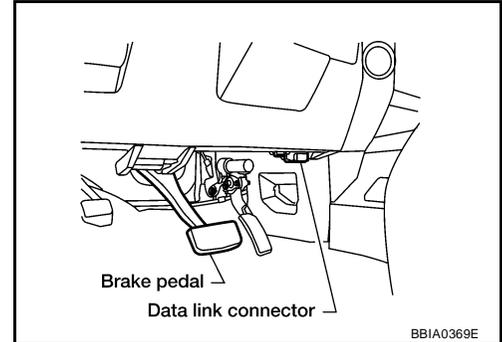


3. Turn ignition switch ON.
4. Touch "START (NISSAN BASED VHCL)".

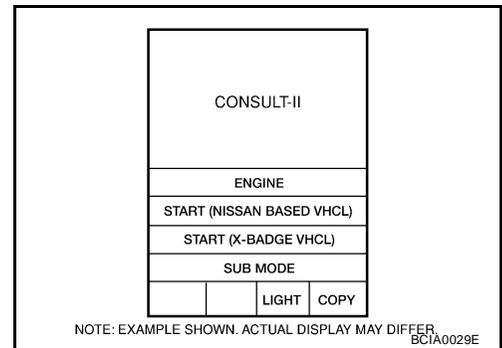

5. Touch "BCM".  
If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

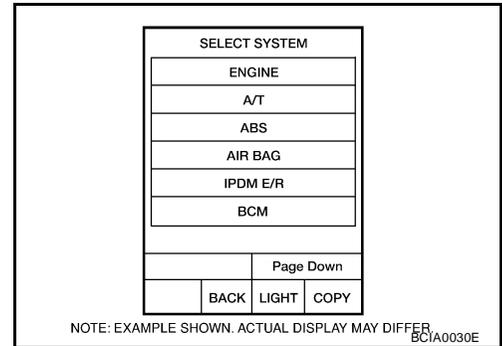


6. Touch "MULTI REMOTE ENT".

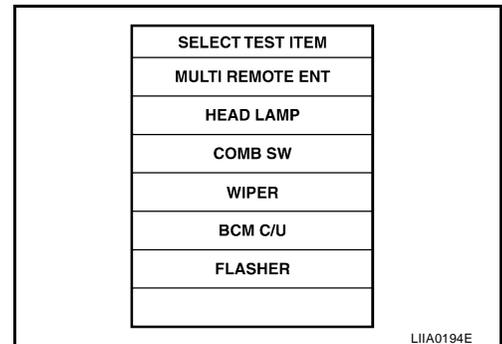

# REMOTE KEYLESS ENTRY SYSTEM

7. Select diagnosis mode.  
“DATA MONITOR”, “ACTIVE TEST” and “WORK SUPPORT” are available.

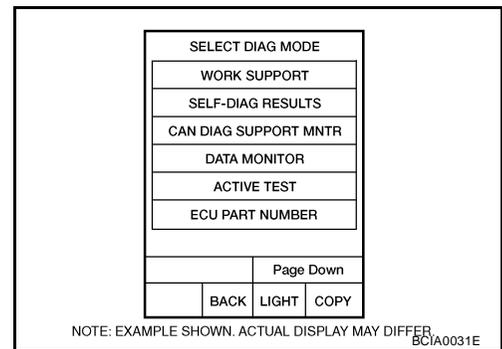

## CONSULT-II Application Items “MULTI REMOTE ENT”

EIS00410

### Data Monitor

Monitored Item	Description
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.
BACK DOOR SW	Indicates [ON/OFF] condition of back door switch.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
ACC ON SW	Indicates [ON/OFF] condition of ignition switch in ACC position.
IGN ON SW	Indicates [ON/OFF] condition of ignition switch in ON position.
KEYLESS PANIC	Indicates [ON/OFF] condition of panic signal from keyfob.
KEYLESS UNLOCK	Indicates [ON/OFF] condition of unlock signal from keyfob.
KEYLESS LOCK	Indicates [ON/OFF] condition of lock signal from keyfob.
KEY CYL LK-SW	Indicates [ON/OFF] condition of lock signal from door key cylinder switch.
KEY CYL UN-SW	Indicates [ON/OFF] condition of unlock signal from door key cylinder switch.
KEYLESS PBD	Indicates [ON/OFF] condition of power back door signal from keyfob.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from lock/unlock switch.
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from lock/unlock switch.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
RKE LCK-UNLCK	Indicates [ON/OFF] condition of lock/unlock signal at the same time from keyfob.
RKE KEEP UNLK	Indicates [ON/OFF] condition of unlock signal from keyfob.

### Active Test

Test Item	Description
FLASHER	This test is able to check right and left hazard reminder operation. The right hazard lamp turns on when “RH” on CONSULT-II screen is touched and the left hazard lamp turns on when “LH” on CONSULT-II screen is touched.
POWER WINDOW DOWN	This test is able to check power window down operation. The windows are lowered when “ON” on CONSULT-II screen is touched.
HORN	This test is able to check panic alarm and horn reminder operations. The alarm activate for 0.5 seconds after “ON” on CONSULT-II screen is touched.
DOOR LOCK	This test is able to check door lock operation. The doors lock and unlock based on the item on CONSULT-II screen touched.
TRUNK/BACK DOOR	This test is able to check back door actuator operation. The back door is opened when “OPEN” on CONSULT-II screen is touched.

# REMOTE KEYLESS ENTRY SYSTEM

## Work Support

Test Item	Description
REMO CONT ID REGIST	Keyfob ID code can be registered.
REMO CONT ID ERASUR	Keyfob ID code can be erased.
REMO CONT ID CONFIR	It can be checked whether keyfob ID code is registered or not in this mode.
HORN CHIRP SET	Horn chirp function mode can be changed in this mode. The function mode will be changed when "CHANG SETT" on CONSULT-II screen is touched.
HAZARD LAMP SET	Hazard lamp function mode can be changed in this mode. The function mode will be changed when "CHANG SETT" on CONSULT-II screen is touched.
MULTI ANSWER BACK SET	Hazard and horn reminder mode can be changed in this mode. The reminder mode will be changed when "CHANG SETT" on CONSULT-II screen is touched.
AUTO LOCK SET	Auto locking function mode can be changed in this mode. The function mode will be changed when "CHANG SETT" on CONSULT-II screen is touched.
PANIC ALRM SET	Panic alarm operation mode can be changed in this mode. The operation mode will be changed when "CHANG SETT" on CONSULT-II screen is touched.
TRUNK OPEN SET	Back door opener operation mode can be changed in this mode. The operation mode will be changed when "CHANG SETT" on CONSULT-II screen is touched.
PW DOWN SET	Keyless power window down (open) operation mode can be changed in this mode. The operation mode will be changed when "CHANG SETT" on CONSULT-II screen is touched.

### Hazard and horn reminder mode

	MODE 1 (C mode)		MODE 2 (S mode)		MODE 3		MODE 4		MODE 5		MODE 6	
	Lock	Unlock	Lock	Unlock	Lock	Unlock	Lock	Unlock	Lock	Unlock	Lock	Unlock
Keyfob operation												
Hazard warning lamp flash	Twice	Once	Twice	—	—	—	Twice	Once	Twice	—	—	Once
Horn sound	Once	—	—	—	—	—	—	—	Once	—	Once	—

### Auto locking function mode

	MODE 1	MODE 2	MODE 3
Auto locking function	5 minutes	Nothing	1 minute

### Panic alarm operation mode

	MODE 1	MODE 2	MODE 3
Keyfob operation	0.5 seconds	Nothing	1.5 seconds

### Back door open operation mode

	MODE 1	MODE 2	MODE 3
Keyfob operation	0.5 seconds	Nothing	0.5 seconds

### Keyless power window down operation mode

	MODE 1	MODE 2	MODE 3
Keyfob operation	3 seconds	Nothing	5 seconds

# REMOTE KEYLESS ENTRY SYSTEM

EIS00411

## Trouble Diagnosis Procedure

1. Check the symptom and customer's requests.
2. Understand outline of system. Refer to [BL-40, "System Description"](#) .
3. Confirm system operation.
  - Check that the power door lock system operates normally. Refer to [BL-16, "POWER DOOR LOCK SYSTEM"](#) .
  - Check that the automatic back door system operates normally. Refer to [BL-93, "AUTOMATIC BACK DOOR SYSTEM"](#) .
4. Perform pre-diagnosis inspection. Refer to [BL-53, "BCM Power Supply and Ground Circuit Inspection"](#) .
5. Refer to trouble diagnosis chart by symptom, repair or replace any malfunctioning parts. Refer to [BL-54, "Trouble Diagnoses"](#) .
6. Inspection End.

## BCM Power Supply and Ground Circuit Inspection

EIS00412

### 1. CHECK FUSE AND FUSIBLE LINK

Check the following BCM fuses and fusible link.

Component Parts	Terminal No. (SIGNAL)	Ampere	No.	Location
BCM	57 (BAT power supply)	15A	22	Fuse block (J/B)
	70 (BAT power supply)	50A	f	Fuse and fusible link box
	11 (ACC power supply)	10A	4	Fuse block (J/B)
	38 (IGN power supply)	10A	59	Fuse and relay box

#### NOTE:

Refer to [BL-39, "Component Parts and Harness Connector Location"](#) .

#### OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse, refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM connectors M18, M20 terminals 11, 38, 57, 70 and ground.

Connector	Terminals		Signal name	Ignition switch	Voltage
	(+)	(-)			
M20	70	Ground	Battery power supply	OFF	Battery voltage
	57		Battery power supply	OFF	Battery voltage
M18	11		ACC power supply	ACC	Battery voltage
	38		IGN power supply	ON	Battery voltage

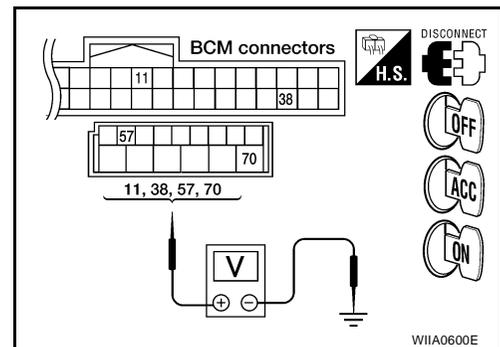

#### OK or NG

OK >> GO TO 3.

NG >> Repair or replace harness.

# REMOTE KEYLESS ENTRY SYSTEM


## 3. CHECK GROUND CIRCUIT

Check continuity between BCM connector M20 terminal 67 and ground.

Connector	Terminals		Continuity
	(+)	(-)	
M20	67	Ground	Yes

OK or NG

- OK >> Power supply and ground circuit is OK.
- NG >> Repair or replace harness.

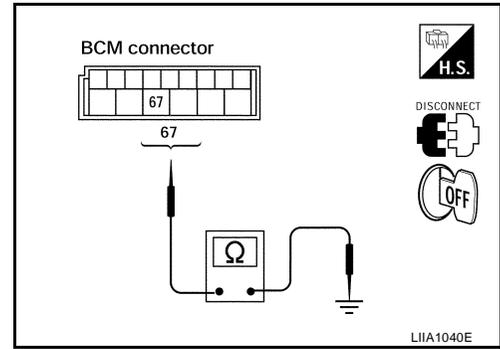

EIS00413

## Trouble Diagnoses SYMPTOM CHART

### NOTE:

- Always check the "Trouble Diagnosis Procedure" before troubleshooting. Refer to [BL-53, "Trouble Diagnosis Procedure"](#).
- Always check keyfob battery before replacing keyfob. Refer to [BL-59, "Keyfob Battery and Function Check"](#).
- The panic alarm operation and back door opener operation of remote keyless entry system do not activate with the ignition key inserted in the ignition key cylinder.
- Use Remote Keyless Entry Tester J-43241 (follow instructions on tester) to check operation of keyfob before replacing keyfob.

Symptom	Diagnoses/service procedure	Reference page
All functions of remote keyless entry system do not operate.	1. Keyfob battery and function check (use Remote Keyless Entry Tester J-43241) <b>NOTE:</b> If the result of keyfob function check is OK, keyfob is not malfunctioning.	<a href="#">BL-59</a>
	2. Check BCM and remote keyless entry receiver.	<a href="#">BL-60</a>
The new ID of keyfob cannot be entered.	1. Keyfob battery and function check (use Remote Keyless Entry Tester J-43241) <b>NOTE:</b> If the result of keyfob function check is OK, keyfob is not malfunctioning.	<a href="#">BL-59</a>
	2. Key switch (insert) check	<a href="#">BL-56</a>
	3. Door switch check	<a href="#">BL-57</a>
	4. ACC power check	<a href="#">BL-62</a>
	5. Replace BCM.	<a href="#">BCS-20</a>
Door lock or unlock does not function. (If the power door lock system does not operate manually, check power door lock system. Refer to <a href="#">BL-16, "POWER DOOR LOCK SYSTEM"</a> )	1. Keyfob battery and function check (use Remote Keyless Entry Tester J-43241) <b>NOTE:</b> If the result of keyfob function check is OK, keyfob is not malfunctioning.	<a href="#">BL-59</a>
	2. Replace BCM.	<a href="#">BCS-20</a>
Hazard and horn reminder does not activate properly when pressing lock or unlock button of keyfob.	1. Check hazard and horn reminder mode with CONSULT-II <b>NOTE:</b> Hazard and horn reminder mode can be changed. First check the hazard and horn reminder mode setting.	<a href="#">BL-64</a>
	2. Door switch check	<a href="#">BL-57</a>
	3. Replace BCM.	<a href="#">BCS-20</a>

# REMOTE KEYLESS ENTRY SYSTEM

Symptom	Diagnoses/service procedure	Reference page	
Hazard reminder does not activate properly when pressing lock or unlock button of keyfob. (Horn reminder OK)	1. Check hazard reminder mode with CONSULT-II <b>NOTE:</b> Hazard reminder mode can be changed. First check the hazard reminder mode setting.	<a href="#">BL-64</a>	A
	2. Check hazard function with hazard switch	—	B
	3. Replace BCM.	<a href="#">BCS-20</a>	C
Horn reminder does not activate properly when pressing lock or unlock button of keyfob. (Hazard reminder OK)	1. Check horn reminder mode with CONSULT-II <b>NOTE:</b> Horn reminder mode can be changed. First check the horn reminder mode setting.	<a href="#">BL-64</a>	D
	2. Check horn function with horn switch	—	E
	3. IPDM E/R operation check	<a href="#">BL-62</a>	E
	4. Replace BCM.	<a href="#">BCS-20</a>	E
Back door open/close operation is not carried out with keyfob operation. (The automatic back door system is normal.)	1. Keyfob battery and function check (use Remote Keyless Entry Tester J-43241) <b>NOTE:</b> If the result of keyfob function check is OK, keyfob is not malfunctioning.	<a href="#">BL-59</a>	F
	2. Key switch (insert) check	<a href="#">BL-56</a>	G
	3. Remote keyless entry receiver system	<a href="#">BL-60</a>	H
	4. Replace BCM.	<a href="#">BCS-20</a>	H
Room lamp, ignition keyhole illumination and step lamp operation do not activate properly.	1. Room lamp operation check	<a href="#">BL-64</a>	I
	2. Ignition keyhole illumination operation check	<a href="#">BL-64</a>	I
	3. Step lamp operation check	<a href="#">BL-64</a>	I
	4. Door switch check	<a href="#">BL-57</a>	J
	5. Replace BCM.	<a href="#">BCS-20</a>	J
Panic alarm (horn and headlamp) does not activate when panic alarm button is continuously pressed.	1. Keyfob battery and function check (use Remote Keyless Entry Tester J-43241) <b>NOTE:</b> If the result of keyfob function check is OK, keyfob is not malfunctioning.	<a href="#">BL-59</a>	K
	2. Key switch (insert) check	<a href="#">BL-56</a>	L
	3. Replace BCM.	<a href="#">BCS-20</a>	L
Auto door lock operation does not activate properly. (All other remote keyless entry functions OK.)	1. Check auto door lock operation mode with CONSULT-II <b>NOTE:</b> Auto door lock operation mode can be changed. First check the auto door lock operation mode setting.	<a href="#">BL-51</a>	M
	2. Replace BCM.	<a href="#">BCS-20</a>	M
Keyless power window down (open) operation does not activate properly. (All other remote keyless entry functions OK.)	1. Check power window down operation mode with CONSULT-II <b>NOTE:</b> Power window down operation mode can be changed. First check the power window down operation mode setting.	<a href="#">BL-51</a>	N
	2. Check power window function with switch	—	N
	3. Replace BCM.	<a href="#">BCS-20</a>	N

# REMOTE KEYLESS ENTRY SYSTEM

EIS00414


## Key Switch (Insert) Check

### 1. CHECK KEY SWITCH INPUT SIGNAL

 With CONSULT-II

Check key switch "KEY ON SW" in DATA MONITOR mode with CONSULT-II. Refer to [BL-51, "Data Monitor"](#).

- When key is inserted to ignition key cylinder:  
**KEY ON SW : ON**
- When key is removed from ignition key cylinder:  
**KEY ON SW : OFF**

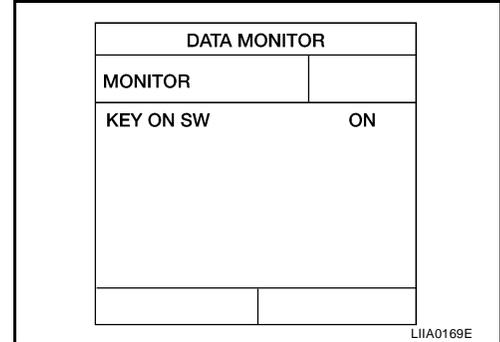


 Without CONSULT-II

Check voltage between BCM connector M18 terminal 37 and ground.

Connector	Terminals		Condition	Voltage (V)
	(+)	(-)		
M18	37	Ground	Key is inserted.	Battery voltage
			Key is removed.	0

**OK or NG**

- OK >> Key switch (insert) circuit is OK.
- NG >> GO TO 2.

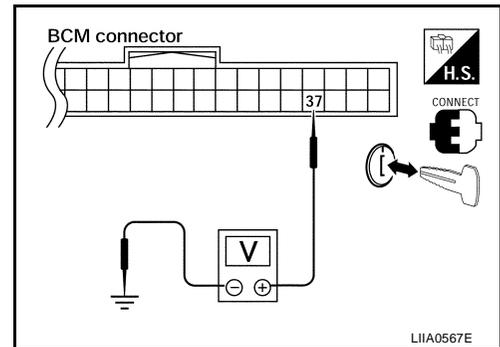


### 2. CHECK KEY SWITCH (INSERT)

- Turn ignition switch OFF.
- Disconnect key switch and key lock solenoid.
- Check continuity between key switch and key lock solenoid terminals 3, 4.

Terminals	Condition	Continuity
3 - 4	Key is inserted.	Yes
	Key is removed.	No

**OK or NG**

- OK >> Repair or replace harness.
- NG >> Replace key switch.

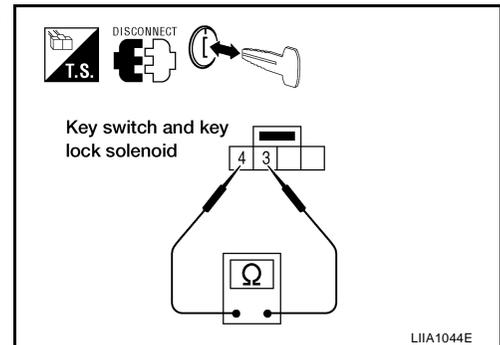

# REMOTE KEYLESS ENTRY SYSTEM

EIS00415

## Door Switch Check

### 1. CHECK DOOR SWITCHES INPUT SIGNAL

 With CONSULT-II

Check door switches ("DOOR SW-DR", "DOOR SW-AS", "DOOR SW-RL", "DOOR SW-RR", "BACK DOOR SW") in DATA MONITOR mode with CONSULT-II. Refer to [BL-51, "Data Monitor"](#).

- When any doors are open:

**DOOR SW-DR** :ON  
**DOOR SW-AS** :ON  
**DOOR SW-RL** :ON  
**DOOR SW-RR** :ON  
**BACK DOOR SW** :ON

- When any doors are closed:

**DOOR SW-DR** :OFF  
**DOOR SW-AS** :OFF  
**DOOR SW-RL** :OFF  
**DOOR SW-RR** :OFF  
**BACK DOOR SW** :OFF


DATA MONITOR	
MONITOR	
DOOR SW - DR	OFF
DOOR SW - AS	OFF
DOOR SW - RR	OFF
DOOR SW - RL	OFF
BACK DOOR SW	OFF

LIA0665E

 Without CONSULT-II

Check voltage between BCM connector M18 or M19 terminals 12, 13, 43, 47, 48 and ground.

Connector	Item	Terminals		Condition	Voltage (V) (Approx.)
		(+)	(-)		
M19	Back door switch	43	Ground	Open ↓ Closed	0 ↓ Battery voltage
	Front door switch LH	47			
	Rear door switch LH	48			
M18	Front door switch RH	12			
	Rear door switch RH	13			

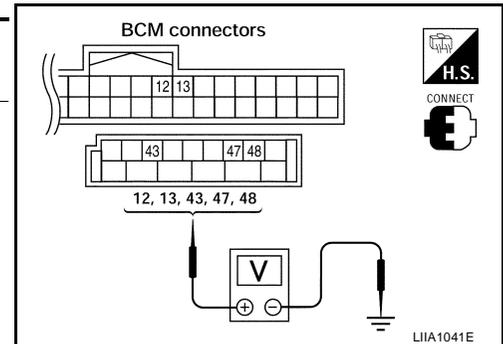

#### OK or NG

- OK >> Door switch circuit is OK.
- NG >> GO TO 2.

# REMOTE KEYLESS ENTRY SYSTEM

## 2. CHECK DOOR SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect door switch and BCM.
3. Check continuity between door switch connector (B) B8 (Front LH), B108 (Front RH), B18 (Rear LH), B116 (Rear RH) terminal 2 or (D) D502 (Back without power back door) terminal 3 or (C) D503 (Back with power back door) terminal 7 and BCM connector (A) M18, M19 terminals 12, 13, 43, 47 and 48.


- 2 - 47** :Continuity should exist
- 2 - 12** :Continuity should exist
- 2 - 48** :Continuity should exist
- 2 - 13** :Continuity should exist
- 3 - 43** :Continuity should exist
- 7 - 43** :Continuity should exist

4. Check continuity between door switch connector (B) B8 (Front LH), B108 (Front RH), B18 (Rear LH), B116 (Rear RH) terminal 2 or (D) D502 (Back without power back door) terminal 3 or (C) D503 (Back with power back door) terminal 7 and ground.

- 2 - Ground** :Continuity should not exist
- 3 - Ground** :Continuity should not exist
- 7 - Ground** :Continuity should not exist

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace harness.

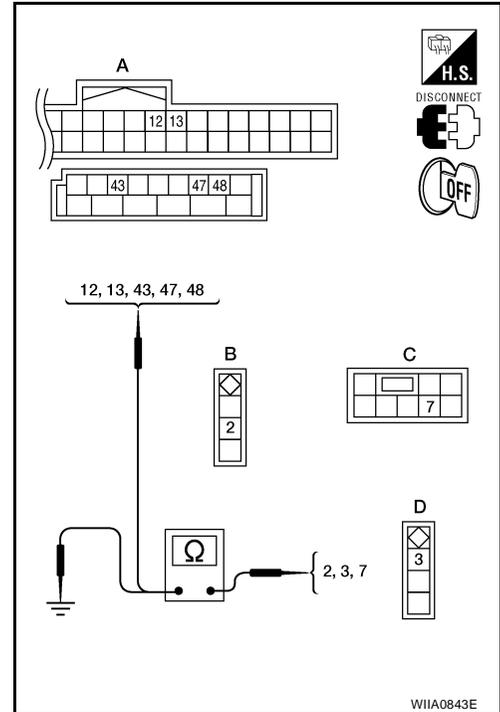


## 3. CHECK DOOR SWITCHES

- Disconnect door switch harness.
- Check continuity between door switch connector terminals.

Switch	Terminals	Condition	Continuity
Door switch (front and rear)	2 - Ground	Open	Yes
		Closed	No
Back door switch (without power back door)	3 - Ground	Open	Yes
		Closed	No
Back door switch (with power back door)	7 - Ground	Open	Yes
		Closed	No

OK or NG

- OK >> Door switch circuit is OK.
- NG >> (Front and rear doors) Replace door switch.
- NG >> (Back door) GO TO 4.

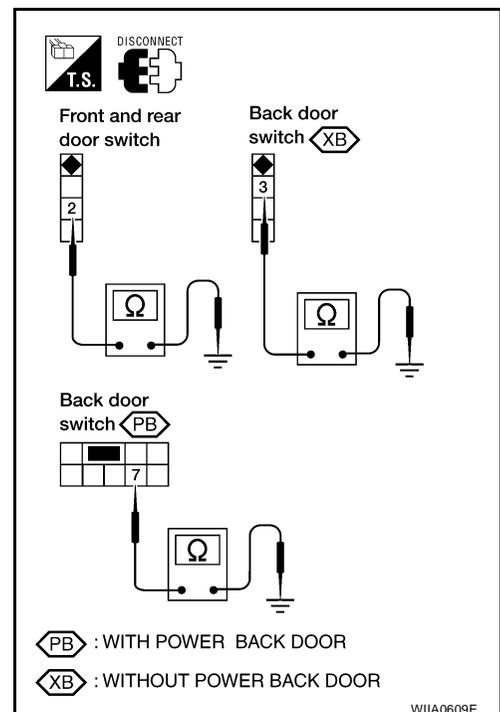

# REMOTE KEYLESS ENTRY SYSTEM


## 4. CHECK BACK DOOR SWITCH CIRCUIT

Check continuity between door switch connector terminal and ground.

Connector	Terminals	Continuity
A: Back door switch (without power back door)	1 – Ground	Yes
B: Back door switch (with power back door)	8 – Ground	Yes

OK or NG

- OK >> Replace back door switch.
- NG >> Repair or replace harness.

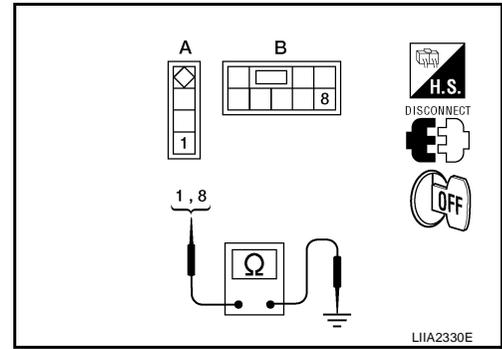

## Keyfob Battery and Function Check

### 1. CHECK KEYFOB BATTERY

Remove battery and measure voltage across battery positive and negative terminals, (+) and (-).


**Voltage** : 2.5V - 3.0V

**NOTE:**

Keyfob does not function if battery is not set correctly.

OK or NG

- OK >> GO TO 2.
- NG >> Replace battery.

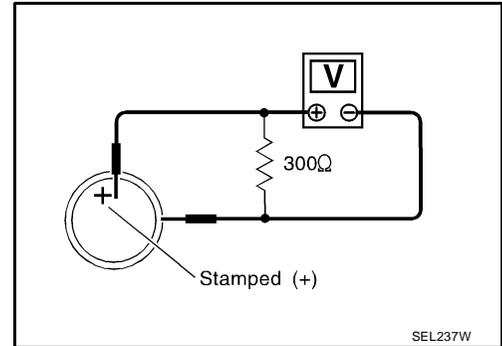

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

# REMOTE KEYLESS ENTRY SYSTEM

## 2. CHECK KEYFOB FUNCTION

### With CONSULT-II

Check keyfob function in "DATA MONITOR" mode with CONSULT-II. When pushing each button of keyfob, the corresponding monitor item should be turned as follows.

Condition	Monitor item
Pushing LOCK	KEYLESS LOCK : ON
Pushing UNLOCK	KEYLESS UNLOCK : ON
Keep pushing UNLOCK	RKE KEEP UNLK turns to ON 3 seconds after UNLOCK button is pushed.
Pushing PANIC	KEYLESS PANIC : ON
Pushing LOCK and UNLOCK at the same time	RKE LCK-UNLCK : ON
Pushing POWER BACK DOOR	KEYLESS PBD : ON

DATA MONITOR	
MONITOR	
KEYLESS LOCK	OFF
KEYLESS UNLOCK	OFF
RKE KEEP UNLK	OFF
KEYLESS PANIC	OFF
RKE LCK-UNLCK	OFF
KEYLESS PBD	OFF

LIIA1487E

### Without CONSULT-II

Check keyfob function using Remote Keyless Entry Tester J-43241.

OK or NG

- OK >> WITH CONSULT-II: Keyfob, remote keyless entry receiver and wiring harness between BCM and remote keyless entry receiver are OK. Replace BCM. Refer to [BCS-20, "Removal and Installation"](#)
- OK >> WITHOUT CONSULT-II: Keyfob is OK. Further inspection is necessary. Refer to [BL-54, "SYMPTOM CHART"](#).
- NG >> WITH CONSULT-II: Further inspection is necessary. Refer to [BL-54, "SYMPTOM CHART"](#).
- NG >> WITHOUT CONSULT-II: Replace keyfob. Refer to [BL-65, "ID Code Entry Procedure"](#).

## Remote Keyless Entry Receiver System Inspection

EIS00417


### 1. REMOTE KEYLESS ENTRY RECEIVER SIGNAL

Check signal voltage waveform between BCM connector M18 terminal 20 and ground using an oscilloscope.

**Condition:**

**Keyfob buttons released** : Refer to [BL-48, "Terminals and Reference Value for BCM"](#).

**Keyfob buttons pressed** : Refer to [BL-48, "Terminals and Reference Value for BCM"](#).

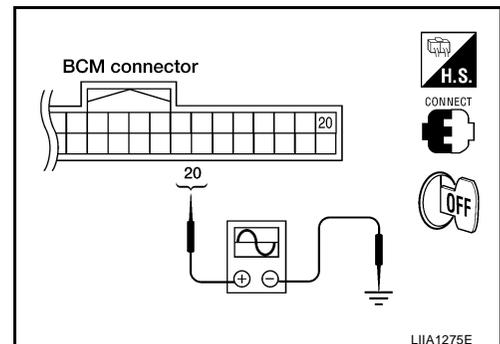

OK or NG

- OK >> Remote keyless entry receiver signal power supply, ground and signal circuits are OK. Replace BCM. Refer to [BCS-20, "Removal and Installation"](#).
- NG >> GO TO 2.

# REMOTE KEYLESS ENTRY SYSTEM

## 2. REMOTE KEYLESS ENTRY RECEIVER POWER SUPPLY INSPECTION

Check signal voltage waveform between BCM connector M18 terminal 19 and ground using an oscilloscope.


**19 - Ground**

**: Refer to [BL-48, "Terminals and Reference Value for BCM"](#) .**

OK or NG

OK >> GO TO 3.

NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#) .

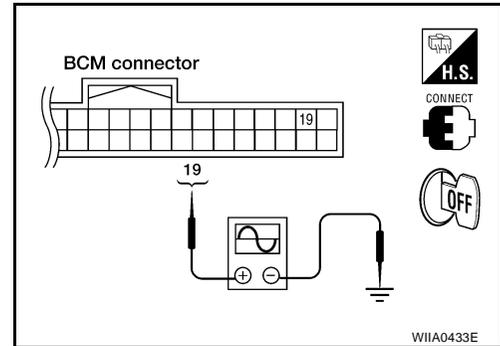

WIIA0433E

## 3. REMOTE KEYLESS ENTRY RECEIVER GROUND CIRCUIT INSPECTION (BCM)

Check continuity between BCM connector M18 terminal 18 and ground.


**18 - Ground**

**: Continuity should exist**

OK or NG

OK >> GO TO 4.

NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#) .

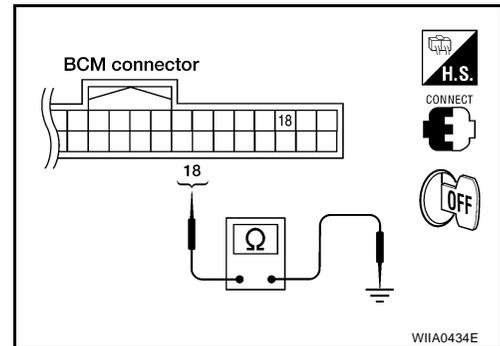

WIIA0434E

## 4. HARNESS INSPECTION BETWEEN BCM AND REMOTE KEYLESS ENTRY RECEIVER

1. Disconnect remote keyless entry receiver and BCM connectors.
2. Check continuity between remote keyless entry receiver connector M120 terminals 1, 2, 4 and BCM connector M18 terminals 18, 19, 20.

**1 - 18**

**: Continuity should exist**

**2 - 20**

**: Continuity should exist**

**4 - 19**

**: Continuity should exist**

3. Check continuity between remote keyless entry receiver terminals 1, 2 and 4 and ground.

**1 - Ground**

**: Continuity should not exist**

**2 - Ground**

**: Continuity should not exist**


**4 - Ground**

**: Continuity should not exist**

OK or NG

OK >> Replace remote keyless entry receiver.

NG >> Repair or replace the harness between the remote keyless entry receiver and BCM.

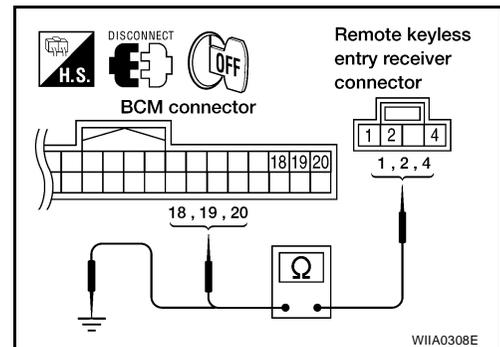

WIIA0308E

# REMOTE KEYLESS ENTRY SYSTEM

## ACC Power Check


EIS00418

### 1. CHECK ACC POWER

 With CONSULT-II

Check "ACC ON SW" in DATA MONITOR mode with CONSULT-II. Refer to [BL-51, "Data Monitor"](#).

Monitor Item	Condition	
ACC ON SW	Ignition switch position is ACC	: ON
	Ignition switch position is OFF	: OFF

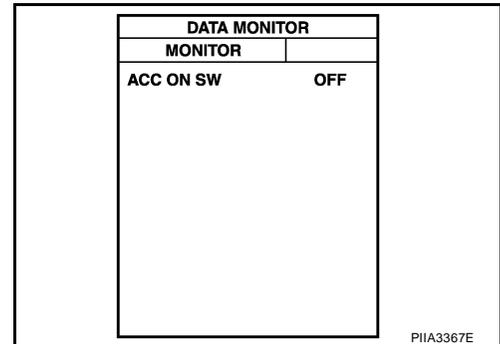


PIIA3367E

 Without CONSULT-II

Check voltage between BCM connector M18 terminal 11 and ground.

Connector	Terminal		Condition	Voltage (V) (Approx.)
	(+)	(-)		
M18	11	Ground	ACC	Battery voltage
			OFF	0

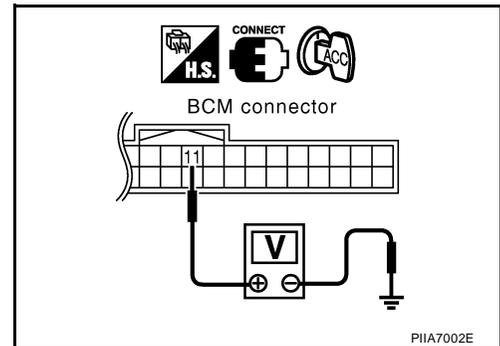

PIIA7002E

OK or NG

OK >> ACC power circuit is OK.

NG >> Check the following:

- 10A fuse [No. 4, located in fuse block (J/B)]
- Harness for open or short.

## IPDM E/R Operation Check

EIS00419

### 1. CHECK IPDM E/R INPUT VOLTAGE


Check voltage between IPDM E/R connector E122 terminal 45 and ground.

Connector	Terminal		Voltage (V) (Approx.)
	(+)	(-)	
E122	45	Ground	Battery voltage

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).

NG >> GO TO 2.

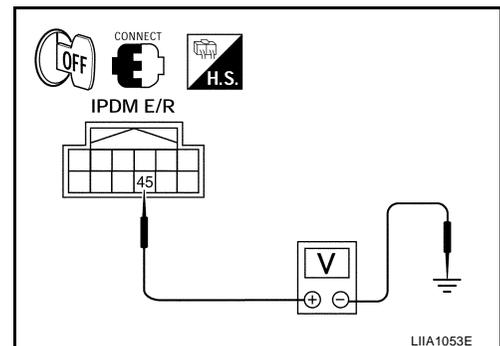

LIIA1053E

# REMOTE KEYLESS ENTRY SYSTEM

## 2. CHECK IPDM E/R INPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R and horn relay.
3. Check continuity between IPDM E/R connector E122 terminal 45 and horn relay connector H-1 terminal 1.


**45 - 1 :Continuity should exist**

4. Check continuity between IPDM E/R connector E122 terminal 45 and ground.

**45 - Ground :Continuity should not exist**

### OK or NG

- OK >> Further inspection is necessary. Refer to [BL-54, "SYMP-TOM CHART"](#).
- NG >> Repair or replace harness

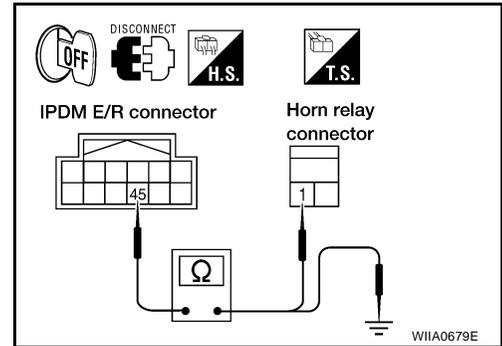

A  
B  
C  
D  
E  
F  
G  
H  
J  
K  
L  
M

BL

# REMOTE KEYLESS ENTRY SYSTEM

---

## Check Hazard Function

EIS0041A

### 1. CHECK HAZARD WARNING LAMP

---

Does hazard indicator flash with hazard switch?

Yes or No

Yes >> Hazard warning lamp circuit is OK.

No >> Check hazard indicator. Refer to [LT-79, "TURN SIGNAL AND HAZARD WARNING LAMPS"](#) .

## Check Horn Function

EIS0041B

First, perform the "SELF-DIAG RESULTS" in "BCM" with CONSULT-II, then perform the trouble diagnosis of malfunction system indicated in "SELF-DIAG RESULTS" of "BCM".

### 1. CHECK HORN FUNCTION

---

Does horn sound with horn switch?

Yes or No

Yes >> Horn circuit is OK.

No >> Check horn circuit. Refer to [WW-57, "HORN"](#) .

## Check Headlamp Function

EIS0041C

First, perform the "SELF-DIAG RESULTS" in "BCM" with CONSULT-II, then perform the trouble diagnosis of malfunction system indicated in "SELF-DIAG RESULTS" of "BCM".

### 1. CHECK HEADLAMP OPERATION

---

Does headlamp come on when turning lighting switch ON?

Yes or No

Yes >> Headlamp operation circuit is OK.

No >> Check headlamp circuit. Refer to [LT-5, "HEADLAMP \(FOR USA\)"](#) .

## Check Map Lamp Illumination Function

EIS0041D

### 1. CHECK MAP LAMP ILLUMINATION FUNCTION

---

When map lamp switch is in DOOR position, open the front door LH or RH.

**Map lamp and ignition keyhole illumination should illuminate.**

OK or NG

OK >> System is OK.

NG >> Check map lamp illumination circuit. Refer to [LT-133, "INTERIOR ROOM LAMP"](#) .

# REMOTE KEYLESS ENTRY SYSTEM

E/IS0041E

## ID Code Entry Procedure KEYFOB ID SET UP WITH CONSULT-II


### NOTE:

- If a keyfob is lost, the ID code of the lost keyfob must be erased to prevent unauthorized use. A specific ID code can be erased with CONSULT-II. However, when the ID code of a lost keyfob is not known, all controller ID codes should be erased. After all ID codes are erased, the ID codes of all remaining and/or new keyfobs must be re-registered.
- When registering an additional keyfob, the existing ID codes in memory may or may not be erased. If five ID codes are stored in memory when an additional code is registered, only the oldest code is erased. If less than five codes are stored in memory when an additional code is registered, the new ID code is added and no ID codes are erased.
- Entry of a maximum of five ID codes is allowed. When more than five codes are entered, the oldest ID code will be erased.
- Even if the same ID code that is already in memory is input, the same ID code can be entered. The code is counted as an additional code.


### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. Turn ignition switch OFF.
2. Connect "CONSULT-II" and "CONSULT-II CONVERTER" to the data link connector.

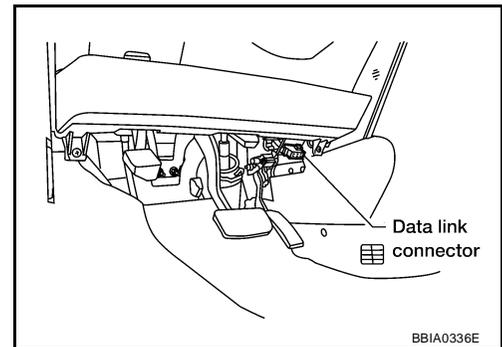

3. Turn ignition switch ON.
4. Touch "START (NISSAN BASED VHCL)".

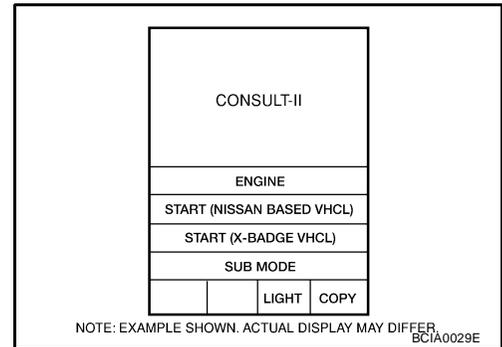


5. Touch "BCM".  
If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

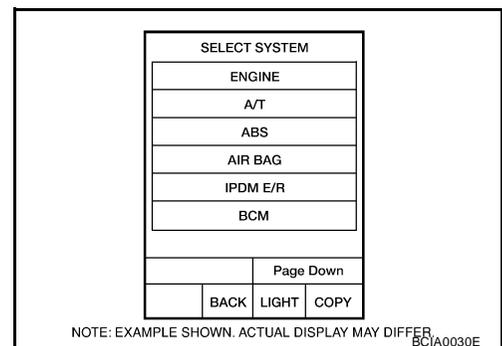


# REMOTE KEYLESS ENTRY SYSTEM

6. Touch "MULTI REMOTE ENT".

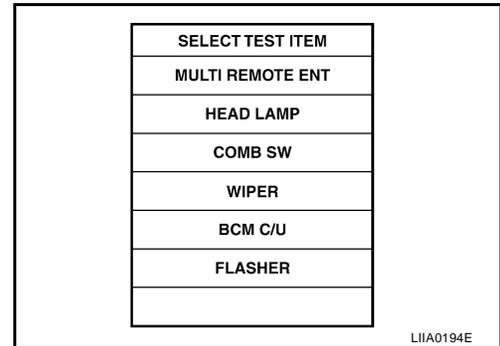

7. Touch "WORK SUPPORT".

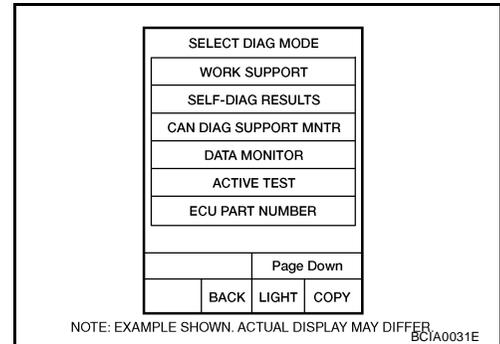


8. The items are shown on the figure can be set up.

- "REMO CONT ID REGIST"  
Use this mode to register a keyfob ID code.

**NOTE:**


**Register the ID code when keyfob or BCM is replaced, or when additional keyfob is required.**

- "REMO CONT ID ERASUR"  
Use this mode to erase a keyfob ID code.
- "REMO CONT ID CONFIR"  
Use this mode to confirm if a keyfob ID code is registered or not.

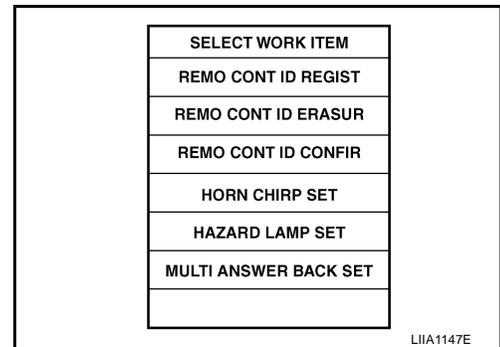

# REMOTE KEYLESS ENTRY SYSTEM

## KEYFOB ID SET UP WITHOUT CONSULT-II

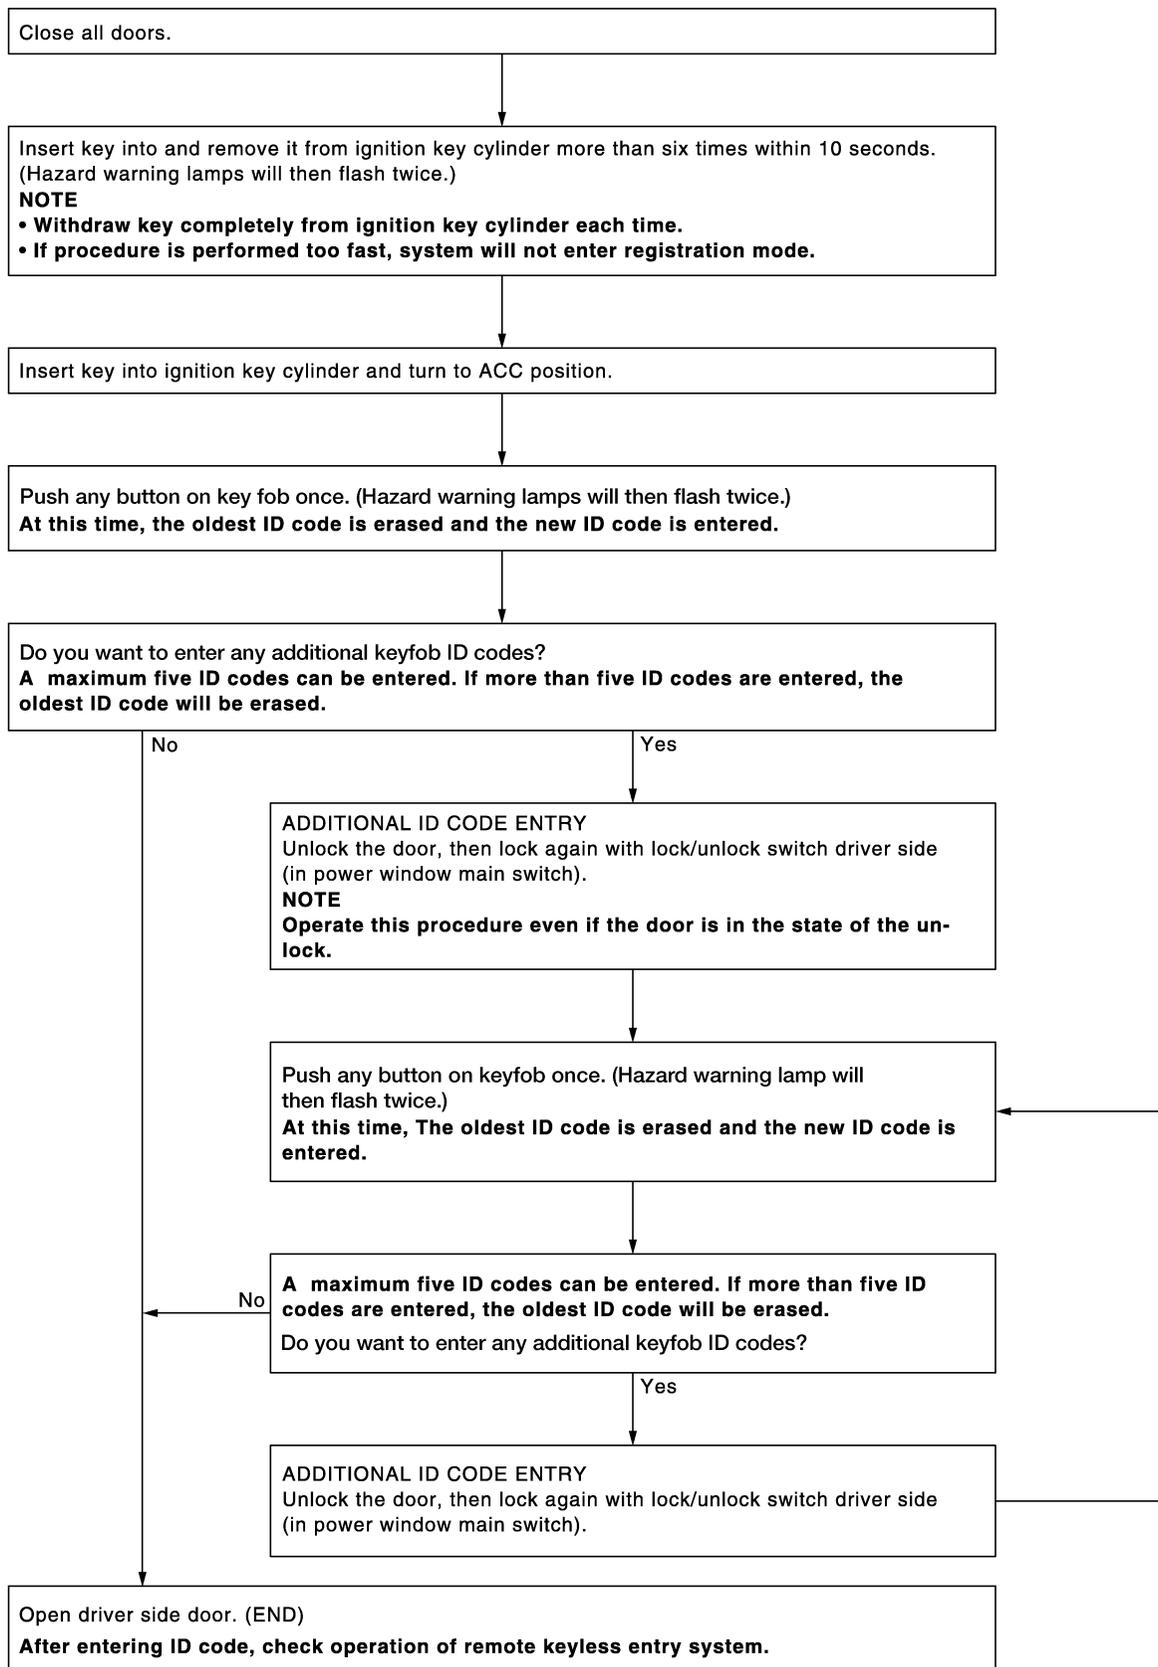

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

LIIA1670E

# REMOTE KEYLESS ENTRY SYSTEM

## NOTE:


- If a keyfob is lost, the ID code of the lost keyfob must be erased to prevent unauthorized use. A specific ID code can be erased with CONSULT-II. However, when the ID code of a lost keyfob is not known, all controller ID codes should be erased. After all ID codes are erased, the ID codes of all remaining and/or new keyfobs must be re-registered.  
To erase all ID codes in memory, register one ID code (keyfob) five times. After all ID codes are erased, the ID codes of all remaining and/or new keyfobs must be re-registered.
- When registering an additional keyfob, the existing ID codes in memory may or may not be erased. If five ID codes are stored in memory, when an additional code is registered, only the oldest code is erased. If less than five ID codes are stored in memory, when an additional ID code is registered, the new ID code is added and no ID codes are erased.
- If you need to activate more than two additional new keyfobs, repeat the procedure "Additional ID code entry" for each new keyfob.
- Entry of maximum five ID codes is allowed. When more than five ID codes are entered, the oldest ID code will be erased.
- Even if same ID code that is already in the memory is input, the same ID code can be entered. The code is counted as an additional code.

## Keyfob Battery Replacement

EIS0041F

### NOTE:

- Be careful not to touch the circuit board or battery terminal.
  - The keyfob is water-resistant. However, if it does get wet, immediately wipe it dry.
1. Open the lid using a coin.
  2. Remove the battery.
  3. Install the new battery, positive side down.
  4. Close the lid securely. Push the keyfob buttons two or three times to check operation.

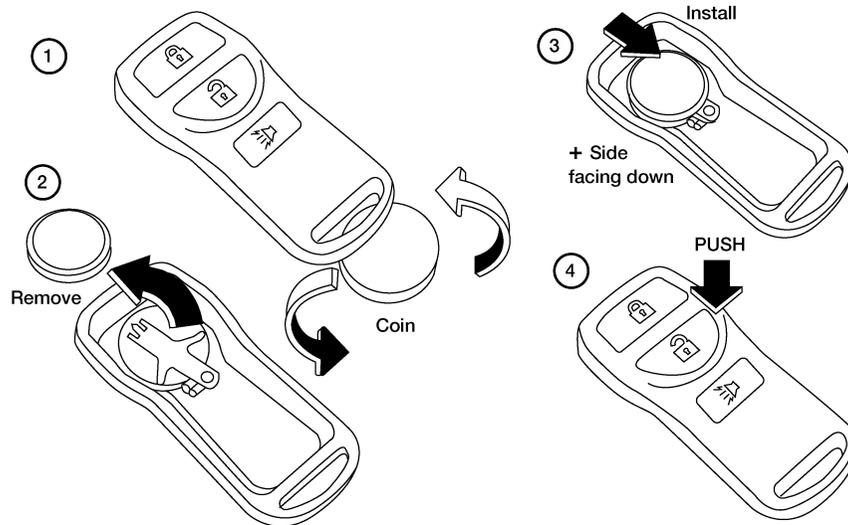

LIA1514E


# VEHICLE SECURITY (THEFT WARNING) SYSTEM

## VEHICLE SECURITY (THEFT WARNING) SYSTEM

PF0:28491

### Component Parts and Harness Connector Location

EIS004G

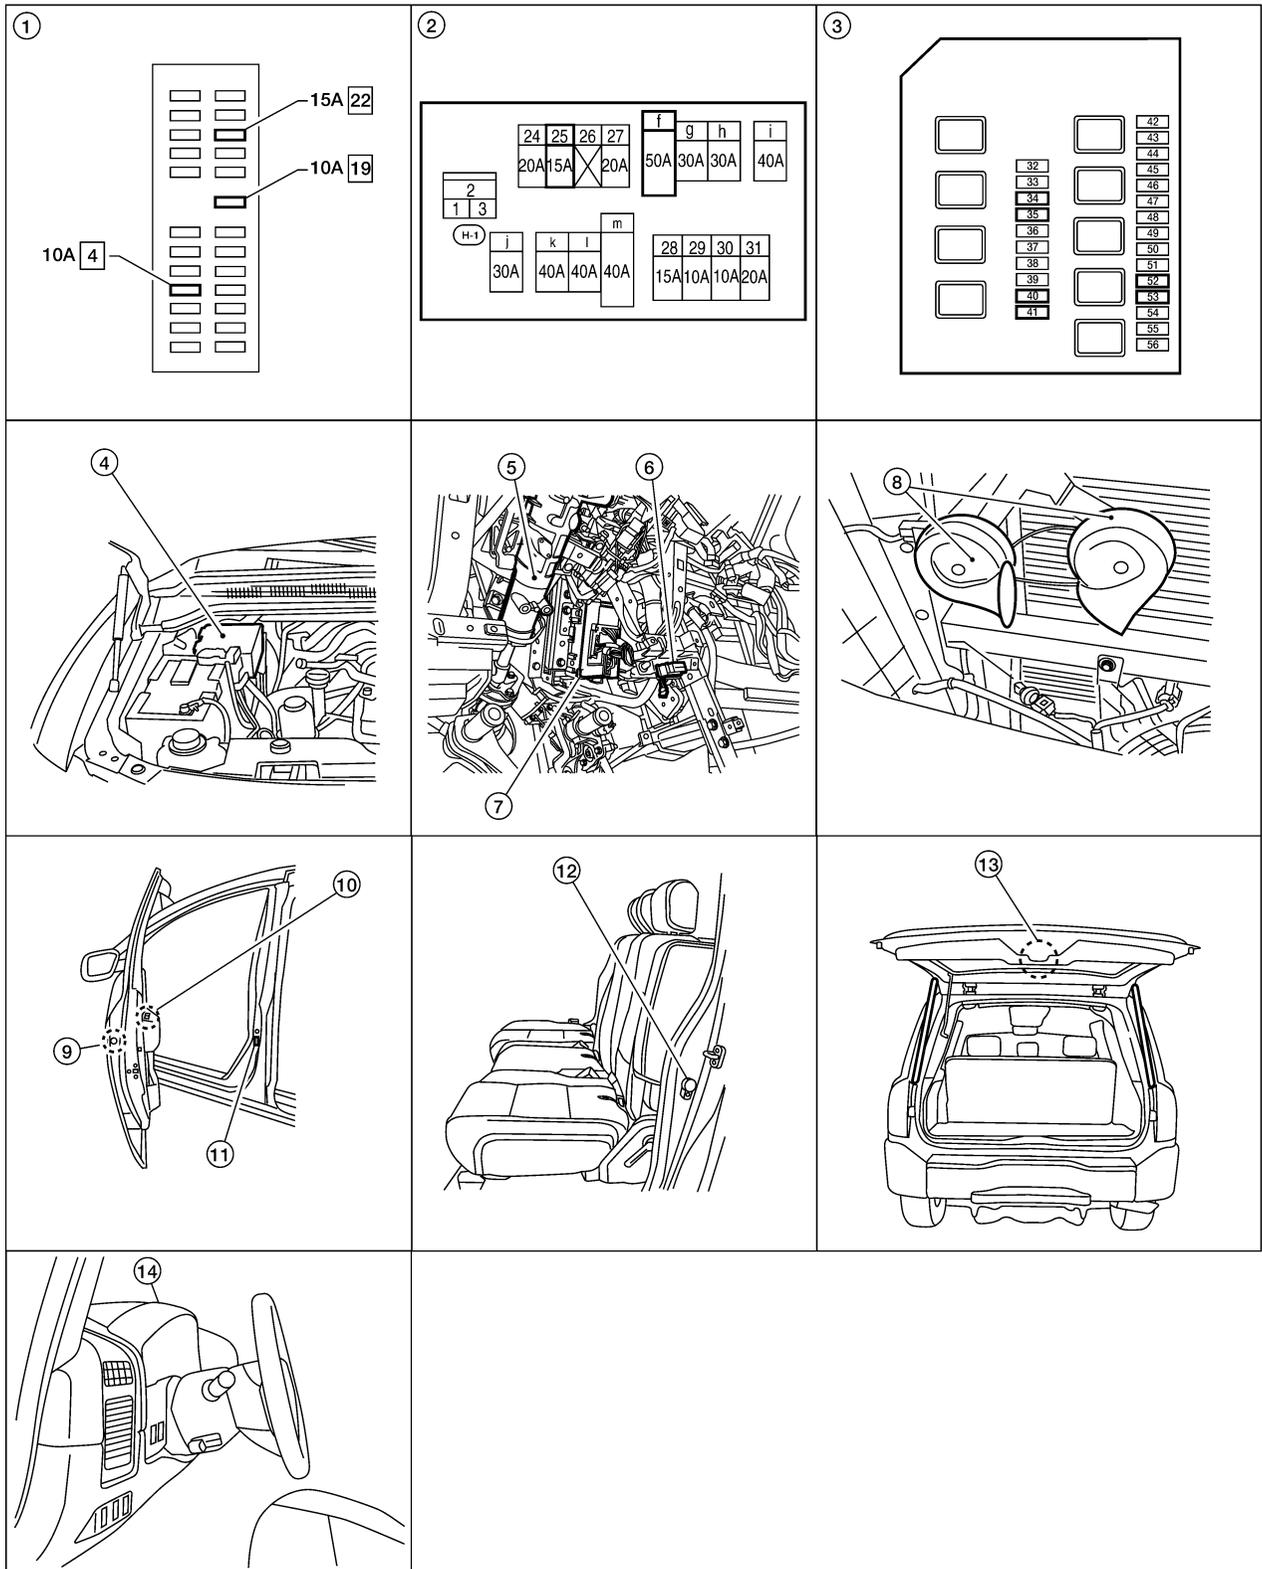

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

- 1. Fuse block (J/B)
- 4. IPDM E/R E119, E122, E123

- 2. Fuse and fusible link box
- 5. Steering column  
(view with instrument panel LH removed)
- 7. Steering column  
(view with instrument panel LH removed)

- 3. IPDM E/R fuse layout
- 6. Data link connector M22  
(view with instrument panel LH removed)
- 8. Data link connector M22  
(view with instrument panel LH removed)

WIIA0874E


# VEHICLE SECURITY (THEFT WARNING) SYSTEM

- |   |   |  |
|---|---|--|
| 7. BCM M18, M19, M20<br>(view with instrument panel LH removed)   | 8. Horn E3<br>(view with grille removed)  | 9. Front door lock assembly LH (key cylinder switch) D14 |
| 10. Main power window and door lock/unlock switch D7, D8<br>Power window and door lock/unlock switch RH D105  | 11. Front door switch<br>LH B8<br>RH B108 | 12. Rear door switch<br>LH B18<br>RH B116                |
| 13. Back door switch (without power back door) D502<br>Back door latch (door ajar switch) (with power back door) D503<br>Back door lock actuator D708 | 14. Combination meter M24                 |  |

## System Description DESCRIPTION

EIS004IH

### Operation Flow

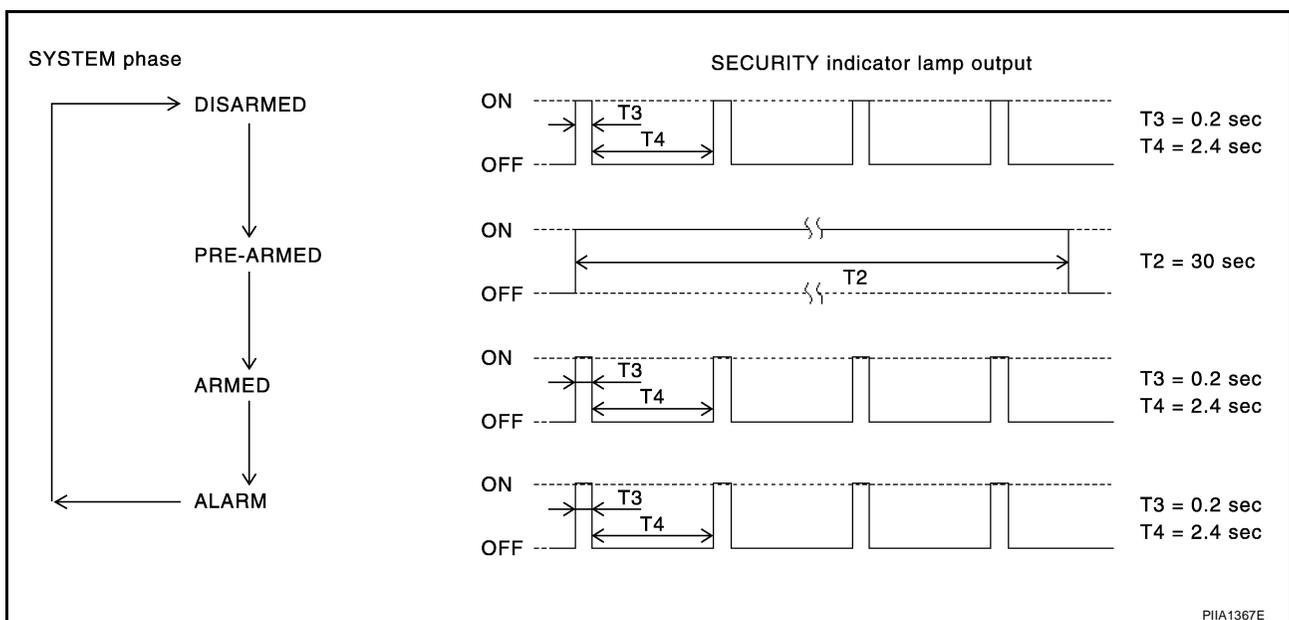

PIIA1367E

### Setting the vehicle security system

#### Initial condition

- Ignition switch is in OFF position.

#### Disarmed phase

- When the vehicle is being driven or when doors or trunk lid is open, the vehicle security system is set in the disarmed phase on the assumption that the owner is inside or near the vehicle.

#### Pre-armed phase and armed phase

- The vehicle security system turns into the "pre-armed" phase when hood, trunk lid and all doors are closed and locked by electronic key. The security indicator lamp illuminates for 30 seconds. then, the system automatically shifts into the "armed" phase.

### Canceling the set vehicle security system

When one of the following operations is performed, the armed phase is canceled.

1. Unlock the doors with the key or the key fob.
2. Open the trunk lid with the key or the key fob. When the trunk lid is closed after opening the trunk lid with the key fob, the system returns to the armed phase.

### Activating the alarm operation of the vehicle security system

Make sure the system is in the armed phase.

When one of the following operations is performed, the system sounds the horns and flashes the head-lamps for about 50 seconds.

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

1. Engine hood or any door is opened before unlocking door with key or key fob.
2. Door is unlocked without using key or key fob.
3. Trunk lid is opened without using key or key fob.

## POWER SUPPLY AND GROUND CIRCUIT

Power is supplied at all times

- through 10A fuse [No.19, located in the fuse block (J/B)]
- to combination meter (security indicator lamp) terminal 5.
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70.
- through 10A fuse [No. 22, located in the fuse block (J/B)]
- to BCM terminal 57.
- through 15A fuse (No. 25, located in the fuse and fusible link box)
- to horn relay terminal 2.
- through 20A fuse (No. 52, located in the IPDM E/R) and
- through 20A fuse (No. 53, located in the IPDM E/R),
- to IPDM E/R internal CPU.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- through body grounds M57, M61 and M79 and
- to IPDM E/R terminals 38 and 59
- through body ground E9, E15 and E24.

## INITIAL CONDITION TO ACTIVATE THE SYSTEM

The operation of the vehicle security system is controlled by the doors.

To activate the vehicle security system, BCM must receive signals indicating the doors are closed and locked.

When a door is open, BCM terminal 12, 13, 42, 47 or 48 receives a ground signal from each door switch.

When front door LH is unlocked, BCM terminal 22 receives a signal from terminal 14 of main power window and door lock/unlock switch.

When front door RH is unlocked, BCM terminal 22 receives a signal from terminal 16 of power window and door lock/unlock switch RH or the rear power window switch LH or RH.

When the glass hatch is open, BCM terminal 42 receives a ground signal

- from terminal + of the glass hatch ajar switch
- through the glass hatch ajar switch case ground.

With power back door: When the back door latch (door ajar switch) is ON (door is open), ground is supplied

- to BCM terminal 43
- through back door latch terminal 7
- through back door latch terminal 8
- through grounds B7 and B19.

Without power back door: When the back door switch is ON (door is open), ground is supplied

- to BCM terminal 43
- through back door switch terminal 3
- through back door switch terminal 1
- through grounds B7 and B19.

## VEHICLE SECURITY SYSTEM ALARM OPERATION

The vehicle security system is triggered by

- opening a door
- opening the glass hatch

A

B

C

D

E

F

G

H

BL

J

K

L

M

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

---

- unlocking door without using the key or key fob.

The vehicle security system will be triggered once the system is in armed phase,

- when BCM receives a ground signal at terminals 12, 13, 47, 48 (door switch), terminal 42 (glass hatch ajar switch) or terminal 43 (back door switch).

Power is supplied at all times

- to horn relay terminal 2
- through 15A fuse (No. 25, located in fuse and fusible link box).

When the vehicle security system is triggered, ground is supplied intermittently

- from IPDM E/R terminal 45
- to headlamp high relay and
- to horn relay terminal 1.

The headlamps flash and the horn sounds intermittently.

The alarm automatically turns off after 50 seconds, but will reactivate if the vehicle is tampered with again.

## VEHICLE SECURITY SYSTEM DEACTIVATION

To deactivate the vehicle security system, a door must be unlocked with the key or key fob.

When the key is used to unlock a door, BCM terminal 22 receives signal

- from terminal 14 of the main power window and door lock/unlock switch.

When the BCM receives either one of these signals or unlock signal from key fob or key cylinder switch, the vehicle security system is deactivated. (Disarmed phase)

## PANIC ALARM OPERATION

Remote keyless entry system may or may not operate vehicle security system (horn and headlamps) as required.

When the remote keyless entry system is triggered, ground is supplied intermittently

- from IPDM E/R terminal 45
- to headlamp high relay and
- to horn relay terminal 1.

The headlamp flashes and the horn sounds intermittently.

The alarm automatically turns off after 25 seconds or when BCM receives any signal from keyfob.

## CAN Communication System Description


EIS004II

Refer to [LAN-25, "CAN COMMUNICATION"](#) .

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

## Schematic

EIS004J

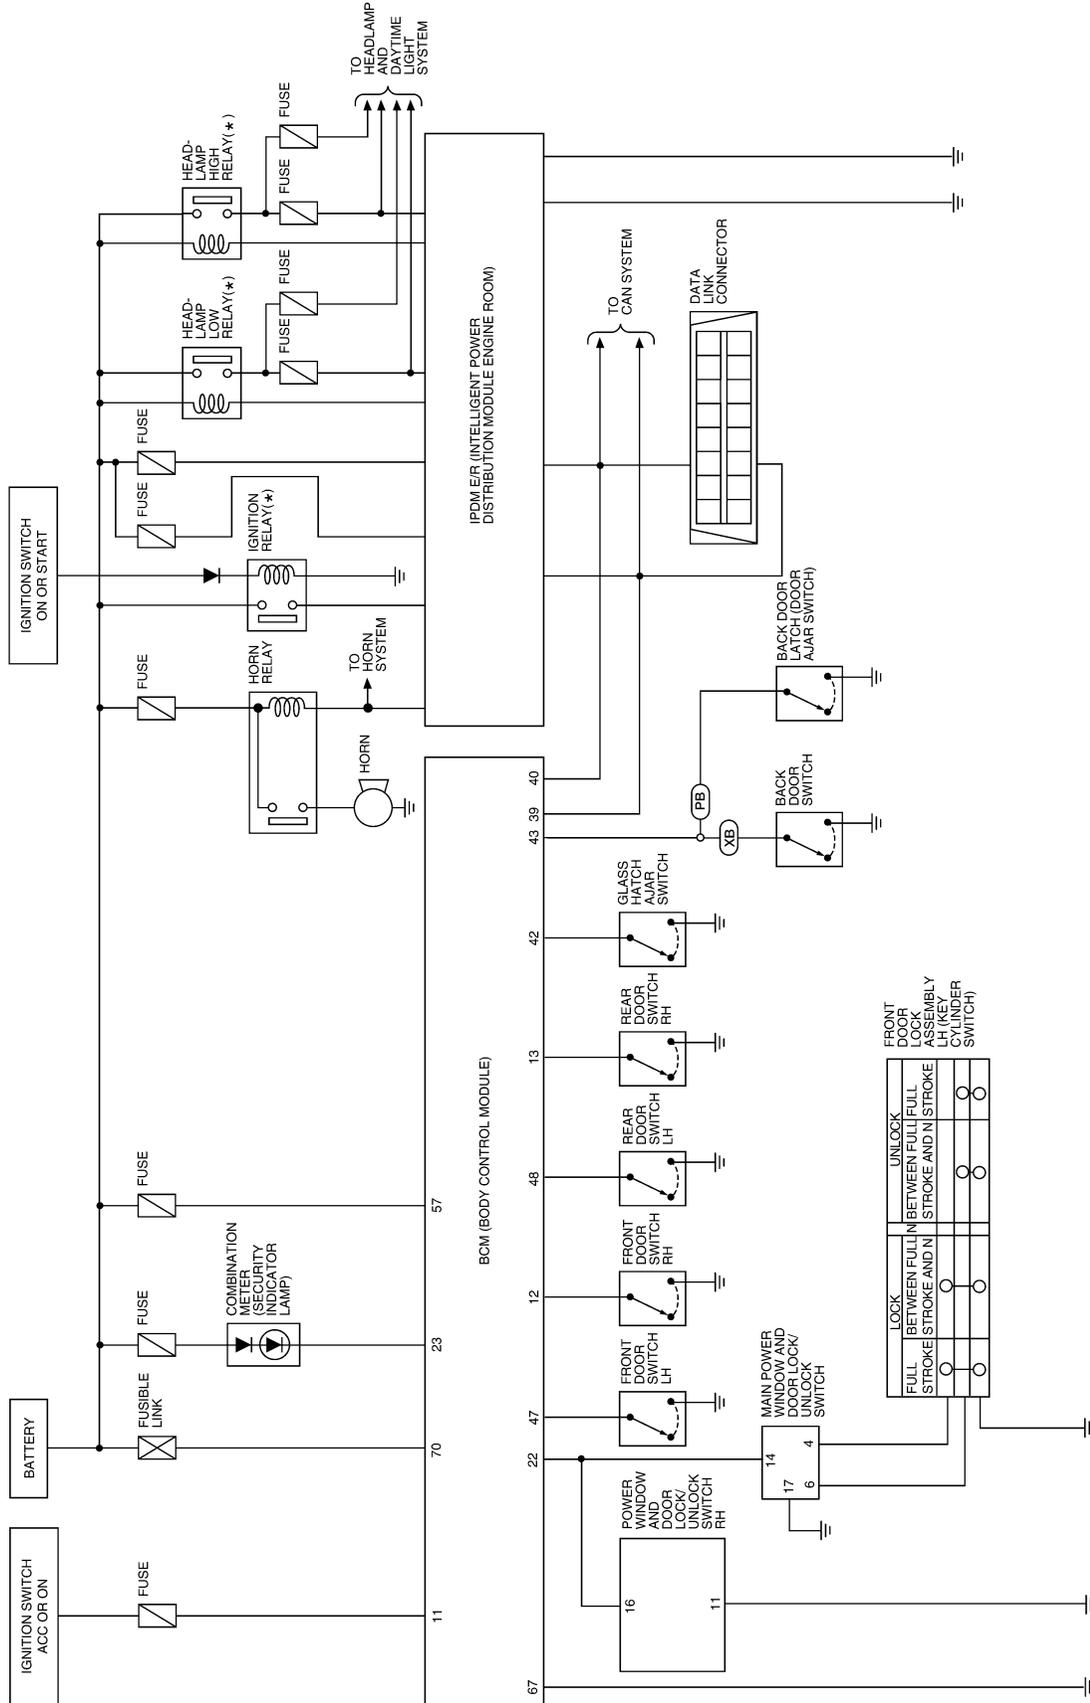

\*: THIS RELAY IS BUILT INTO THE IPDM/ER (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

(PB) : WITH POWER BACK DOOR

(XB) : WITHOUT POWER BACK DOOR



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

BL



# VEHICLE SECURITY (THEFT WARNING) SYSTEM

## Wiring Diagram — VEHSEC —

E/S004IK

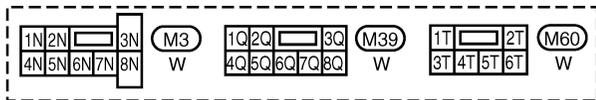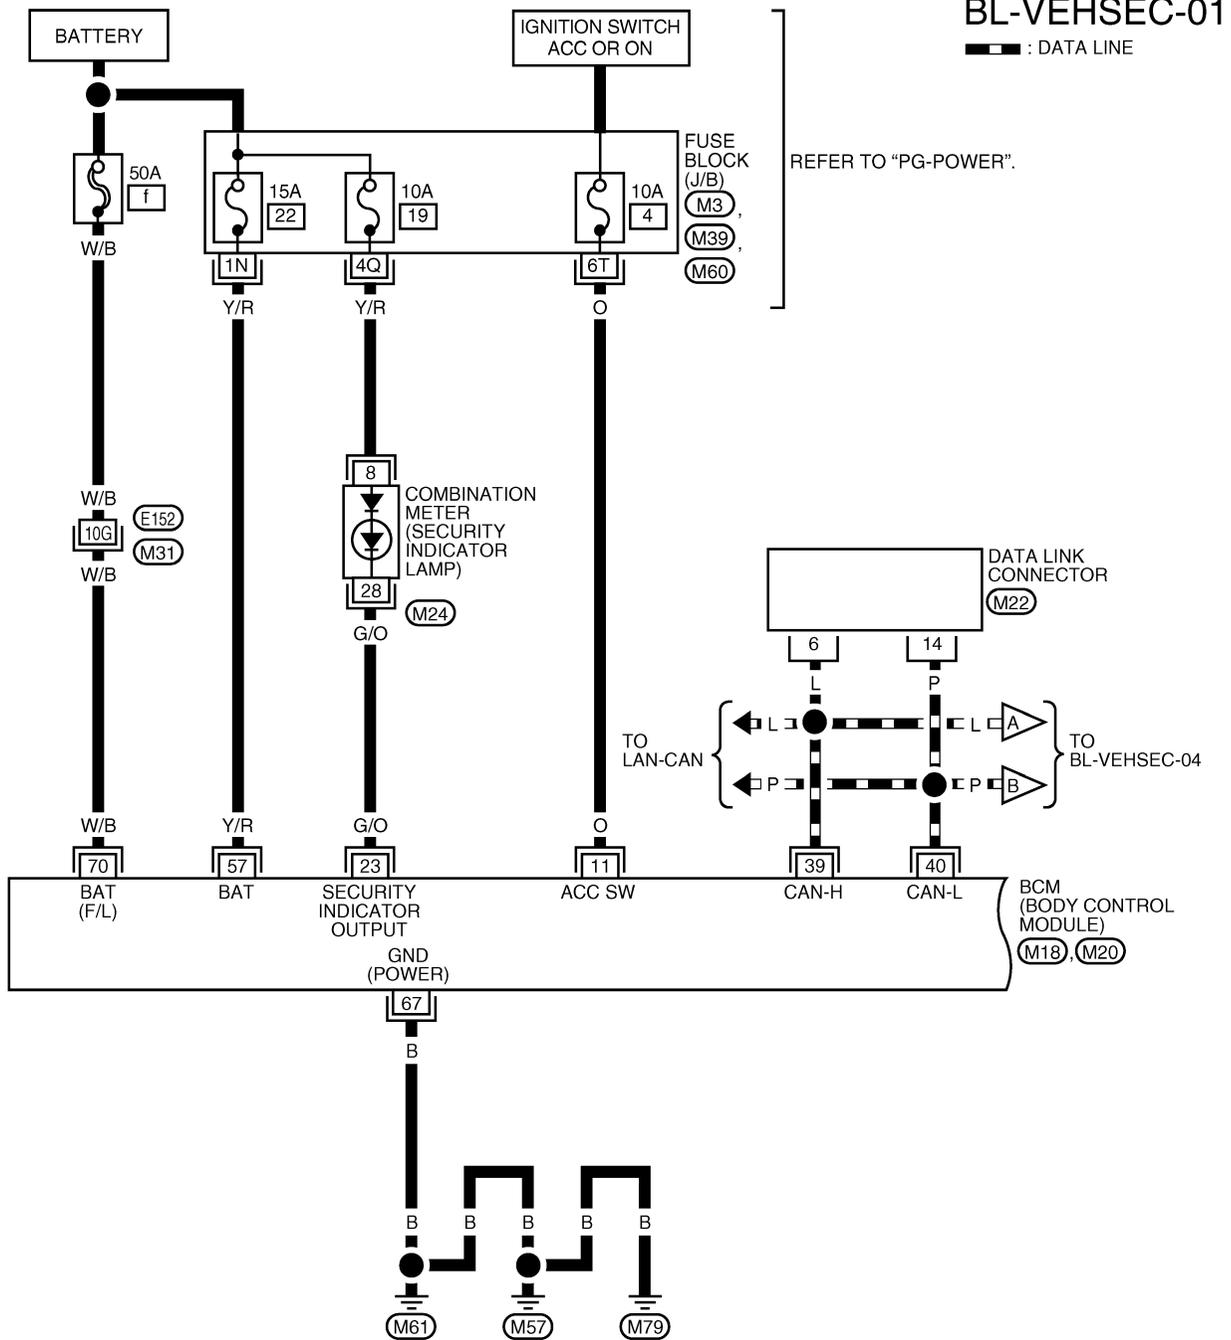



REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

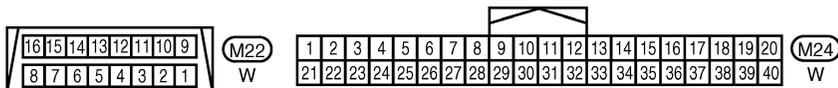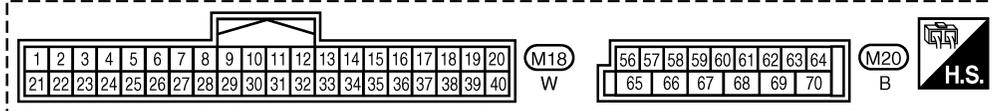



WIWA1227E

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

BL-VEHSEC-02

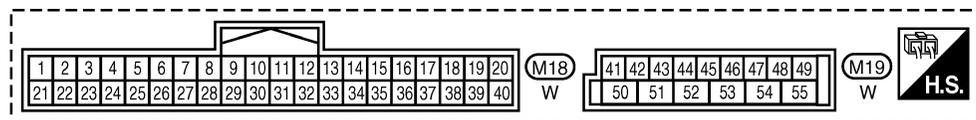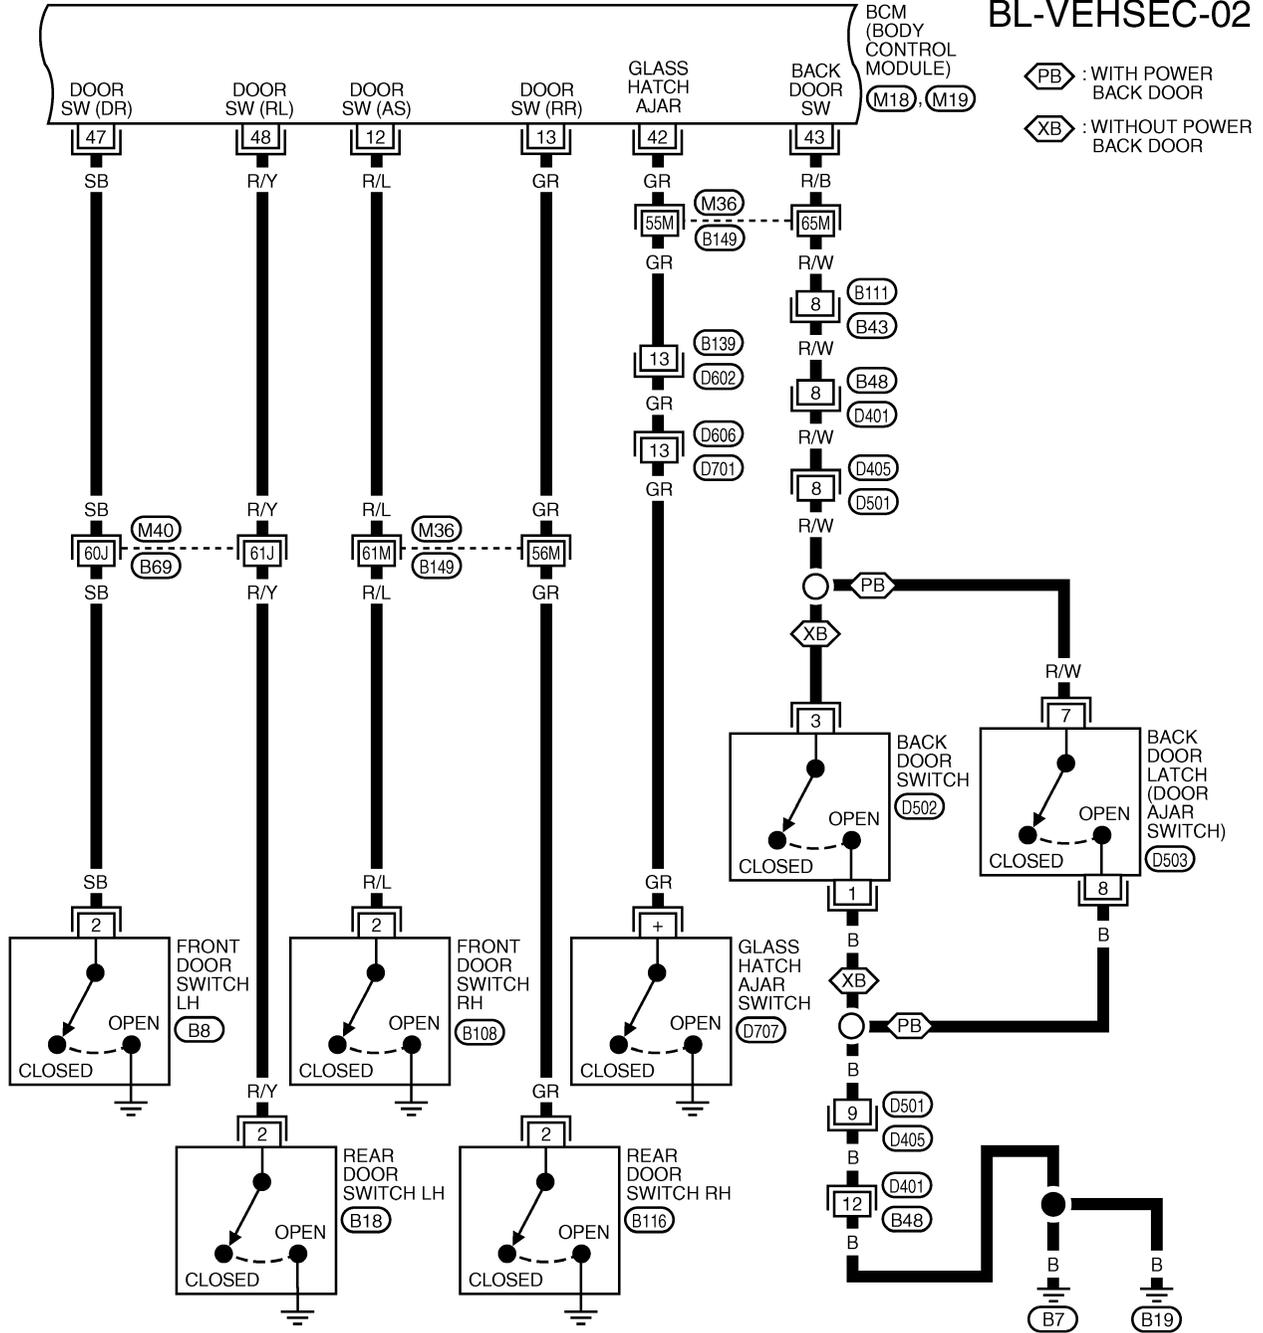



REFER TO THE FOLLOWING.  
 (M36), (M40) - SUPER  
 MULTIPLE JUNCTION (SMJ)

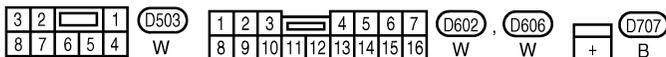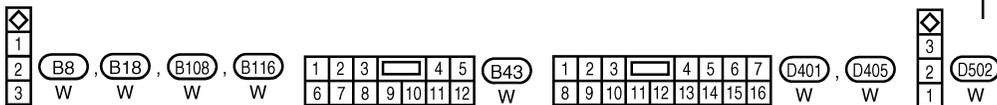

WIWA1228E

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

BL-VEHSEC-03

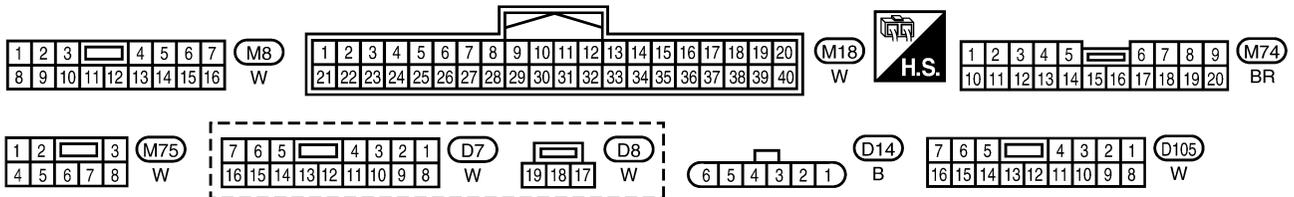
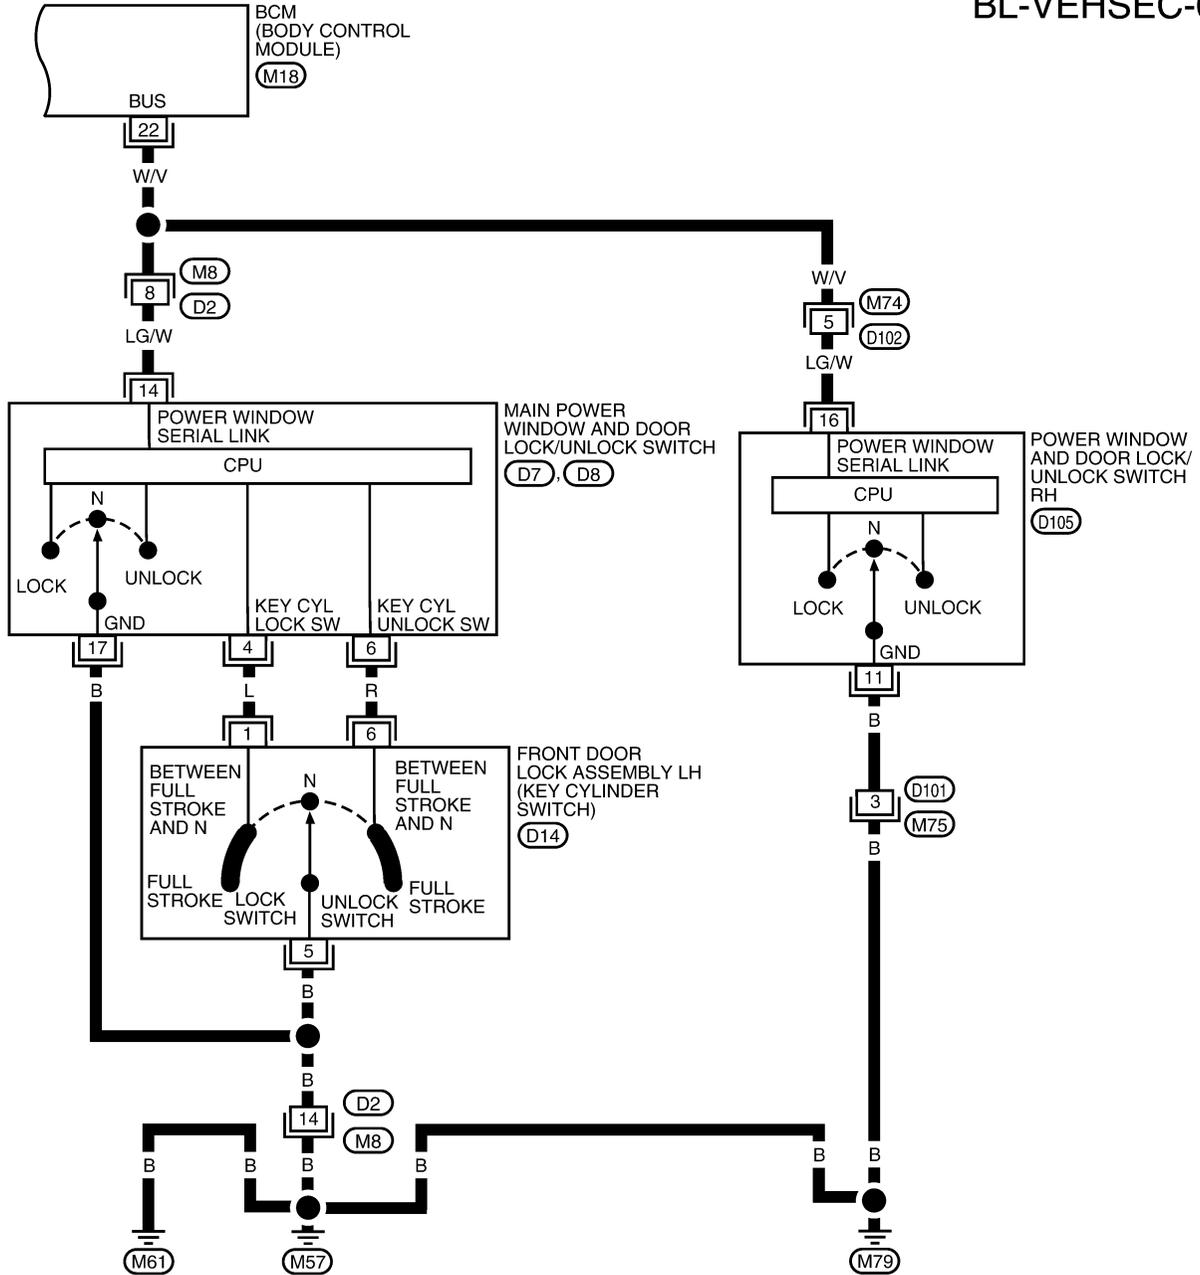


WIWA2215E



# VEHICLE SECURITY (THEFT WARNING) SYSTEM

BL-VEHSEC-05

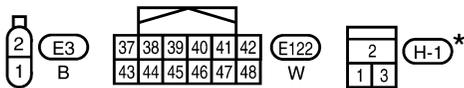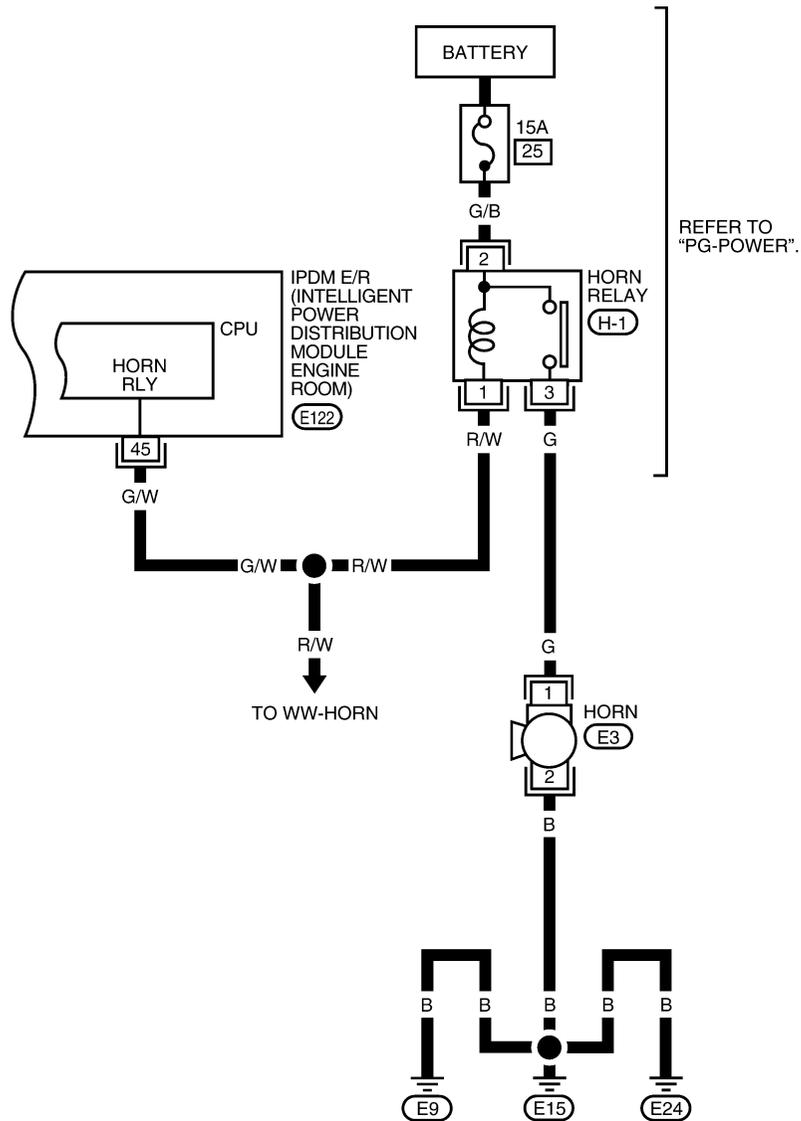


\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WIWA1398E

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

## Terminals and Reference Value for BCM

EIS004IL

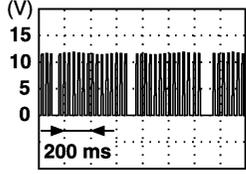Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)
11	O	Ignition switch (ACC)	Ignition switch in ACC	Battery voltage
12	R/L	Front door switch RH	Door close (OFF) → Open (ON)	Battery voltage → 0
13	GR	Rear door switch RH	Door close (OFF) → Open (ON)	Battery voltage → 0
22	W/V	Bus	When ignition switch is ON or power window timer operates	 PIIA2344E
23	G/O	Security indicator lamp	Goes off → Illuminates (Every 2.4 seconds)	Battery voltage → 0
39	L	CAN-H	—	—
40	P	CAN-L	—	—
42	GR	Glass hatch ajar switch	Glass close (OFF) → Open (ON)	Battery voltage → 0
43	R/B	Back door switch (without power back door) or back door latch (with power back door)	Door close (OFF) → Open (ON)	Battery voltage → 0
47	SB	Front door switch LH	Door close (OFF) → Open (ON)	Battery voltage → 0
48	R/Y	Rear door switch LH	Door close (OFF) → Open (ON)	Battery voltage → 0
57	Y/R	Power source (BAT)	—	Battery voltage
67	B	Ground	—	—
70	W/B	Power source (BAT)	—	Battery voltage

## Terminals and Reference Value for IPDM E/R

EIS004IM

Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)	
38	B	Ground	—	—	
39	L	CAN-H	—	—	
40	P	CAN-L	—	—	
45	G/W	Horn relay	When doors locks are operated using key fob (OFF → ON) *1	Battery voltage → 0	
52	L	Headlamp low (LH)	Lighting switch 2ND position	OFF	0
				ON	Battery voltage
54	R/Y	Headlamp low (RH)	Lighting switch 2ND position	OFF	0
				ON	Battery voltage
55	G	Headlamp high (LH)	Lighting switch HIGH or PASS position	OFF	0
				ON	Battery voltage
56	L/W *2 Y *3	Headlamp high (RH)	Lighting switch HIGH or PASS position	OFF	0
				ON	Battery voltage
59	B	Ground	—	0	

\*1: when horn reminder is ON.

\*2: L/W is for USA.

\*3: Y is for Canada.

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

E/S004IN

## CONSULT-II Function (BCM)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

## CONSULT-II INSPECTION PROCEDURE


### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. Turn ignition switch OFF.
2. Connect "CONSULT-II" and "CONSULT-II CONVERTER" to the data link connector.

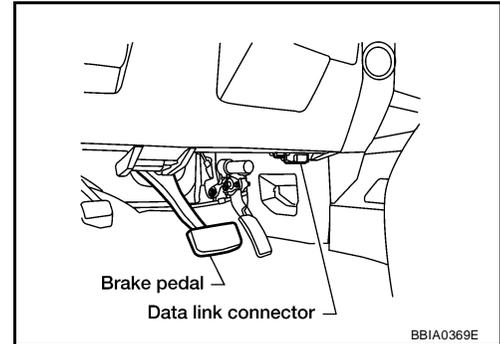

3. Turn ignition switch ON.
4. Touch "START (NISSAN BASED VHCL)".

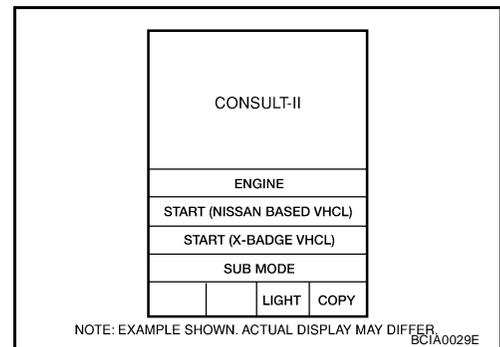


5. Touch "BCM".  
If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

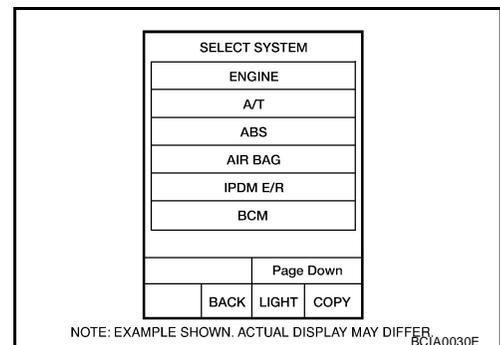


# VEHICLE SECURITY (THEFT WARNING) SYSTEM

6. Touch "THEFT ALM" on the "SELECT TEST ITEM" screen.

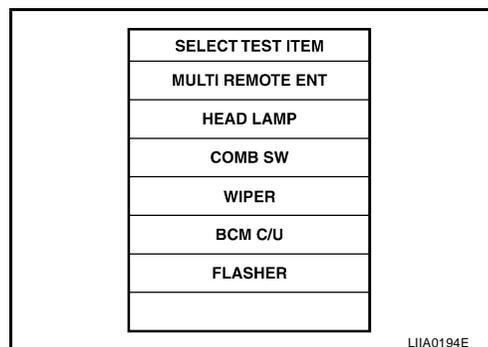

7. Select diagnosis mode. "DATA MONITOR", "ACTIVE TEST" and "WORK SUPPORT" are available.

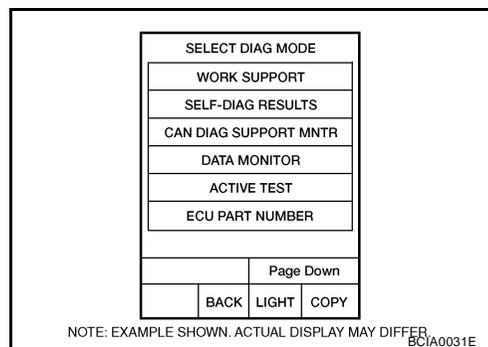

## CONSULT-II APPLICATION ITEM

### Data Monitor

Monitored Item	Description
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.
BACK DOOR SW	Indicates [ON/OFF] condition of back door switch.
TRNK OPN MNTR	Indicates [ON/OFF] condition of glass hatch ajar switch.
ACC ON SW	Indicates [ON/OFF] condition of ignition switch in ACC position.
IGN ON SW	Indicates [ON/OFF] condition of ignition switch in ON position.
KEYLESS UNLOCK	Indicates [ON/OFF] condition of unlock signal from key fob.
KEYLESS LOCK	Indicates [ON/OFF] condition of lock signal from key fob.
KEY CYL LK-SW	Indicates [ON/OFF] condition of lock signal from door key cylinder switch.
KEY CYL UN-SW	Indicates [ON/OFF] condition of unlock signal from door key cylinder switch.
KEYLESS PBD	Indicates [ON/OFF] condition of unlock signal from door key cylinder switch.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from lock/unlock switch.
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from lock/unlock switch.

### Active Test

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-II screen is touched.
HEADLAMP (HI)	This test is able to check vehicle security lamp operation. The highbeam headlamps will be activated for 0.5 seconds after "ON" on CONSULT-II screen is touched.
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation. The horns will be activated for 0.5 seconds after "ON" on CONSULT-II screen is touched.


# VEHICLE SECURITY (THEFT WARNING) SYSTEM

## Work Support

Test Item	Description
SECURITY ALARM SET	This mode can confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT-II screen.

## Trouble Diagnosis WORK FLOW

EIS00410

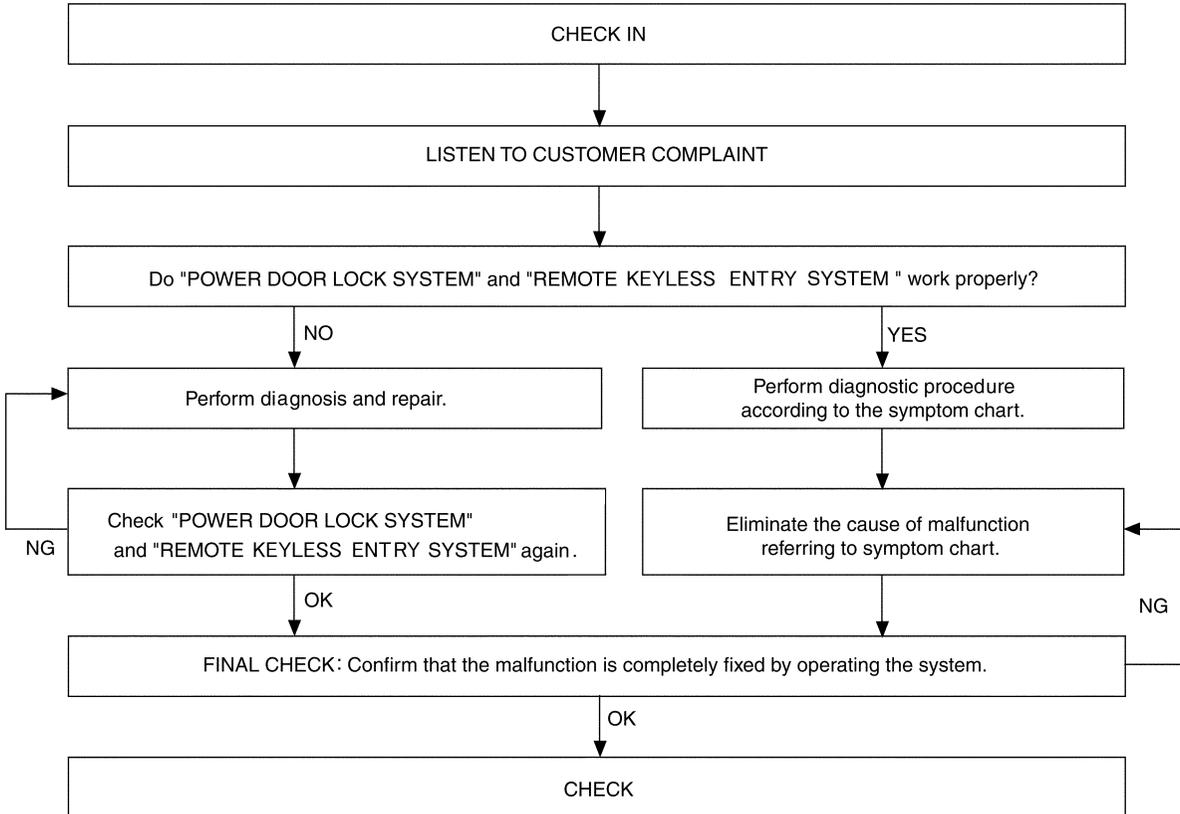

WIIA0599E


- "POWER DOOR LOCK SYSTEM" Diagnosis refer to [BL-16, "POWER DOOR LOCK SYSTEM"](#) .
- "REMOTE KEYLESS ENTRY" Diagnosis refer to [BL-39, "REMOTE KEYLESS ENTRY SYSTEM"](#) .

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

EIS0041P

## Preliminary Check

The system operation is canceled by turning ignition switch to ACC at any step between START and ARMED in the following flow chart.

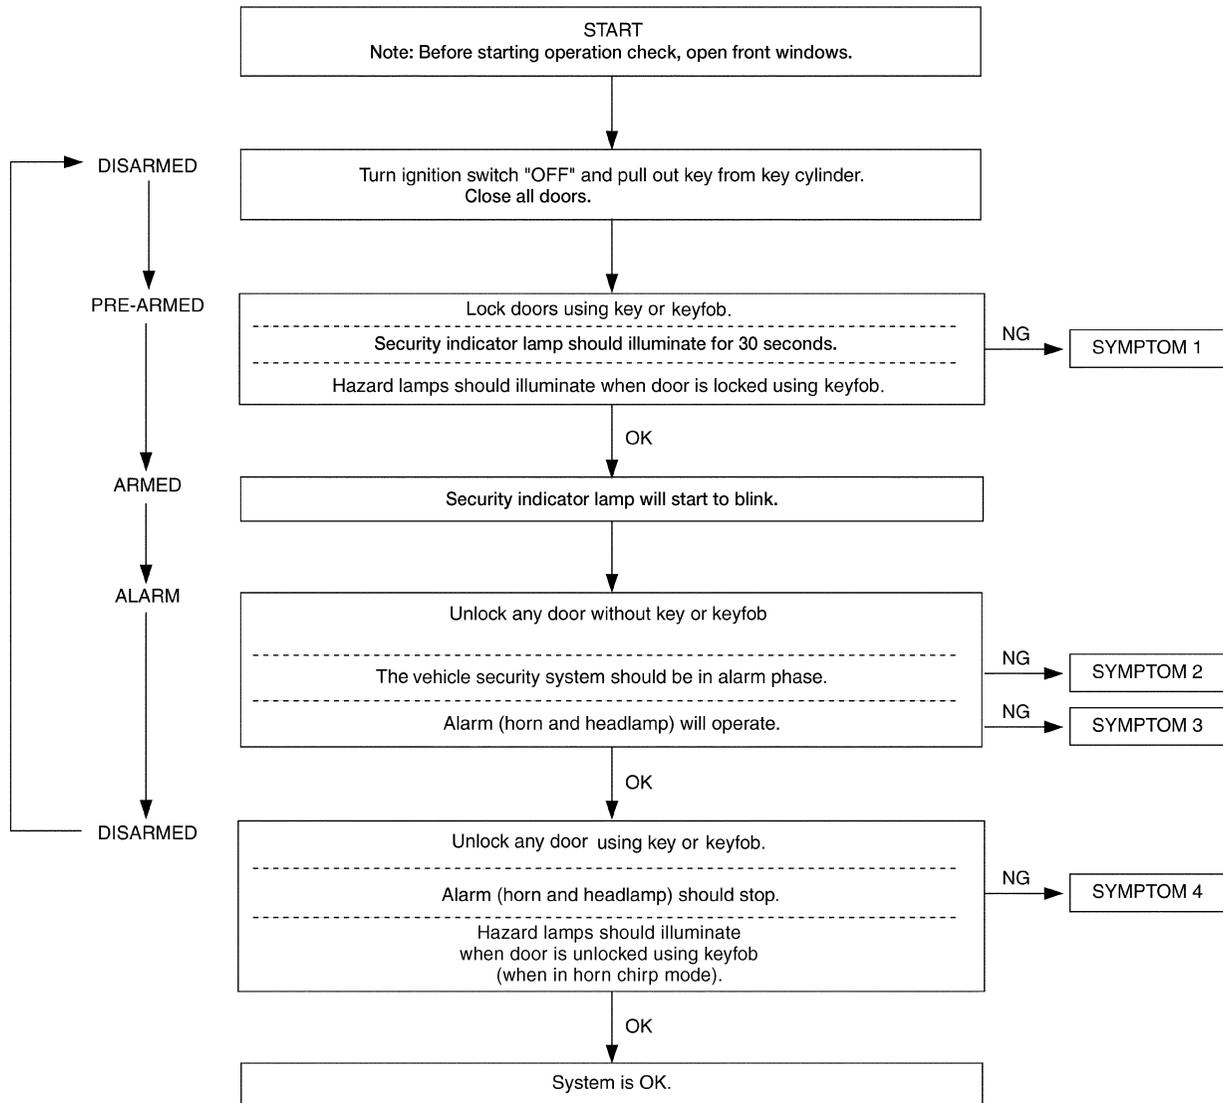

WIA0627E

After performing preliminary check, go to symptom chart.

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

EIS0041Q

## Symptom Chart

PROCEDURE		Diagnostic procedure
SYMPTOM		
1	All items	Diagnostic Procedure 1 Refer to <a href="#">BL-85, "Diagnostic Procedure 1"</a> .
		If the above systems are "OK", replace BCM.
	Lock/unlock switch	Diagnostic Procedure 6 Refer to <a href="#">BL-92, "Diagnostic Procedure 6"</a> .
		If the above systems are "OK", check main power window and door lock/unlock switch.
Door outside key	Diagnostic Procedure 3 Refer to <a href="#">BL-90, "Diagnostic Procedure 3"</a> .	
		If the above systems are "OK", check main power window and door lock/unlock switch.
	Security indicator does not turn "ON".	Diagnostic Procedure 2 Refer to <a href="#">BL-89, "Diagnostic Procedure 2"</a> .
		If the above systems are "OK", replace BCM.
2	Any door or glass hatch is opened.	Diagnostic Procedure 1 Refer to <a href="#">BL-85, "Diagnostic Procedure 1"</a> .
		If the above systems are "OK", replace BCM.
3	Horn alarm	Diagnostic Procedure 5 Refer to <a href="#">BL-91, "Diagnostic Procedure 5"</a> .
		If the above systems are "OK", check horn system. Refer to <a href="#">WW-57, "HORN"</a> .
	Headlamp alarm	Diagnostic Procedure 5 Refer to <a href="#">BL-91, "Diagnostic Procedure 5"</a> .
		If the above systems are "OK", replace BCM.
4	Door outside key	Diagnostic Procedure 3 Refer to <a href="#">BL-90, "Diagnostic Procedure 3"</a> .
		If the above systems are "OK", check main power window and door lock/unlock switch.
	Keyfob	Check remote keyless entry function
		If the above systems are "OK", replace BCM.

\*1 : Make sure the system is in the armed phase.

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

EIS0041R

## Diagnostic Procedure 1

### DOOR SWITCH CHECK

#### 1. CHECK DOOR SWITCHES INPUT SIGNAL

 With CONSULT-II

Check door switches ("DOOR SW-DR", "DOOR SW-AS", "DOOR SW-RL", "DOOR SW-RR", "BACK DOOR SW") in DATA MONITOR mode with CONSULT-II. Refer to [BL-81, "Data Monitor"](#).

- When doors are open:

**DOOR SW-DR** :ON  
**DOOR SW-AS** :ON  
**DOOR SW-RL** :ON  
**DOOR SW-RR** :ON  
**BACK DOOR SW** :ON

- When doors are closed:

**DOOR SW-DR** :OFF  
**DOOR SW-AS** :OFF  
**DOOR SW-RL** :OFF  
**DOOR SW-RR** :OFF  
**BACK DOOR SW** :OFF


DATA MONITOR	
MONITOR	
DOOR SW - DR	OFF
DOOR SW - AS	OFF
DOOR SW - RR	OFF
DOOR SW - RL	OFF
BACK DOOR SW	OFF

LIA0665E

 Without CONSULT-II

Check voltage between BCM connector M18 or M19 terminals 12, 13, 43, 47, 48 and ground.

Connector	Item	Terminals		Condition	Voltage (V) (Approx.)
		(+)	(-)		
M19	Back door switch	43	Ground	Open ↓ Closed	0 ↓ Battery voltage
	Front door switch LH	47			
	Rear door switch LH	48			
M18	Front door switch RH	12			
	Rear door switch RH	13			

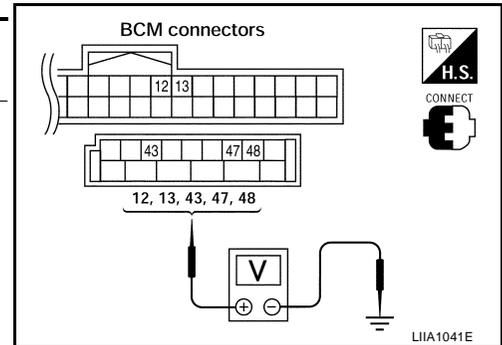

**OK or NG**

- OK >> Door switch circuit is OK.
- NG >> GO TO 2.

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

## 2. CHECK DOOR SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect door switch and BCM.
3. Check continuity between door switch connector (B) B8 (Front LH), B108 (Front RH), B18 (Rear LH), B116 (Rear RH) terminal 2 or (D) D502 (Back without power back door) terminal 3 or (C) D503 (Back with power back door) terminal 7 and BCM connector (A) M18, M19 terminals 12, 13, 43, 47 and 48.


- 2 - 47 :Continuity should exist**  
**2 - 12 :Continuity should exist**  
**2 - 48 :Continuity should exist**  
**2 - 13 :Continuity should exist**  
**3 - 43 :Continuity should exist**  
**7 - 43 :Continuity should exist**

4. Check continuity between door switch connector (B) B8 (Front LH), B108 (Front RH), B18 (Rear LH), B116 (Rear RH) terminal 2 or (D) D502 (Back without power back door) terminal 3 or (C) D503 (Back with power back door) terminal 7 and ground.

- 2 - Ground :Continuity should not exist**  
**3 - Ground :Continuity should not exist**  
**7 - Ground :Continuity should not exist**

### OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace harness.

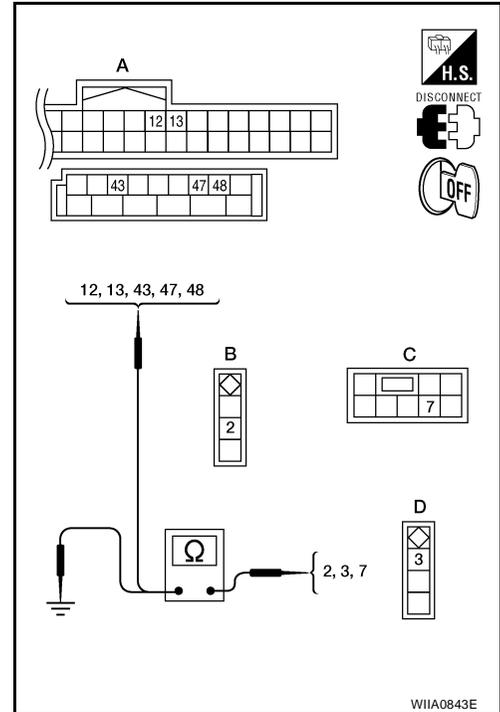


## 3. CHECK DOOR SWITCHES

- Disconnect door switch harness.
- Check continuity between door switch connector terminals.

Switch	Terminals	Condition	Continuity
Door switch (front and rear)	2 - Ground	Open	Yes
		Closed	No
Back door switch (without power back door)	3 - Ground	Open	Yes
		Closed	No
Back door switch (with power back door)	7 - Ground	Open	Yes
		Closed	No

### OK or NG

- OK >> Door switch circuit is OK.  
 NG >> (Front and rear doors) Replace door switch.  
 NG >> (Back door) GO TO 4.

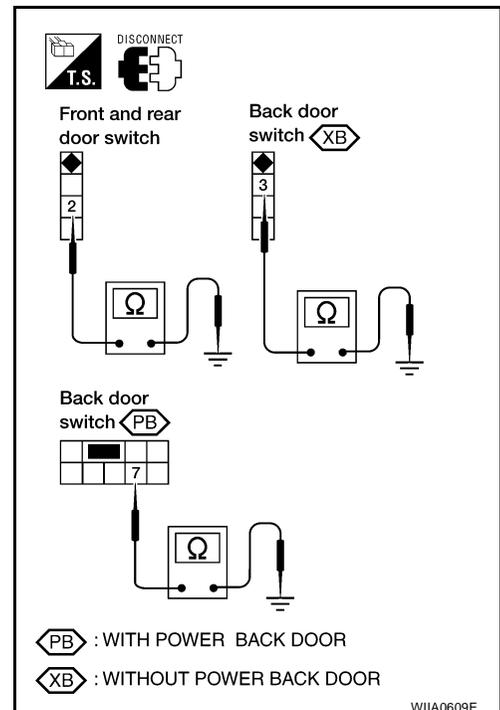

# VEHICLE SECURITY (THEFT WARNING) SYSTEM


## 4. CHECK BACK DOOR SWITCH CIRCUIT

- Check continuity between door switch connector terminal and ground.

Connector	Terminals	Continuity
A: Back door switch (without power back door)	1 – Ground	Yes
B: Back door switch (with power back door)	8 – Ground	Yes

OK or NG

- OK >> Replace back door switch.
- NG >> Repair or replace harness.

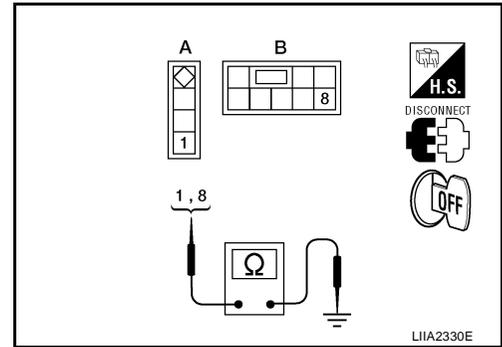


## GLASS HATCH AJAR SWITCH CHECK

### 1. CHECK GLASS HATCH AJAR SWITCH INPUT SIGNAL

With CONSULT-II

Check glass hatch ajar switch ("TRNK OPN MNTR") in DATA MONITOR mode with CONSULT-II. Refer to [BL-81, "Data Monitor"](#).

- When glass hatch is open:  
**TRNK OPN MNTR :ON**
- When glass hatch is closed:  
**TRNK OPN MNTR :OFF**

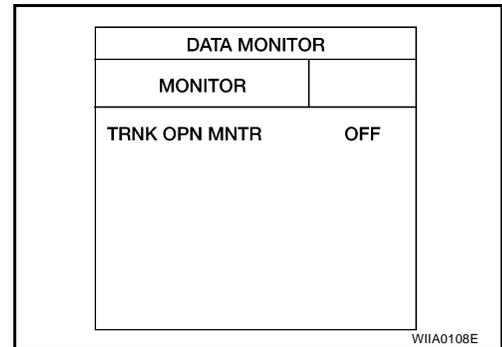


Without CONSULT-II

Check voltage between BCM connector M19 terminal 42 and ground.

Connector	Item	Terminals		Condition	Voltage (V) (Approx.)
		(+)	(-)		
M19	Glass hatch ajar switch	42	Ground	Open ↓ Closed	0 ↓ Battery voltage

OK or NG

- OK >> Glass hatch ajar switch circuit is OK.
- NG >> GO TO 2.

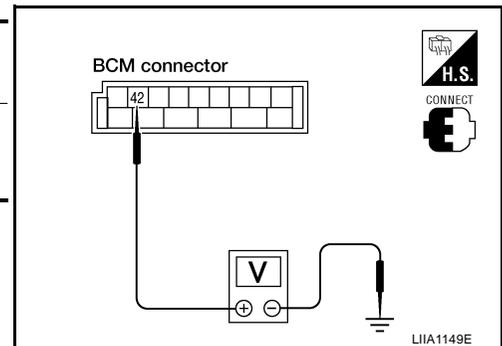

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

## 2. CHECK GLASS HATCH AJAR SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect glass hatch ajar switch and BCM.
3. Check continuity between glass hatch ajar switch connector D707 terminal + and BCM connector M19 terminal 42.


**+ - 42 :Continuity should exist**

4. Check continuity between glass hatch ajar switch connector D707 terminal + and ground.

**+ - Ground :Continuity should not exist**

OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace harness.

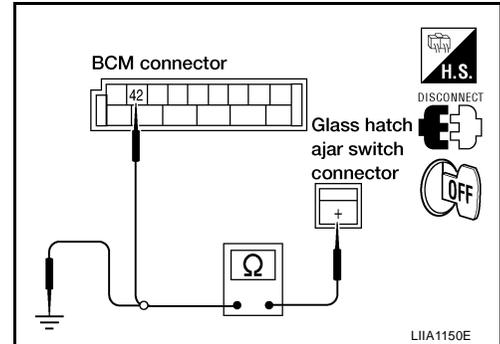


## 3. CHECK GLASS HATCH AJAR SWITCH

- Disconnect glass hatch ajar switch harness.
- Check continuity between glass hatch ajar switch connector terminal and ground.

	Terminals	Condition	Continuity
Glass hatch ajar switch	+ - Ground	Open	Yes
		Closed	No

OK or NG

- OK >> Check glass hatch ajar switch case ground condition.  
 NG >> Replace glass hatch ajar switch, or repair or replace harness.

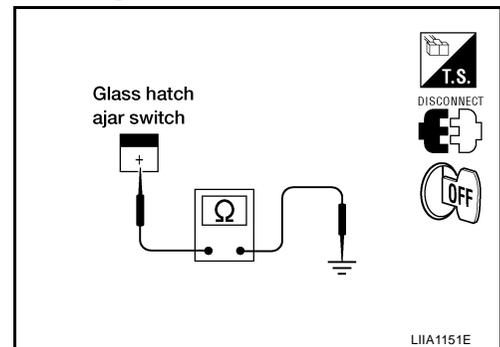

# VEHICLE SECURITY (THEFT WARNING) SYSTEM


EIS004IS

## Diagnostic Procedure 2

### SECURITY INDICATOR LAMP CHECK

#### 1. SECURITY INDICATOR LAMP ACTIVE TEST


☑ With CONSULT-II  
Check "THEFT IND" in "ACTIVE TEST" mode with CONSULT-II.

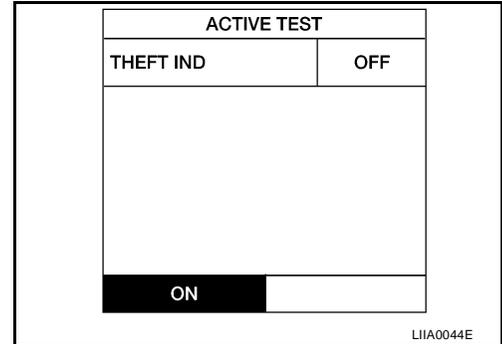

☒ Without CONSULT-II

1. Disconnect BCM.
2. Check voltage between BCM harness connector M18 terminal 23 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
M18	23	Ground	ON	0
			OFF	Battery voltage

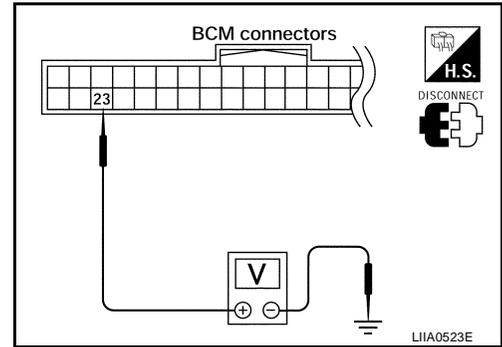

OK or NG

- OK >> Security indicator lamp is OK.
- NG >> GO TO 2.

#### 2. SECURITY INDICATOR LAMP CHECK

Check security indicator lamp condition.

OK or NG

- OK >> GO TO 3.
- NG >> Replace security indicator lamp.

#### 3. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect BCM and security indicator lamp connector.
3. Check continuity between BCM connector (A) M18 terminal 23 and security indicator lamp harness connector (B) M24 terminal 28.


**23 - 28 : Continuity should exist.**

4. Check continuity between BCM connector (A) M18 terminal 23 and ground.

**23 - Ground : Continuity should not exist.**

OK or NG

- OK >> Check the following:
  - 10A fuse [No. 19, located in fuse block (J/B)]
  - Harness for open or short between security indicator lamp and fuse
- NG >> Repair or replace harness.

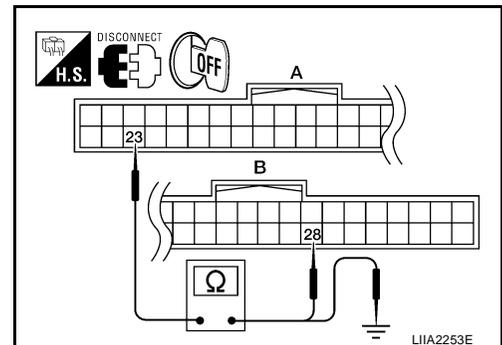

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

EIS0041T

## Diagnostic Procedure 3

### 1. CHECK DOOR KEY CYLINDER SWITCH LH

④ With CONSULT-II

Check front door lock actuator LH (key cylinder switch) ("KEY CYL LK-SW") and ("KEY CYL UN-SW") in DATA MONITOR mode with CONSULT-II. Refer to [BL-81, "Data Monitor"](#).

- When key inserted in left front key cylinder is turned to LOCK:

**KEY CYL LK-SW : ON**

- When key inserted in left front key cylinder is turned to UNLOCK:

**KEY CYL UN-SW : ON**


DATA MONITOR	
MONITOR	
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

LIIA0188E

⊗ Without CONSULT-II

Check voltage between main power window and door lock/unlock switch connector D7 terminals 4, 6 and ground.

Connector	Terminals		Condition of left front key cylinder	Voltage (V) (Approx.)
	(+)	(-)		
D7	4	Ground	Neutral/Unlock	5
			Lock	0
	6		Neutral/Lock	5
			Unlock	0

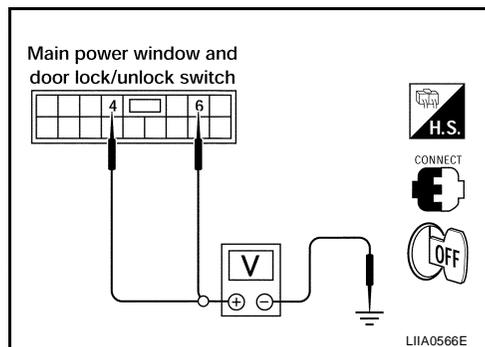


OK or NG

- OK >> Key cylinder switch signal is OK.
- NG >> GO TO 2.

### 2. CHECK DOOR KEY CYLINDER SWITCH LH GROUND HARNESS

Check continuity between front door lock assembly LH (key cylinder switch) connector (A) D14 terminal 5 and body ground.

Connector	Terminals	Continuity
D14	5 – Ground	Yes

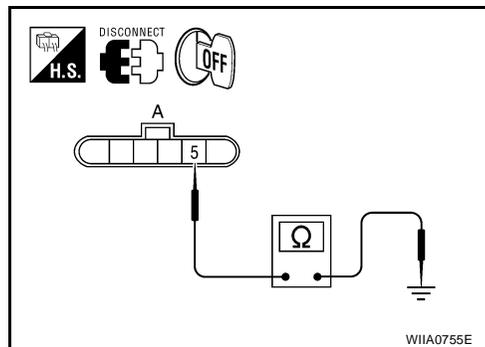

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace harness.

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

## 3. CHECK DOOR KEY CYLINDER SWITCH LH


Check continuity between front door lock assembly LH (key cylinder switch) terminals.

Terminals	Condition	Continuity
1 – 5	Key is turned to UNLOCK or neutral.	No
	Key is turned to LOCK.	Yes
5 – 6	Key is turned to LOCK or neutral.	No
	Key is turned to UNLOCK.	Yes

OK or NG

OK >> GO TO 4.


NG >> Replace front door lock assembly LH (key cylinder switch). Refer to [BL-126, "Removal and Installation"](#).

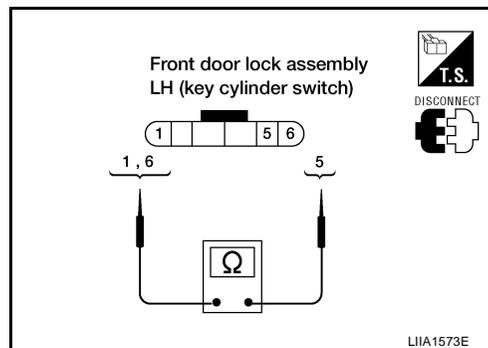

## 4. CHECK DOOR KEY CYLINDER HARNESS

Check continuity between main power window and door lock/unlock switch connector (A) D7 terminals 4, 6 and front door lock assembly LH (key cylinder switch) connector (B) D14 terminals 1, 6 and body ground.

Connector	Terminals	Connector	Terminals	Continuity
A: Main power window and door lock/unlock switch	4	B: Front door lock assembly LH (key cylinder switch)	1	Yes
	6		6	Yes
	4, 6	Ground	No	

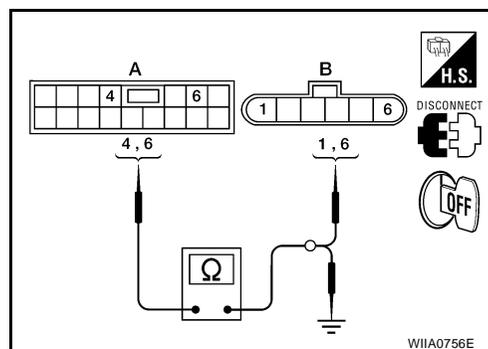

OK or NG

OK >> Replace main power window and door lock/unlock switch.

NG >> Repair or replace harness.

## Diagnostic Procedure 4

EIS004IU

### VEHICLE SECURITY HORN ALARM CHECK

#### 1. CHECK HORN OPERATION

Check if horn sounds with horn switch.

Does horn operate?

Yes >> Check harness for open or short between IPDM E/R and horn relay.

No >> Check horn circuit. Refer to [WW-57, "HORN"](#).

## Diagnostic Procedure 5

EIS004IV

### VEHICLE SECURITY HEADLAMP ALARM CHECK

#### 1. CHECK VEHICLE SECURITY HEADLAMP ALARM OPERATION

Check if headlamps operate with lighting switch.

Do headlamps come on when turning switch ON?

Yes >> Headlamp alarm is OK.

No >> Check headlamp system. Refer to [LT-5, "HEADLAMP \(FOR USA\)"](#).

# VEHICLE SECURITY (THEFT WARNING) SYSTEM

---

## Diagnostic Procedure 6

EIS004IW

DOOR LOCK/UNLOCK SWITCH CHECK

### 1. CHECK DOOR LOCK/UNLOCK SWITCH INPUT SIGNAL

---

Check if power door lock operates with door lock/unlock switch.

Do doors lock/unlock when using each door lock/unlock switch?

- Yes >> Door lock/unlock switch is OK.
- No >> Refer to [BL-31, "Door Lock/Unlock Switch Check"](#) .


# AUTOMATIC BACK DOOR SYSTEM

PF:82580

EIS004IX

## AUTOMATIC BACK DOOR SYSTEM

### Component Parts and Harness Connector Location

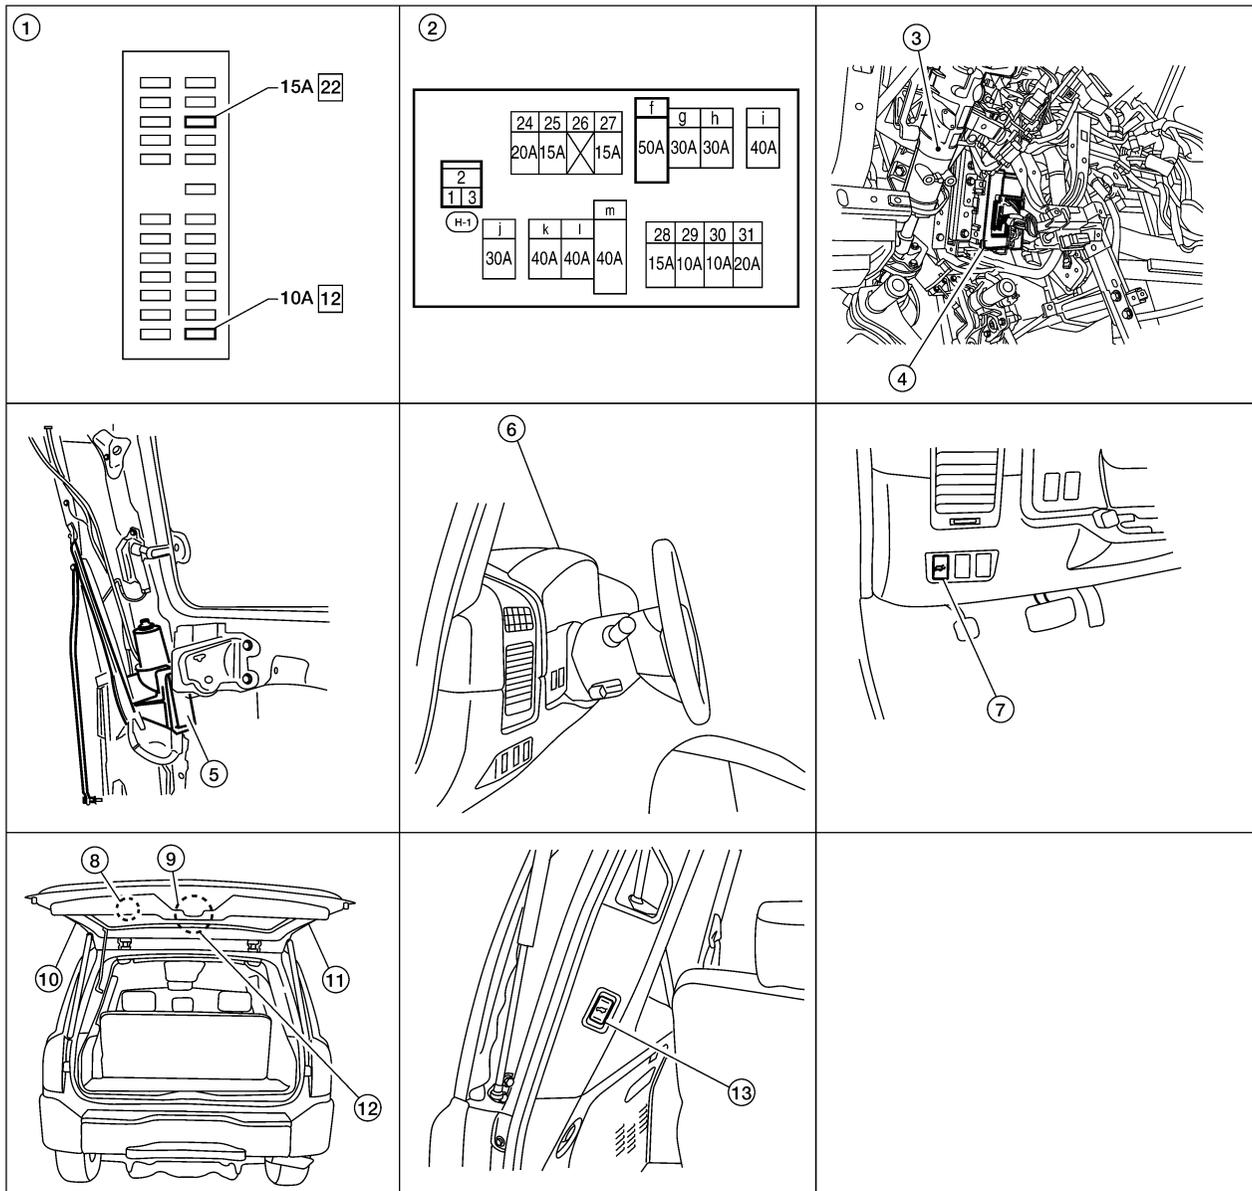

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

W1IA0875E

- |   |                                 |   |
|---|---------------------------------|---|
| 1. Fuse block (J/B)   | 2. Fuse and fusible link box    | 3. Steering column<br>(view with instrument panel LH removed) |
| 4. BCM M18, M19, M20<br>(view with instrument panel LH removed) | 5. Back door control unit B55   | 6. Combination meter M24                                      |
| 7. Power liftgate switch M92                                    | 8. Back door warning chime D514 | 9. Back door latch D503<br>Back door handle switch D706       |
| 10. Pinch strip LH D517   | 11. Pinch strip RH D715         | 12. Glass hatch ajar switch D707                              |
| 13. Back door close switch B63                                  |                                 |   |

# AUTOMATIC BACK DOOR SYSTEM

E/S0041Y

## System Description

### NOTE:

**The automatic back door system must be initialized by fully closing the back door anytime the battery or the back door control unit has been disconnected.**

The automatic back door system consists of a one piece unit that combines the back door control unit along with the back door motor, back door clutch and the back door encoder. The back door latch contains a lock function that can control the two functions of automatic back door latch closure and electrical opener with a single motor when you close the back door to the halfway-state.

- Back door auto closure  
When the back door is closed to the halfway state (half-latch) position, the motor automatically drives to rotate the latch lever and pull it in from half latched to full latched.
- Power back door  
With the back door closed, if you press the power liftgate switch or press the keyfob button, or pull the back door handle with the back door unlocked, the back door latch motor drives the open the locking plate and releases the latch. The back door motor then raises the door to the full open position.  
With the back door fully open, if you press the power liftgate switch, remote keyless entry button or the back door close switch, the back door motor closes the door to the half-latch state. The back door latch motor then drives the latch to the full close position.  
At the onset of each power open or power close application, the hazard lamps will flash 3 times and the warning chime will sound 3 dings lasting a total of 2 seconds.

## OPERATION DESCRIPTION

### Power Liftgate Switch Operation (Fully Closed → Fully Open Operation)

- When the power liftgate switch is pressed, back door control unit terminal 23 receives the signal.
- The back door control unit checks the A/T selector lever (P) position through terminal 18, vehicle speed through terminal 21, ignition status through terminal 7, glass hatch is closed through terminal 17 and battery voltage is present through terminal 3.
- When the back door control unit receives the signal, if the auto back door operating enable conditions are met, it sends a 5 volt signal through terminal 6 and grounds terminal 9 to sound the warning chime, sends a signal to the BCM through terminal 4 to flash the hazard lamps and unlocks the back door latch through terminal 12.
- The back door control unit supplies power to the magnetic clutch and the back door motor and moves the back door in the open direction. (At this time, it also executes speed control, input reverse, and anti-pinch detection control.)
- When the back door is opened to the full-open position, the full-open position is detected by the encoder, and the back door control unit switches the back door motor OFF and the magnetic clutch is pulsed and then turned OFF.
- The back door is held in the fully open position by the gas stays.

### Remote Keyless Entry Operation (Fully Closed → Fully Open Operation)

- When the keyfob button is pressed for at least 0.5 seconds, back door control unit terminal 21 receives the signal.
- The back door control unit checks the A/T selector lever (P) position through terminal 18, vehicle speed through terminal 21, ignition status through terminal 7, glass hatch is closed through terminal 17 and battery voltage is present through terminal 3.
- When the back door control unit receives the signal, if the auto back door operating enable conditions are met, it sends a 5 volt signal through terminal 6 and grounds terminal 9 to sound the warning chime, sends a signal to the BCM through terminal 4 to flash the hazard lamps and unlocks the back door latch through terminal 12.
- The back door control unit supplies power to the magnetic clutch and the back door motor and moves the back door in the open direction. (At this time, it also executes speed control, input reverse, and anti-pinch detection control.)
- When the back door is opened to the full-open position, the full-open position is detected by the encoder, and the back door control unit switches the back door motor OFF and the magnetic clutch is pulsed and then turned OFF.
- The back door is held in the fully open position by the gas stays.

# AUTOMATIC BACK DOOR SYSTEM

## Back Door Handle Switch Operation (Fully Closed → Fully Open Operation)

- When the back door handle is pulled, back door control unit terminal 26 receives the signal. A
- The back door control unit checks that the back door is unlocked and checks the A/T selector lever (P) position through terminal 18, vehicle speed through terminal 21, ignition status through terminal 7, glass hatch is closed, battery voltage and back door close switch position through terminal 13. B
- When the back door control unit receives the signal, if all auto back door operating enable conditions are met, it sends a 5 volt signal through terminal 6 and grounds terminal 9 to sound the warning chime, sends a signal to the BCM through terminal 4 to flash the hazard lamps and unlocks the back door latch through terminal 12. C
- The back door control unit supplies power to the magnetic clutch and the back door motor and moves the back door in the open direction. (At this time, it also executes speed control, input reverse, and anti-pinch detection control.) D
- When the back door is opened to the full-open position, the full-open position is detected by the encoder, and the back door control unit switches the back door motor OFF and the magnetic clutch is pulsed and then turned OFF. E
- The back door is held in the fully open position by the gas stays.

## Power Liftgate Switch Operation (Fully Open → Fully Closed Operation)

- When the power liftgate switch is pressed, the back door control unit terminal 23 receives the signal. F
- The back door control unit checks door position through the rotary encoder. G
- When the back door control unit receives the signal, if the auto back door operating enable conditions are met, it sends a signal through terminal 6 and grounds terminal 9 to sound the warning chime and sends a signal to the BCM through terminal 4 to flash the hazard lamps. H
- The back door control unit supplies power to the magnetic clutch and the back door motor and move the back door in the close direction. (At this time, it also executes speed control, input reverse, and anti-pinch detection control.) I
- When the back door reaches the half-latch state, the half-latch switch detects this and the signal is sent to the back door control unit terminal 22. BL
- When the back door control unit receives the half latch switch signal, it switches OFF the back door motor and the magnetic clutch and operates the cinch latch motor. J
- When the back door latch operates and full close is detected through terminal 14 of the back door control unit, the cinch latch motor reverses to the neutral position and the back door auto closure operation ends and the door is fully closed. K

## Remote Keyless Entry Operation (Fully Open → Fully Closed Operation)

- When the keyfob is pressed for at least 0.5 seconds, the back door control unit terminal 21 receives the signal. L
- The back door control unit checks door position through the rotary encoder. M
- When the back door control unit receives the signal, if the auto back door operating enable conditions are met, it sends a signal through terminal 6 and grounds terminal 9 to sound the warning chime and sends a signal to the BCM through terminal 4 to flash the hazard lamps.
- The back door control unit supplies power to the magnetic clutch and the back door motor and move the back door in the close direction. (At this time, it also executes speed control, input reverse, and anti-pinch detection control.)
- When the back door reaches the half-latch state, the half-latch switch detects this and the signal is sent to the back door control unit terminal 22.
- When the back door control unit receives the half latch switch signal, it switches OFF the back door motor and the magnetic clutch and operates the cinch latch motor.
- When the back door latch operates and full close is detected through terminal 14 of the back door control unit, the cinch latch motor reverses to the neutral position and the back door auto closure operation ends and the door is fully closed.

# AUTOMATIC BACK DOOR SYSTEM

---

## **Back Door Close Switch Operation (Fully Open → Fully Closed Operation)**

- When the back door close switch is pressed, the back door control unit terminal 8 receives the signal.
- The back door control unit checks back door close switch (terminal 13) status and door position (must be fully opened), through rotary encoder and battery voltage.
- When the back door control unit receives the signal, if the auto back door operating enable conditions are met, it sends a signal through terminal 6 and grounds terminal 9 to sound the warning chime and sends a signal to the BCM through terminal 4 to flash the hazard lamps.
- The back door control unit supplies power to the magnetic clutch and the back door motor and move the back door in the close direction. (At this time, it also executes speed control, input reverse, and anti-pinch detection control.)
- When the back door reaches the half-latch state, the half-latch switch detects this and the signal is sent to the back door control unit terminal 22.
- When the back door control unit receives the half latch switch signal, it switches OFF the back door motor and the magnetic clutch and operates the cinch latch motor.
- When the back door latch operates and full close is detected through terminal 14 of the back door control unit, the cinch latch motor reverses to the neutral position and the back door auto closure operation ends and the door is fully closed.

## **Reversal**

The door will reverse direction during power open or close operation if the automatic door main switch, keyfob or back door close switch is operated. A chime will sound to announce the reversal.

## **Anti-Pinch Function**

- During auto operation, if an object is detected in the door's path, a warning chime sounds and the back door operates in the reverse direction to prevent pinching.
- During auto close operation, if an object is detected by the pinch strips in the door's path, a warning chime sounds and the back door operates in the open direction until it is fully open.

## **Gas Stay Check**

- During each power open operation, the back door control unit monitors motor current draw to determine if the gas stays are functioning properly.
- If a malfunction of the gas stays is detected, the back door control unit will close the back door while sounding the warning chime. The back door cannot be opened using the switches until the gas stay malfunction is repaired.

## **Warning Functions**

- The hazard warning lamps flash and a warning chime is sounded according to the back door operating state, operations, and conditions.

# AUTOMATIC BACK DOOR SYSTEM

## Auto Back Door Operation Enable Conditions

Operation	Power liftgate switch		Remote keyless entry		Back door handle switch		Back door close switch
Operating direction	Fully closed → open	Fully open → closed	Fully closed → open	Fully open → closed	Fully closed → open	Fully open → closed	Fully open → closed
Close switch	CANCEL or NEUTRAL				NEUTRAL		NEUTRAL
Vehicle stop condition	A/T selector lever in P or N range and vehicle speed less than 2 km/h or ignition switch in OFF position	—	A/T selector lever in P or N range and vehicle speed less than 2 km/h or ignition switch in OFF position	—	A/T selector lever in P or N range and vehicle speed less than 2 km/h or ignition switch in OFF position	—	—
Battery voltage	Approx. 11V or more						
Back door lock status	—	—	—	—	Unlocked	—	—
Glass hatch	Closed						

## Control When Operating Enable Conditions Not Met During Power Open/Close

Items	Operation condition	Not met case	Control
A/T selector lever P position	P or N position with ignition ON or any position with ignition OFF	Other	Continue power open or close, but sounds warning chime.
Back door close switch	NEUTRAL	CANCEL	Cancels power open/close operation or door will release to manual mode.
Voltage drop	11V or more	11 > V > 9	
		9 > V > reset voltage	
		Reset voltage > V	No power function available
Handle switch	Normal (GND)	Error (OPEN)	No operation. Cancel power open/close release to manual.
Glass hatch	Closed	OFF	Cancels power door open operation, door will release to manual mode.

## Control When Operating Enable Conditions No Longer Met

Description	Operation	Control
Back door close switch turned to CANCEL	Warning chime active → Shift to manual mode after full open or close operation is complete (Recovery to power mode when main switch turned OFF or door fully closed)	→ Shift to manual mode
A/T selector lever P or N position with ignition switch ON	Warning chime active and one-way operation continuous (Warning chime inactive and door fully open or fully closed or operating conditions recovered)	Full open: power close operation allowed Full close: operating conditions not met → no power open function.
Voltage drop 11 - 9V	One-way operation continued (equivalent to the case of starting voltage ← 11V for handle operation with warning chime active)	Not allowed
Voltage drop less than 9V (Microcomputer reset voltage - clutch hold voltage)	<ul style="list-style-type: none"> <li>● Motor stopped</li> <li>● Clutch may slip</li> <li>● Control not possible because microcomputer being reset</li> </ul>	Control not possible because microcomputer being reset

# AUTOMATIC BACK DOOR SYSTEM

## Warning Chime Active Conditions

The warning chime uses two types of audio warnings, a friendly chime and a warning chime. The friendly chime consists of dings lasting 0.66 seconds each immediately followed by the next ding. The warning chime consists of beeps lasting 0.33 seconds with a pause of 0.33 seconds between each beep.

Operation status	Operation or conditions	Warning chime pattern
When auto operation starts	Power liftgate switch operation	Friendly chime 2 seconds, 3 dings
	Remote keyless entry operation	
	Back door handle switch operation	
	Back door close switch operation	
When reverse operation starts	When reverse request is detected from power liftgate switch, remote keyless entry or back door close switch	Friendly chime 1.3 seconds, 2 dings
	When obstacle is detected	Warning chime 2 seconds, 3 beeps
Operating at low voltage	While opening or closing	Warning chime 2 seconds, 3 beeps
A/T selector lever not in P position	Back door close operation	Friendly chime Continuously dings
	Back door open operation	Warning chime Continuously beeps (until close operation is started)


## Reverse Conditions

Type	Overload reverse
Operation covered	Both directions
Detection method	Operation speed and motor current change direction
	Pinch strips during back door close operation
Non-reversed area	<ul style="list-style-type: none"> <li>● For about 0.5 seconds immediately after drive motor operation starts</li> <li>● Between full open and approx. 7° from full open</li> <li>● Closure operation area (half switch - close switch)</li> </ul>
Number of times reverse allowed	One reversal is allowed (if a second obstacle is detected during a power open or close operation, the door reverts to manual mode).

# AUTOMATIC BACK DOOR SYSTEM

## Schematic

EIS004IZ

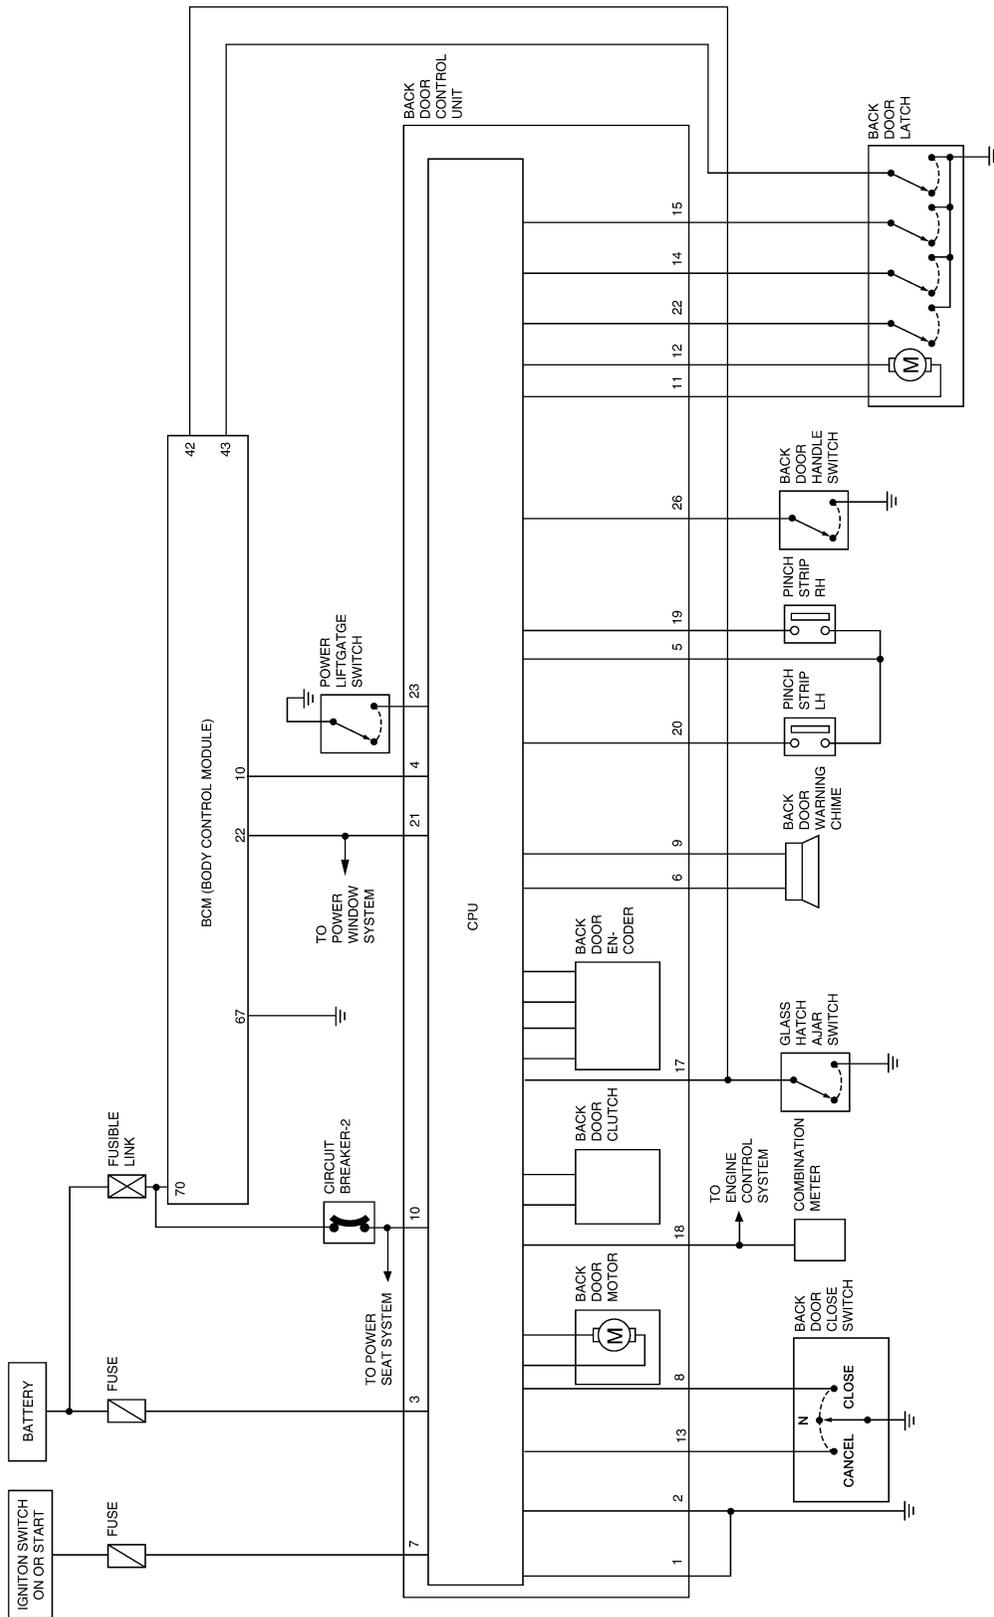



A  
 B  
 C  
 D  
 E  
 F  
 G  
 H  
**BL**  
 J  
 K  
 L  
 M

# AUTOMATIC BACK DOOR SYSTEM



EIS004J0

## Wiring Diagram — B/CLOS —

### BL-B/CLOS-01

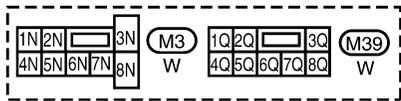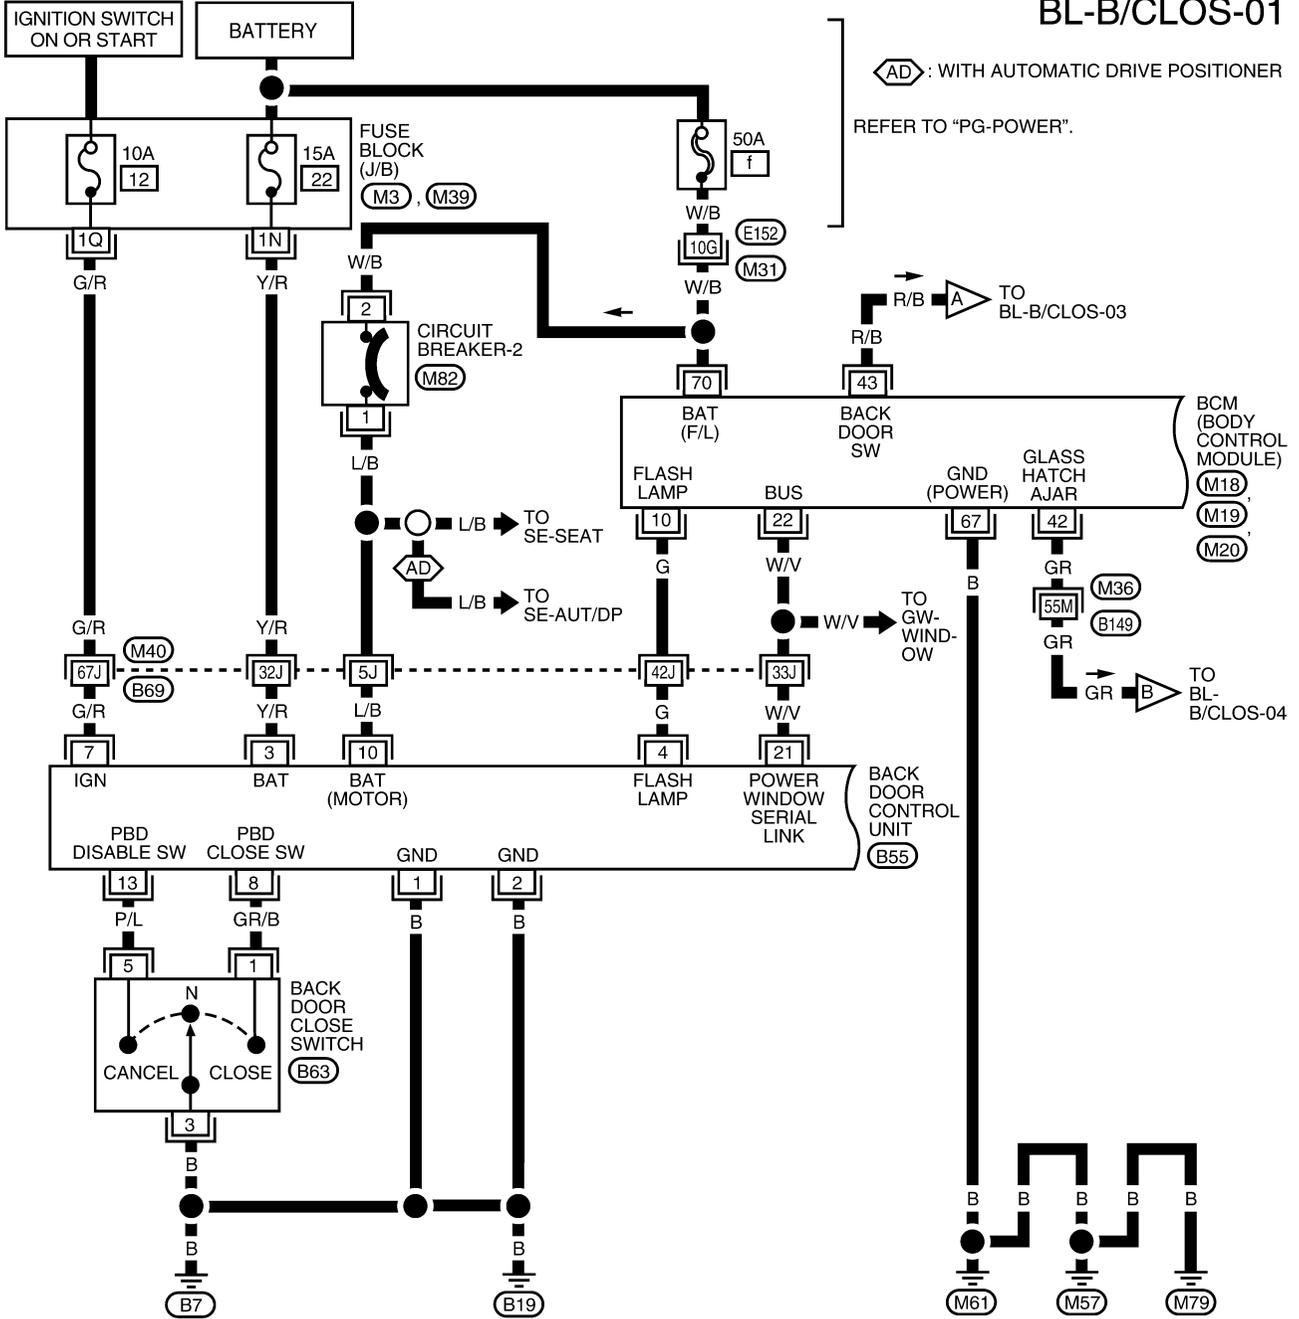


REFER TO THE FOLLOWING.  
M31, M36, M40 - SUPER MULTIPLE JUNCTION (SMJ)

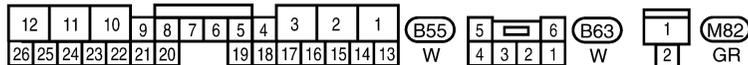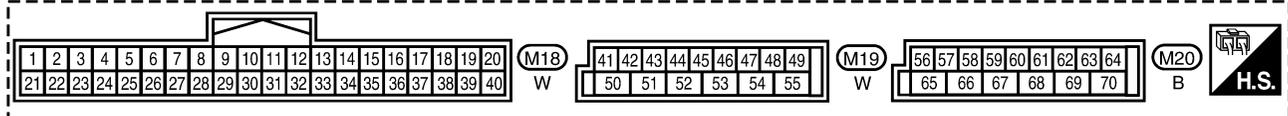

WIWA2217E

# AUTOMATIC BACK DOOR SYSTEM



BL-B/CLOS-02

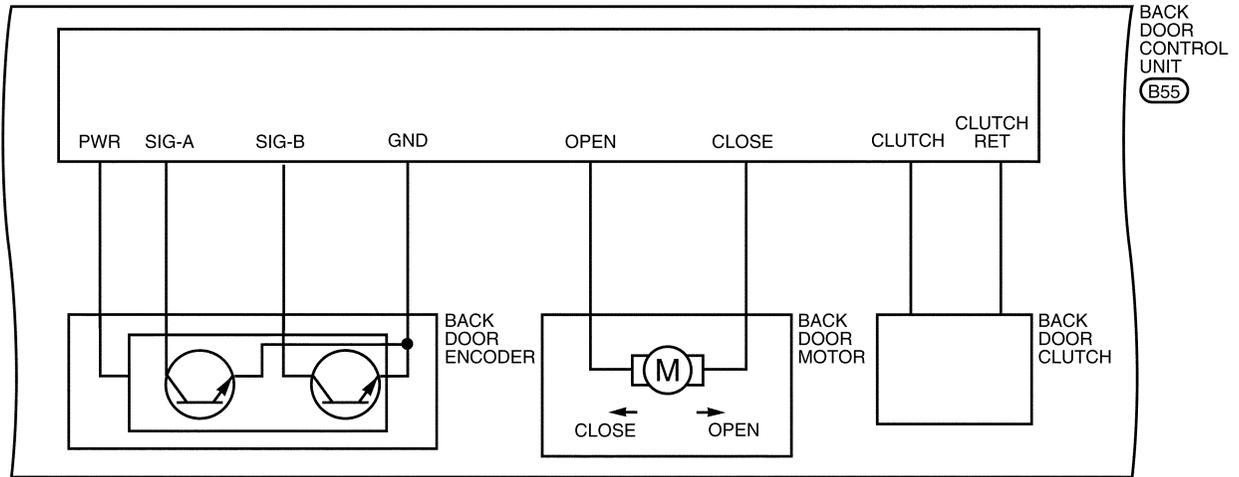

LIWA0149E

# AUTOMATIC BACK DOOR SYSTEM

**BL-B/CLOS-03**

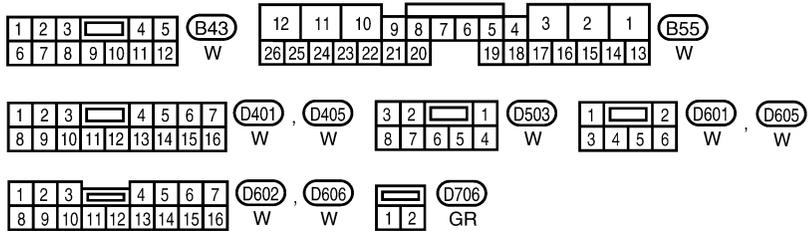
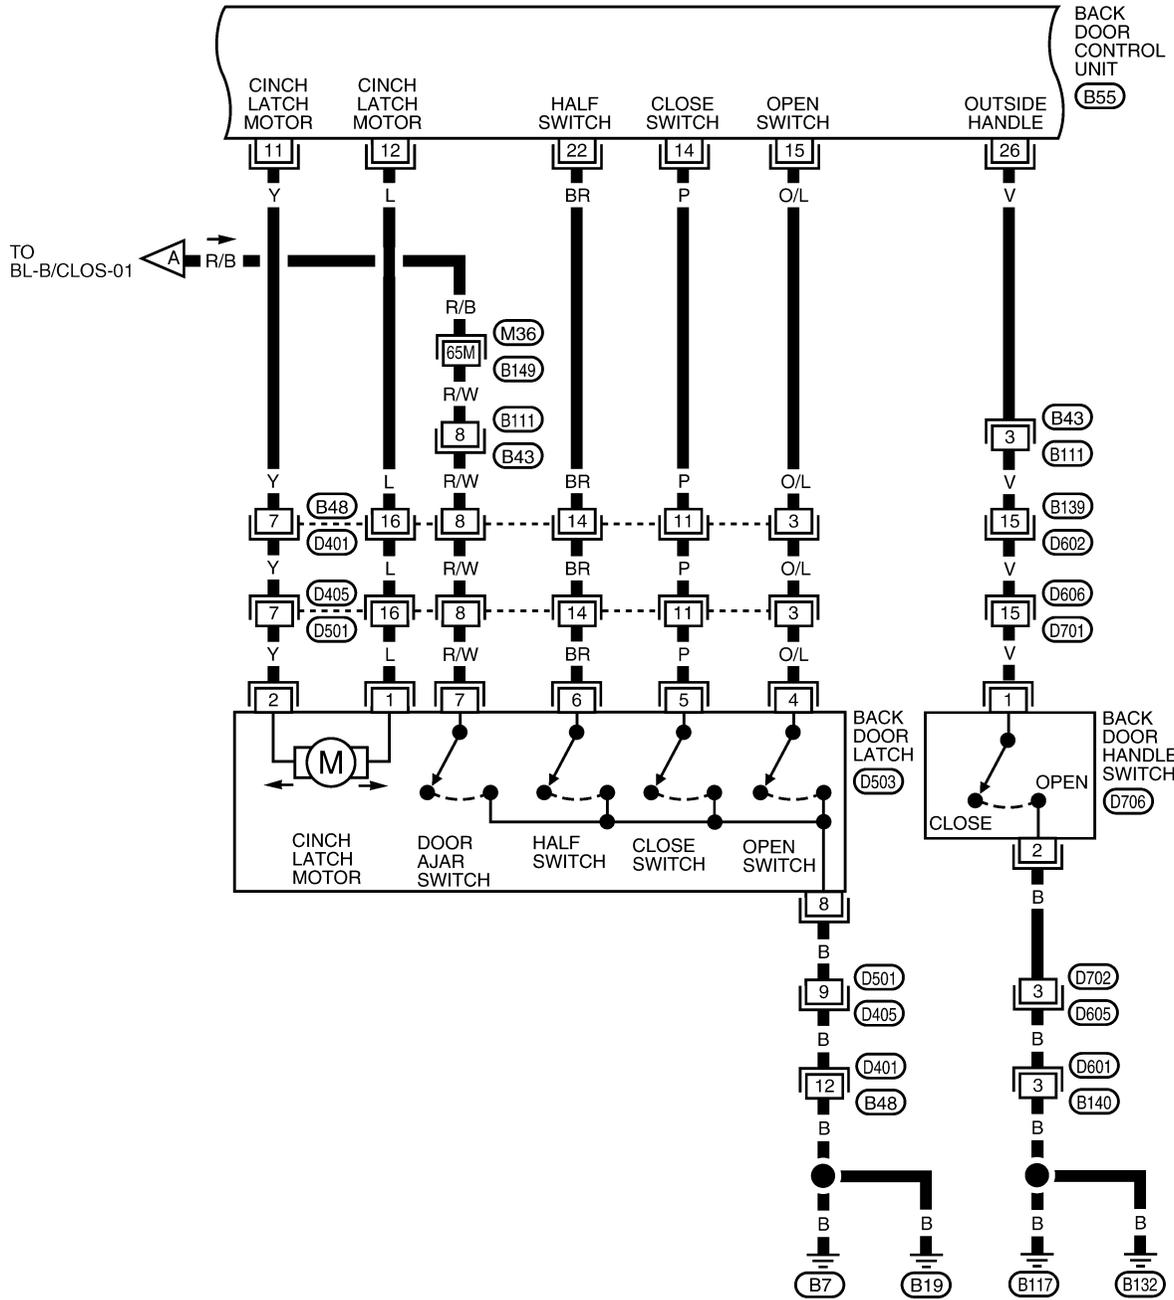


REFER TO THE FOLLOWING.  
**(M36)** - SUPER MULTIPLE JUNCTION (SMJ)

WIWA2222E

# AUTOMATIC BACK DOOR SYSTEM



BL-B/CLOS-04

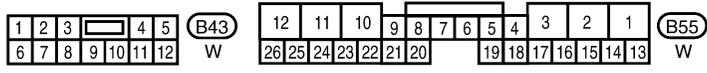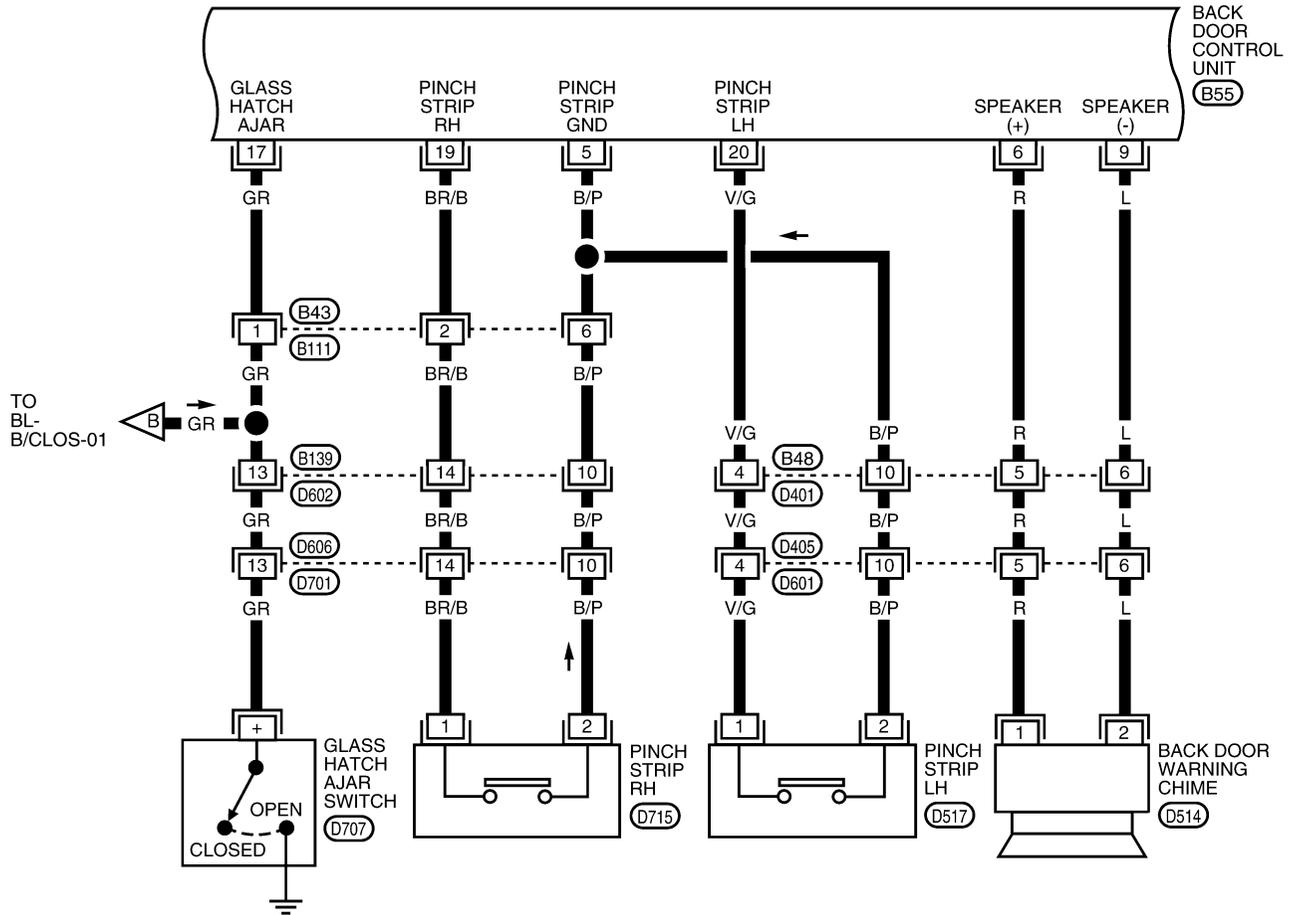

WIIWA2223E

# AUTOMATIC BACK DOOR SYSTEM

BL-B/CLOS-05

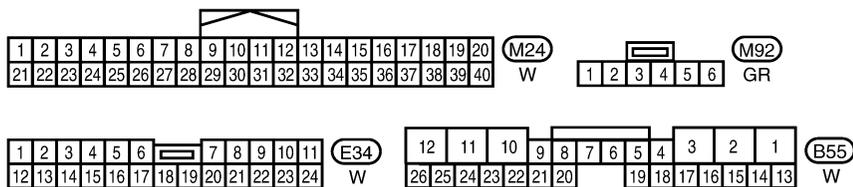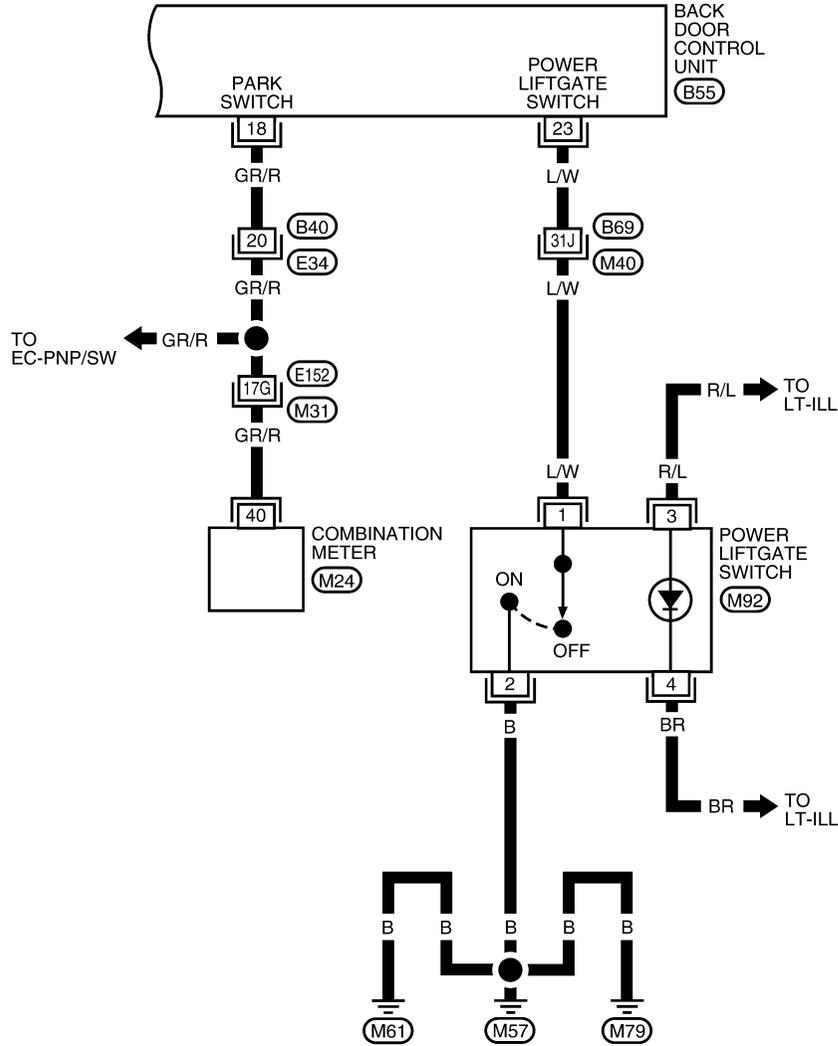




REFER TO THE FOLLOWING.  
 (M31), (M40) - SUPER  
 MULTIPLE JUNCTION (SMJ)

WIWA1232E

# AUTOMATIC BACK DOOR SYSTEM

## Terminals and Reference Value for Back Door Control Unit



E/S004J1

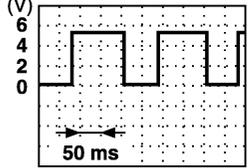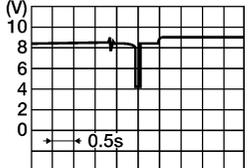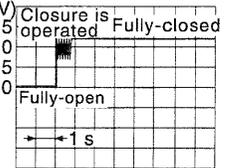Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)
1	B	Ground	—	—
2	B	Ground	—	—
3	Y/R	Battery power supply	—	Battery voltage
4	G	Hazard lamp output	Request to flash hazards	Pulse must be >50ms but less than 250ms  PIIA3278E
5	B/P	Pinch strip ground	—	—
6	R	Warning chime output	Back door motor active	Battery voltage
7	G/R	Ignition switch	Ignition switch ON	Battery voltage
			Ignition switch OFF	0
8	GR/B	Back door close switch	Close position (ON)	0
			Neutral position (OFF)	Battery voltage
9	L	Warning chime ground	—	—
10	L/B	Battery power	—	Battery voltage
11	Y	Cinch latch motor CLOSE output	Back door close operation	Battery voltage
12	L	Closure motor RETURN output	Back door release operation	Battery voltage
13	P/L	Back door close switch	Cancel position	0
			Neutral position	5
14	P	Close switch signal	While fully opening back door	 WIIA1047E
15	O/L	Open switch signal	While fully closing back door	 PIIA2171E
17	GR	Glass hatch ajar signal	Glass hatch OPEN	0
			Glass hatch CLOSED	5
18	GR/R	Park switch	P or N position (Ignition is ON)	0
			Other (Ignition is ON)	9
19	BR/B	Pinch strip RH	Detecting obstruction	0
			Other	5
20	V/G	Pinch strip LH	Detecting obstruction	0
			Other	5

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

**BL**


# AUTOMATIC BACK DOOR SYSTEM

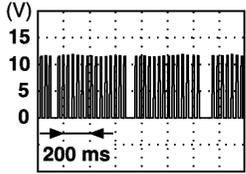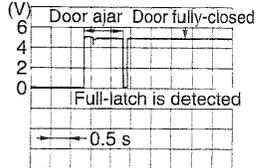Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)
21	W/V	Power window serial link	—	 <p style="text-align: right; font-size: small;">PIIA2344E</p>
22	BR	Half switch signal	Back door half latch position	 <p style="text-align: right; font-size: small;">PIIA2169E</p>
23	L/W	Power liftgate switch	ON	0
			OFF	Battery voltage
26	V	Outside handle signal	Back door handle switch (at rest)	Battery voltage
			Back door handle switch (open)	0

# AUTOMATIC BACK DOOR SYSTEM

## Terminals and Reference Value for BCM

E/S004J2

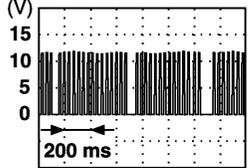Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)
10	G	Hazard lamp flash input	Back door active	0
			Other	5
22	W/V	Bus	—	 <p style="text-align: right; font-size: small;">PIIA2344E</p>
42	GR	Glass hatch ajar switch	Open	0
			Closed	5
43	R/B	Back door latch (door ajar switch)	Open	0
			Closed	5
67	B	Ground	—	0
70	W/B	Battery power supply	—	Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
J  
K  
L  
M

BL

# AUTOMATIC BACK DOOR SYSTEM

EIS004J3

## Trouble Diagnosis Procedure

1. Check the symptom and customer's requests.
2. Understand outline of system. Refer to [BL-94, "System Description"](#) .
3. Confirm system operation.
4. Perform self-diagnosis procedures. Refer to [BL-108, "Self-Diagnosis Procedures"](#) .
5. Refer to trouble diagnosis chart by symptom, repair or replace any malfunctioning parts. Refer to [BL-108, "Trouble Diagnosis Procedure"](#) .
6. Inspection End.

## Self-Diagnosis Procedures

EIS005XF

### INPUT SIGNAL CHECK MODE

Input signal check mode allows testing of switch input signal to the back door control unit.

To activate input signal check mode on the automatic sliding door, perform the following steps:

1. Turn ignition switch OFF.
2. Turn back door close switch to CANCEL (system cancelled).
3. Place A/T selector lever in P position.
4. Using the inside emergency release lever, open the back door.
5. Have an assistant press and hold the back door handle switch.
6. While the assistant continues to hold the back door handle switch, turn ignition switch ON (DO NOT start engine).
7. After approximately 5 seconds, the back door warning chime will sound for 0.5 seconds.
8. Release the back door handle switch.
9. Within 8 seconds of the back door warning chime sounding, press and hold the power liftgate switch.
10. After approximately 5 seconds, the back door warning chime will sound for 1 second.
11. Release the power liftgate switch.
12. The input signal check mode is now initialized.

The input signal check mode can test the following inputs. The back door warning chime will sound for approximately 0.5 seconds each time a switch signal input occurs. Use this test when one of these inputs is not responding during normal automatic back door operation.

Switch signal	Operation	Refer to
Power liftgate switch	OFF → ON	<a href="#">BL-111</a>
Back door close switch (CLOSE)	OFF → ON	<a href="#">BL-113</a>
Back door close switch (CANCEL)	OFF → ON	<a href="#">BL-114</a>
Back door handle switch	OFF → ON	<a href="#">BL-120</a>
A/T device (park switch)	P position → other than P position	<a href="#">AT-221</a>
Vehicle speed*	Vehicle speed	—
Remote keyless entry signal	Keyfob switch OFF → ON	<a href="#">BL-39</a>
Door lock/unlock signal	LOCK → UNLOCK	<a href="#">BL-16</a>
Pinch strip LH signal	OFF → ON	<a href="#">BL-116</a>
Pinch strip RH signal	OFF → ON	<a href="#">BL-116</a>

\*Back door warning chime should sound as soon as vehicle moves.

Turn ignition switch OFF to end input signal check mode.

### OPERATING CHECK MODE

Operating check mode allows self-diagnosis of the automatic back door system.

To activate operating check mode on the automatic back door, perform the following steps:

1. Turn ignition switch OFF.
2. Turn back door close switch to CANCEL (system cancelled).
3. Place A/T selector lever in P position.
4. Using the inside emergency release lever, open the back door.

# AUTOMATIC BACK DOOR SYSTEM

5. Have an assistant press and hold the back door handle switch.
  6. While the assistant continues to hold the back door handle switch, turn ignition switch ON (DO NOT start engine).
  7. After approximately 5 seconds, the back door warning chime will sound for 0.5 second.
  8. Release the back door handle switch.
  9. Within 8 seconds of the back door warning chime sounding, press the power liftgate switch 5 times in rapid succession.
  10. After approximately 5 seconds, the back door warning chime will sound for 1 second.
  11. Release the power liftgate switch.
  12. Immediately close the back door manually.
  13. Press and release the power liftgate switch to activate the operating check mode.
- Self-diagnosis results are indicated by the back door warning chime.

Back door warning chime order	Back door warning chime length	
Start self-diagnosis	1.5 seconds	
	OK	NG
1. Operating conditions diagnosis	0.5 second	0.2 second
2. Back door encoder diagnosis	0.5 second	0.2 second
3. Back door clutch diagnosis	0.5 second	0.2 second
4. Back door motor diagnosis	0.5 second	0.2 second
5. Cinch latch motor diagnosis	0.5 second	0.2 second
Restart self-diagnosis	1.5 seconds	

Item	NG Result	Refer to
1. Operating conditions diagnosis result	One of the following operating conditions no longer met: ignition switch ON, back door close switch (CANCEL) ON, A/T selector lever in P position	—
2. Back door encoder diagnosis result	Sensor diagnosis/short, pulse signal, pulse signal direction	<a href="#">BL-130</a>
3. Back door clutch diagnosis result	Back door clutch does not operate	<a href="#">BL-130</a>
4. Back door motor diagnosis result	Back door motor does not operate (no operating current)	<a href="#">BL-130</a>
5. Cinch latch motor diagnosis result	Cinch latch motor does not operate (no operating current)	<a href="#">BL-130</a>

Turn ignition switch OFF to end input signal check mode.

## Diagnosis Chart

E/IS004J5

Symptom	Suspect systems	Refer to
Automatic operations are not executed from the back door fully closed or fully open position. (Auto closure operates normally.)	Power liftgate switch system inspection	<a href="#">BL-111</a>
	Park switch	—
	Power window serial link	<a href="#">GW-16</a>
	Pinch strip system inspection	<a href="#">BL-116</a>
Automatic operations are not carried out together with open/close operations. (Manual operations are normal.)	Power liftgate switch system inspection	<a href="#">BL-111</a>
	Back door close switch system inspection	<a href="#">BL-113</a>
	Auto back door power supply and ground circuit system inspection.	<a href="#">BL-110</a>
The auto closure function does not operate. (Stops at the halfway position for auto closing operations.)	Pinch strip system inspection	<a href="#">BL-116</a>
During auto closing operations, if obstruction is detected, the door does not operate in reverse.	Back door motor assembly	—

# AUTOMATIC BACK DOOR SYSTEM

Symptom	Suspect systems	Refer to
During close or cinch operations, the door does not operate in reverse if the back door handle is operated.	Handle switch system	<a href="#">BL-120</a>
When the keyfob is operated, the back door does not operate automatically.	Remote keyless entry system inspection	<a href="#">BL-39</a>
	Power window serial link	<a href="#">GW-16</a>
	Pinch strip system inspection	<a href="#">BL-116</a>
Auto closure does not operate.	Half-latch switch system	<a href="#">BL-117</a>
	Cinch latch motor system	<a href="#">BL-121</a>
	Handle switch system	<a href="#">BL-120</a>
The back door does not open. (Closure motor rotation is not reversed.)	Open switch system	<a href="#">BL-118</a>
	Handle switch system	<a href="#">BL-120</a>
Warning chime does not sound.	Back door warning chime system	<a href="#">BL-117</a>
Auto closure operation works, but the back door is not fully closed	Close switch system	<a href="#">BL-119</a>
	Handle switch system	<a href="#">BL-120</a>
	Cinch latch motor system	<a href="#">BL-121</a>
	Back door latch assembly mechanism damaged or worn.	—

## Back Door Power Supply and Ground Circuit Inspection

EIS004J6


### 1. BACK DOOR POWER SUPPLY CIRCUIT INSPECTION

- Turn ignition switch OFF.
- Disconnect back door control unit connector.
- Check voltage between back door control unit connector B55 terminals 3, 10 and ground.

**3 - Ground : Approx. battery voltage**  
**10 - Ground : Approx. battery voltage**

OK or NG

- OK >> GO TO 2.  
 NG >> Repair the back door control unit power supply circuit.

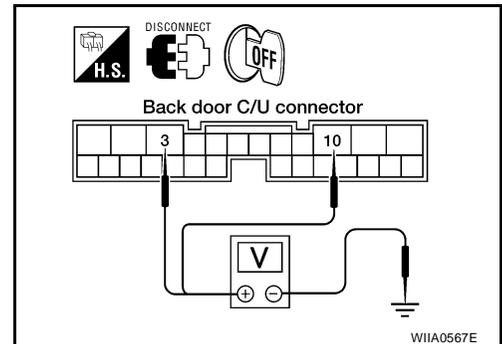


### 2. BACK DOOR GROUND CIRCUIT INSPECTION

Check continuity between back door control unit connector B55 terminal 1, 2 and ground.

**1 - Ground : Continuity should exist.**  
**2 - Ground : Continuity should exist.**

OK or NG

- OK >> Circuit is OK.  
 NG >> Repair the harness between the back door control unit and ground.

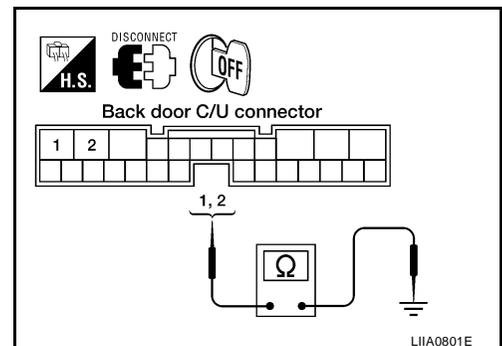

# AUTOMATIC BACK DOOR SYSTEM

E/S004J7

## Power Liftgate Switch System Inspection

### 1. POWER LIFTGATE SWITCH FUNCTION INSPECTION

Check power liftgate switch using switch operation.

OK or NG

- OK >> Power liftgate switch is OK.
- NG >> GO TO 2.


### 2. POWER LIFTGATE SWITCH POWER SUPPLY CIRCUIT INSPECTION

1. Turn ignition switch OFF.
2. Check voltage between power liftgate switch connector M92 terminal 1 and ground.

**1 - Ground : Approx. battery voltage**

OK or NG

- OK >> GO TO 3.
- NG >> Repair the power liftgate switch power supply circuit.

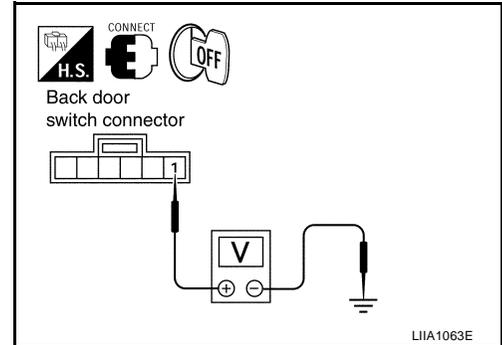


### 3. POWER LIFTGATE SWITCH SIGNAL INSPECTION

1. Turn ignition switch OFF.
2. While operating the power liftgate switch, check voltage between back door control unit connector B55 terminal 23 and ground.

Terminal		Measuring condition	Voltage (V) (Approx.)
(+)	(-)		
23	Ground	Power liftgate switch ON	0
		Power liftgate switch OFF	Battery voltage

OK or NG

- OK >> Switch is OK.
- NG >> GO TO 4.

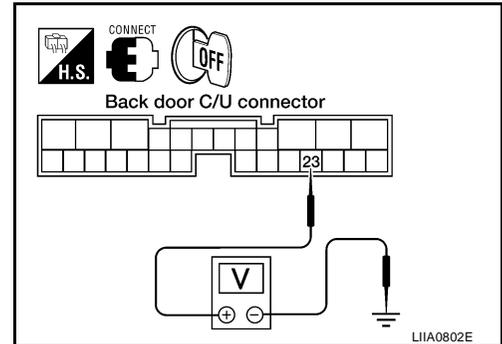


### 4. POWER LIFTGATE SWITCH CIRCUIT INSPECTION

1. Disconnect power liftgate switch and back door control unit connector.
2. Check continuity between power liftgate switch connector M92 terminal 1 and back door control unit connector B55 terminal 23.

**1 - 23 : Continuity should exist.**

OK or NG

- OK >> GO TO 5.
- NG >> Repair the harness between the power liftgate switch and the back door control unit.

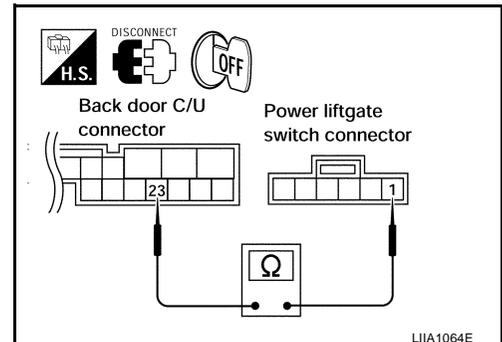

# AUTOMATIC BACK DOOR SYSTEM


## 5. POWER LIFTGATE SWITCH GROUND INSPECTION

Check continuity between power liftgate switch connector terminal 2 and ground.

**2 - Ground : Continuity should exist.**

OK or NG

- OK >> Replace the power liftgate switch.
- NG >> Repair the harness between the power liftgate switch and ground.

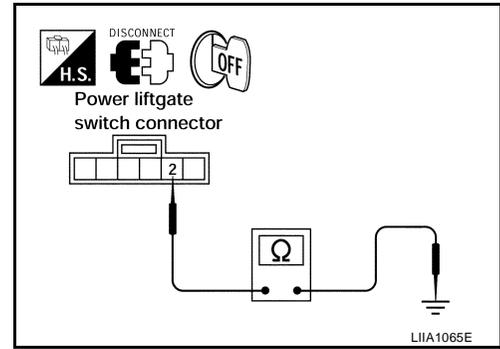


## GLASS HATCH AJAR SWITCH CHECK

### 1. CHECK GLASS HATCH AJAR SWITCH INPUT SIGNAL

With CONSULT-II

Check glass hatch ajar switch ("TRNK OPN MNTR") in DATA MONITOR mode with CONSULT-II. Refer to [BL-26, "DATA MONITOR"](#).

- When glass hatch is open:  
**TRNK OPN MNTR : ON**
- When glass hatch is closed:  
**TRNK OPN MNTR : OFF**

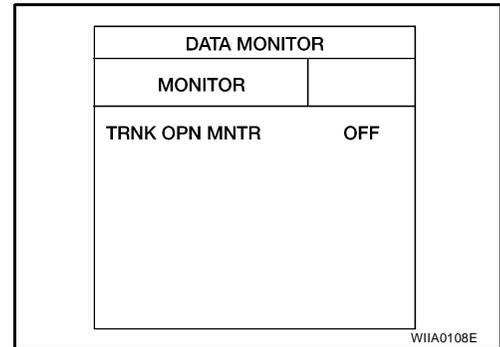


Without CONSULT-II

Check voltage between BCM connector M19 terminal 42 and ground.

Connector	Item	Terminals		Condition	Voltage (V) (Approx.)
		(+)	(-)		
M19	BCM	42	Ground	Open ↓ Closed	0 ↓ Battery voltage

OK or NG

- OK >> System is OK.
- NG >> GO TO 2.

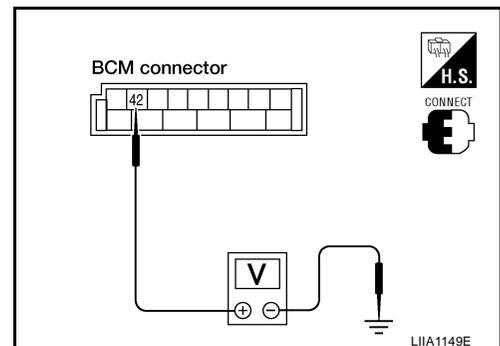

# AUTOMATIC BACK DOOR SYSTEM

## 2. CHECK GLASS HATCH AJAR SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect glass hatch ajar switch, BCM and back door control unit.
3. Check continuity between glass hatch ajar switch connector D707 terminal + and BCM connector M19 terminal 42.


**+ - 42 : Continuity should exist**

4. Check continuity between glass hatch ajar switch connector D707 terminal + and back door control unit connector B55 terminal 17.

**+ - 17 : Continuity should exist**

5. Check continuity between glass hatch ajar switch connector D707 terminal + and ground.

**+ - Ground : Continuity should not exist**

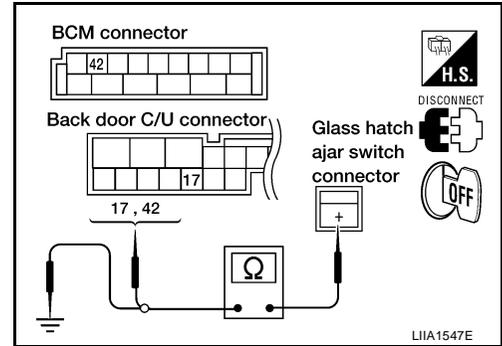

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace harness.


## 3. CHECK GLASS HATCH AJAR SWITCH

1. Disconnect glass hatch ajar switch connector.
2. Check continuity between glass hatch ajar switch connector terminal and ground.

	Terminals	Condition	Continuity
Glass hatch ajar switch	+ - Ground	Open	Yes
		Closed	No

OK or NG

- OK >> Check glass hatch ajar switch case ground condition.
- NG >> Replace glass hatch ajar switch, or repair or replace harness.

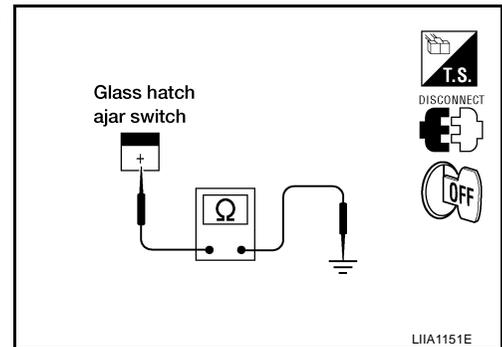

## Back Door Close (Close) Switch System Inspection

### 1. BACK DOOR CLOSE SWITCH FUNCTION INSPECTION

Check back door close (close) switch using switch operation.

OK or NG

- OK >> Back door close switch is OK.
- NG >> GO TO 2.

# AUTOMATIC BACK DOOR SYSTEM


## 2. BACK DOOR CLOSE SWITCH SIGNAL INSPECTION

1. Turn ignition switch OFF.
2. While operating the back door close switch, check voltage between back door control unit connector B55 terminal 8 and ground.

Terminals		Measuring condition		Voltage (V) (Approx.)
(+)	(-)			
8	Ground	Back door close switch	ON	0
			OFF	Battery voltage

### OK or NG

- OK >> Switch is OK.  
 NG >> GO TO 3.

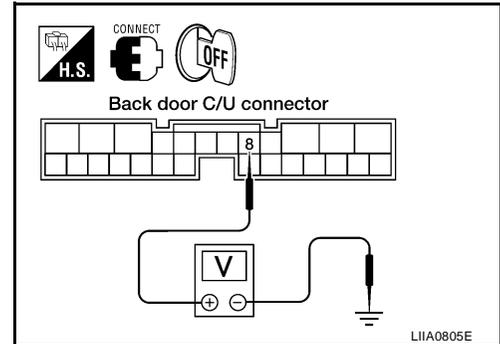


## 3. BACK DOOR CLOSE SWITCH CIRCUIT INSPECTION

1. Disconnect back door close switch and back door control unit connector.
2. Check continuity between back door close switch connector B63 terminal 1 and back door control unit connector B55 terminal 8.

**1 - 8 : Continuity should exist.**

### OK or NG

- OK >> GO TO 4.  
 NG >> Repair the harness between the back door close switch and the back door control unit.

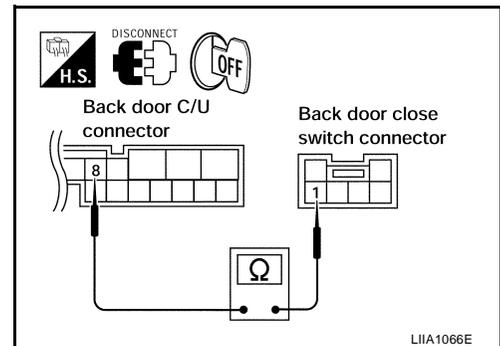


## 4. BACK DOOR CLOSE SWITCH GROUND INSPECTION

Check continuity between back door close switch connector B63 terminal 3 and ground.

**3 - Ground : Continuity should exist.**

### OK or NG

- OK >> Replace the back door close switch.  
 NG >> Repair the harness between the back door close switch and ground.

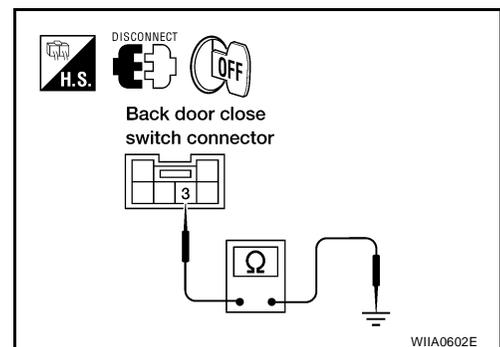

## Back Door Close (Cancel) Switch System Inspection

EIS004J9

### 1. BACK DOOR CLOSE SWITCH FUNCTION INSPECTION

Check back door close (cancel) switch using switch operation.

### OK or NG

- OK >> Back door close switch is OK.  
 NG >> GO TO 2.

# AUTOMATIC BACK DOOR SYSTEM


## 2. BACK DOOR CLOSE (CANCEL) SWITCH SIGNAL INSPECTION

1. Turn ignition switch OFF.
2. While operating the back door close (cancel) switch, check voltage between back door control unit connector B55 terminal 13 and ground.

Terminals		Measuring condition	Voltage (V) (Approx.)
(+)	(-)		
13	Ground	Back door close switch ON	0
		Back door close switch OFF	5

### OK or NG

- OK >> Switch is OK.
- NG >> GO TO 3.

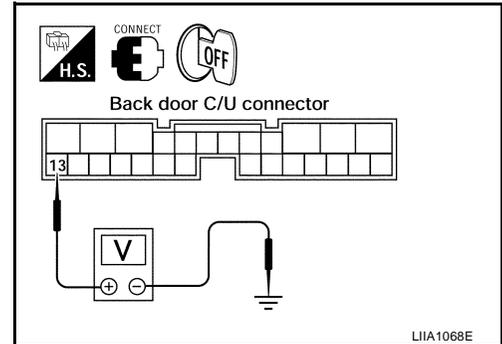


## 3. BACK DOOR CLOSE (CANCEL) SWITCH CIRCUIT INSPECTION

1. Disconnect back door close switch and back door control unit connector.
2. Check continuity between back door close switch connector B63 terminal 5 and back door control unit connector B55 terminal 5.

**5 - 13 : Continuity should exist.**

### OK or NG

- OK >> GO TO 4.
- NG >> Repair the harness between the back door close switch and the back door control unit.

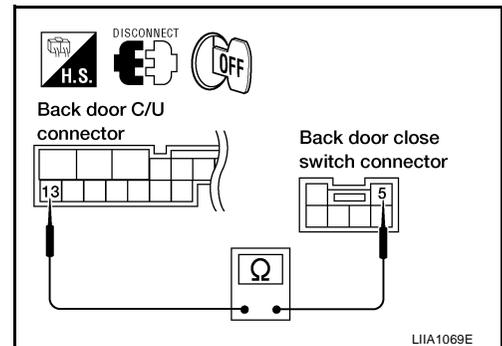


## 4. BACK DOOR CLOSE SWITCH GROUND INSPECTION

Check continuity between back door close switch connector B63 terminal 3 and ground.

**3 - Ground : Continuity should exist.**

### OK or NG

- OK >> Replace the back door close switch.
- NG >> Repair the harness between the back door close switch and ground.

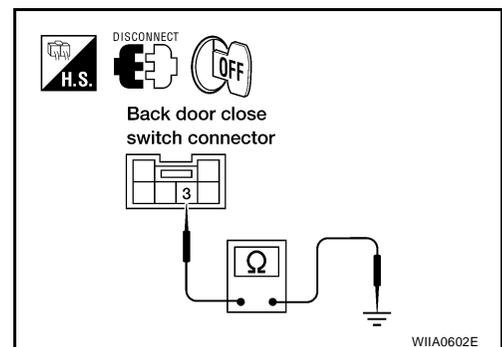

# AUTOMATIC BACK DOOR SYSTEM

EIS004JA

## Pinch Strip System Inspection


### 1. PINCH STRIP SIGNAL INSPECTION

1. Turn ignition switch OFF.
2. While operating the pinch strip, check voltage between back door control unit connector B55 terminals 19, 20 and ground.

Terminals		Measuring condition	Voltage (V) (Approx.)
(+)	(-)		
19	Ground	Pinch strip operation	0
20		Other	4

#### OK or NG

- OK >> Switch is OK.  
 NG >> GO TO 2.

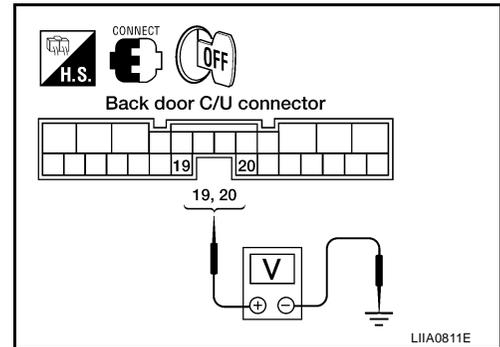


### 2. PINCH STRIP CIRCUIT INSPECTION

1. Disconnect pinch strip and back door control unit connector.
2. Check continuity between pinch strip connector D715 (RH), D517 (LH) terminal 1, 2 and back door control unit connector B55 terminal 5, 19 (RH), 20 (LH).

- 1 - 19** : Continuity should exist.  
**1 - 20** : Continuity should exist.  
**2 - 5** : Continuity should exist.

#### OK or NG

- OK >> GO TO 3.  
 NG >> Repair the harness between the pinch strip and the back door control unit.

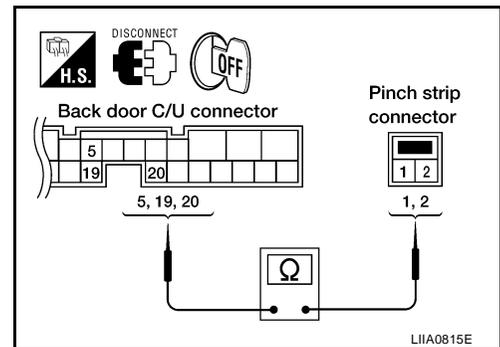


### 3. PINCH STRIP GROUND INSPECTION

1. Connect back door control unit connector.
2. Check continuity between pinch strip connector terminal 2 and ground.

- 2 - Ground** : Continuity should exist.

#### OK or NG

- OK >> Replace the pinch strip.  
 NG >> Repair the harness between the pinch strip and ground.

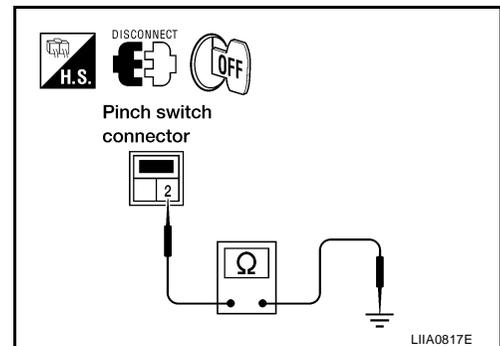

# AUTOMATIC BACK DOOR SYSTEM

## Back Door Warning Chime System Inspection

EIS004JB


### 1. BACK DOOR WARNING CHIME CIRCUIT INSPECTION

1. Disconnect back door warning chime and back door control unit.
2. Check continuity between back door warning chime connector D514 terminal 1 and back door control unit connector B55 terminal 6.

**1 - 6 : Continuity should exist.**

OK or NG

- OK >> GO TO 2.  
 NG >> Repair or replace the harness between the warning chime and the back door control unit.

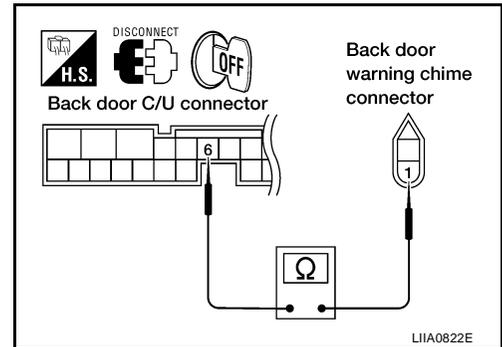


### 2. WARNING CHIME CIRCUIT INSPECTION

Check continuity between back door warning chime connector D514 terminal 2 and back door control unit connector B55 terminal 9.

**2 - Ground : Continuity should exist.**

OK or NG

- OK >> Replace warning chime.  
 NG >> Repair the harness between the warning chime and ground.


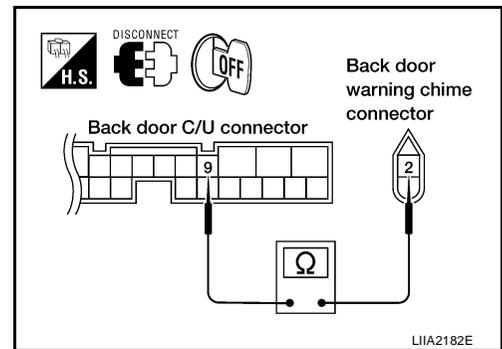


## Half-Latch Switch System Inspection

EIS004JC

### 1. HALF-LATCH SWITCH SIGNAL INSPECTION

1. Turn ignition switch OFF.
2. While fully opening and closing the back door, check voltage between back door control unit connector B55 terminal 22 and ground.

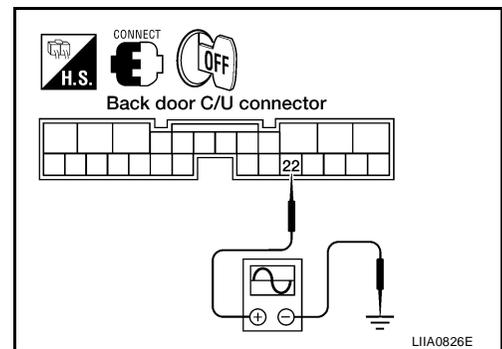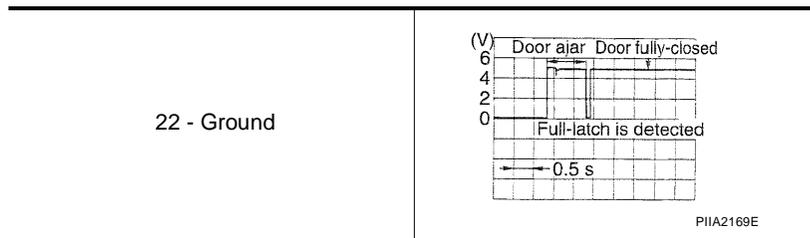

OK or NG

- OK >> Half-latch switch is OK.  
 NG >> GO TO 2.

# AUTOMATIC BACK DOOR SYSTEM


## 2. HALF-LATCH SWITCH CIRCUIT INSPECTION

1. Disconnect back door latch switch and back control unit connector.
2. Check continuity between back door latch (half-latch switch) connector D705 terminal 6 and back control unit connector B55 terminal 22.

**6 - 22 : Continuity should exist.**

OK or NG

- OK >> GO TO 3.
- NG >> Repair the harness between the back door latch (half-latch switch) and the back door control unit.

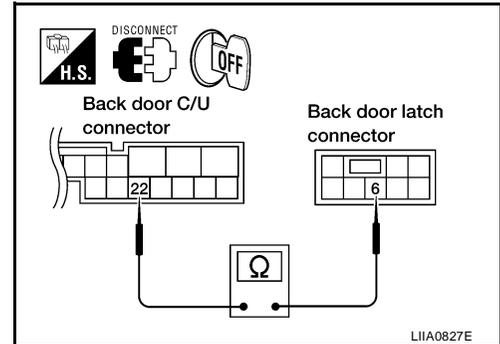


## 3. HALF-LATCH SWITCH GROUND INSPECTION

Check continuity between back door latch (half-latch switch) connector D705 terminal 8 and ground.

**8 - Ground : Continuity should exist.**

OK or NG



- OK >> Replace the back door latch.
- NG >> Repair the harness between the back door latch (half-latch switch) and ground.

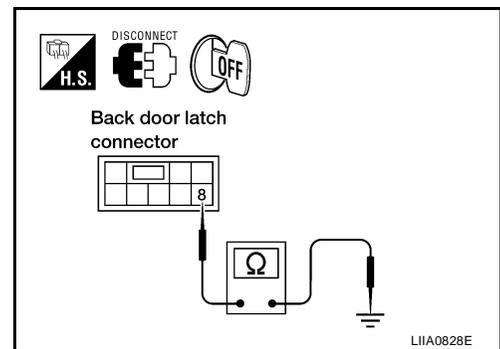

## Open Switch System Inspection

### 1. OPEN SWITCH SIGNAL INSPECTION

1. Turn ignition switch OFF.
2. While fully closing and opening the back door, check voltage between back door control unit connector B55 terminal 15 and ground.

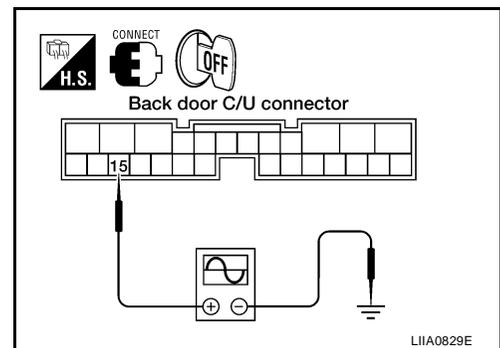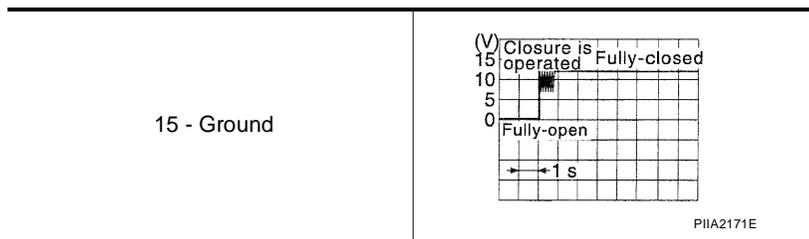

OK or NG

- OK >> Open switch is OK.
- NG >> GO TO 2.

# AUTOMATIC BACK DOOR SYSTEM


## 2. OPEN SWITCH CIRCUIT INSPECTION

1. Disconnect back door latch and back door control unit connector.
2. Check continuity between back door latch (open switch) connector D705 terminal 4 and back door control unit connector B55 terminal 15.

**4 - 15** : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair the harness between the back door latch (open switch) and the back door control unit.

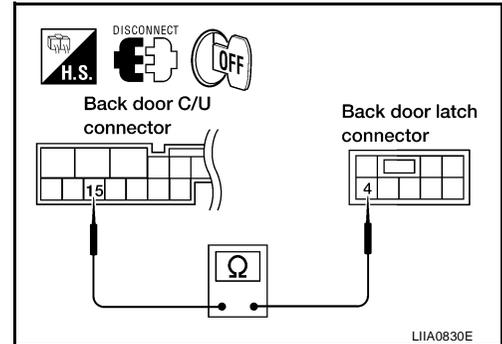


## 3. OPEN SWITCH GROUND INSPECTION

Check continuity between back door latch (open switch) connector D705 terminal 8 and ground.

**8 - Ground** : Continuity should exist.

OK or NG

- OK >> Replace the back door latch.
- NG >> Repair the harness between the back door latch (open switch) and ground.


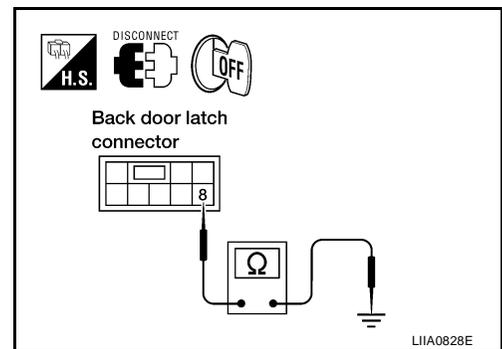


## Close Switch System Inspection

### 1. CLOSE SWITCH SIGNAL INSPECTION

1. Turn ignition switch OFF.
2. While fully opening and closing the back door, check voltage between back door control unit connector B55 terminal 14 and ground.

14 - Ground

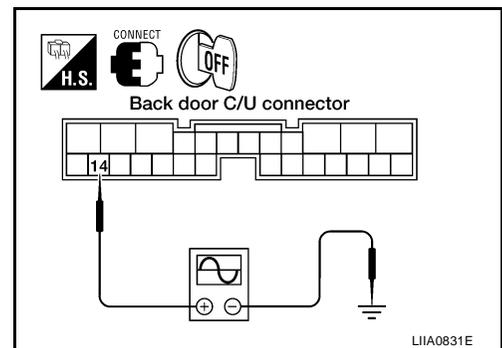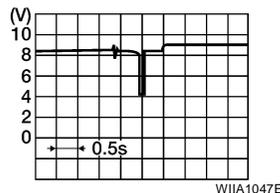

OK or NG

- OK >> Close switch is OK.
- NG >> GO TO 2.

# AUTOMATIC BACK DOOR SYSTEM


## 2. CLOSE SWITCH CIRCUIT INSPECTION

1. Disconnect back door latch and back door control unit connector.
2. Check continuity between back door latch (close switch) connector D705 terminal 5 and back door control unit connector B55 terminal 14.

**5 - 14 : Continuity should exist.**

OK or NG

- OK >> GO TO 3.  
 NG >> Repair the harness between the back door latch (close switch) and the back door control unit.

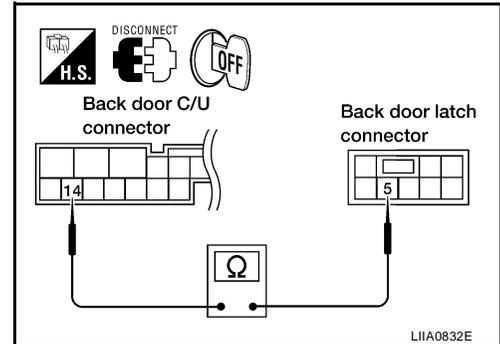


## 3. CLOSE SWITCH GROUND INSPECTION

Check continuity between back door latch (close switch) connector D705 terminal 8 and ground.

**8 - Ground : Continuity should exist.**

OK or NG

- OK >> Replace the back door latch.  
 NG >> Repair the harness between the back door latch (close switch) and ground.

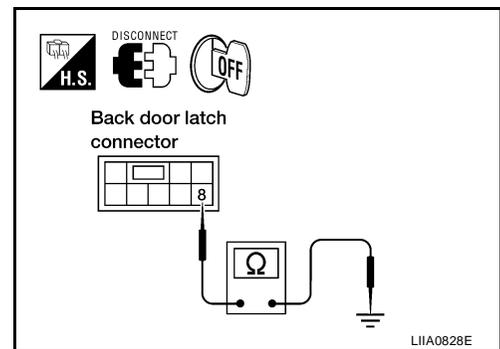

## Back Door Handle Switch System Inspection


### 1. BACK DOOR HANDLE SWITCH SIGNAL INSPECTION

1. Turn ignition switch OFF.
2. While operating the back door handle switch, check voltage between back door control unit connector B55 terminal 26 and ground.

Terminal		Measuring condition	Voltage (V) (Approx.)
(+)	(-)		
26	Ground	Pull the back door handle switch (ON)	0
		Other (OFF)	Battery voltage

OK or NG

- OK >> Switch is OK.  
 NG >> GO TO 2.

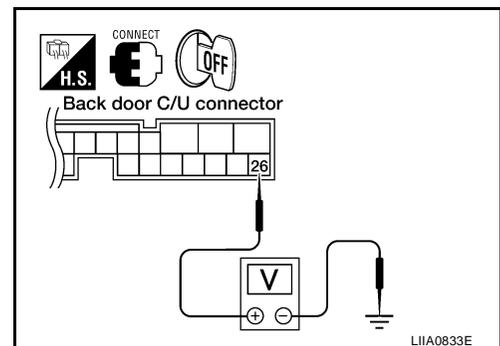

# AUTOMATIC BACK DOOR SYSTEM


## 2. BACK DOOR HANDLE SWITCH CIRCUIT INSPECTION

1. Disconnect back door handle switch and back door control unit connector.
2. Check continuity between back door handle switch connector D706 terminal 1 and back door control unit connector B55 terminal 26.

**1 - 26 : Continuity should exist.**

OK or NG

- OK >> GO TO 4.  
 NG >> Repair the harness between the back door handle switch and the back door control unit.

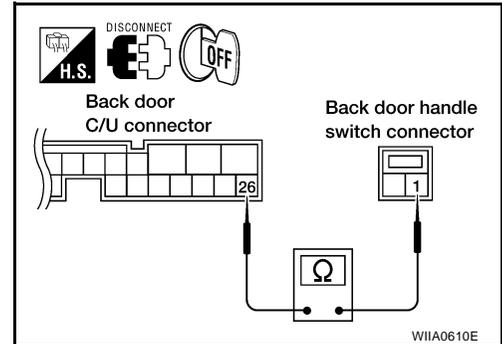


## 3. BACK DOOR HANDLE SWITCH GROUND INSPECTION

Check continuity between back door handle switch connector D706 terminal 2 and ground.

**2 - Ground : Continuity should exist.**

OK or NG

- OK >> Replace the back door handle switch.  
 NG >> Repair the harness between the back door handle switch and ground.

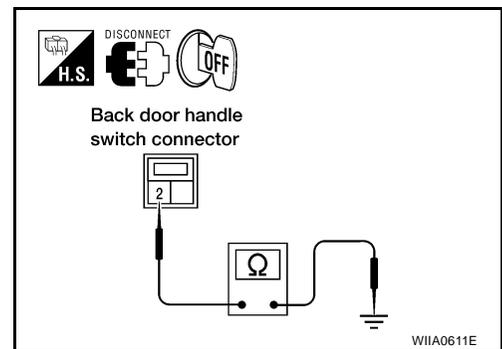

## Cinch Latch Motor System Inspection

### 1. CINCH LATCH MOTOR SIGNAL INSPECTION


1. Turn ignition switch OFF.
2. While fully opening and closing the back door, check voltage between back door control unit connector B55 terminals 11, 12 and ground.

**11 - Ground : Battery voltage.**

**12 - Ground : Battery voltage.**

OK or NG

- OK >> GO TO 2.  
 NG >> Replace the back door control unit.

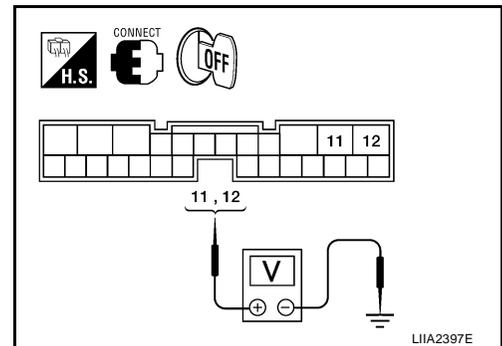

### 2. CINCH LATCH MOTOR CIRCUIT INSPECTION


1. Disconnect back door latch and back door control unit connector.
2. Check continuity between back door latch (cinch latch motor) connector D705 terminals 1, 2 and back door control unit connector B55 terminals 11, 12.

**1 - 12 : Continuity should exist.**

**2 - 11 : Continuity should exist.**

OK or NG

- OK >> GO TO 3.  
 NG >> Repair the harness between the back door latch (cinch latch motor) and the back door control unit.

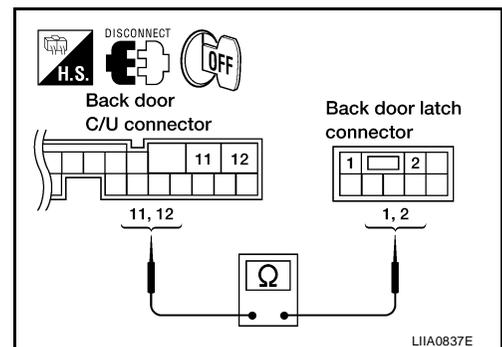

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

BL

# AUTOMATIC BACK DOOR SYSTEM

## 3. CINCH LATCH MOTOR OPERATION INSPECTION

Connect battery power to terminals 1 and 2 on the back door latch connector and check motor operation.


**1 (+) - 2 (-) : It operates.**

**1 (-) - 2 (+) : It operates. (Reverse rotation)**

### OK or NG

OK >> Motor is OK.

NG >> Replace the back door latch.

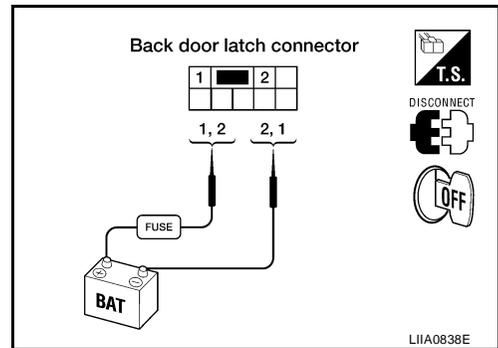

# DOOR


## DOOR

### Fitting Adjustment

PPF:80100

EIS004JH

SEC. 800 • 820

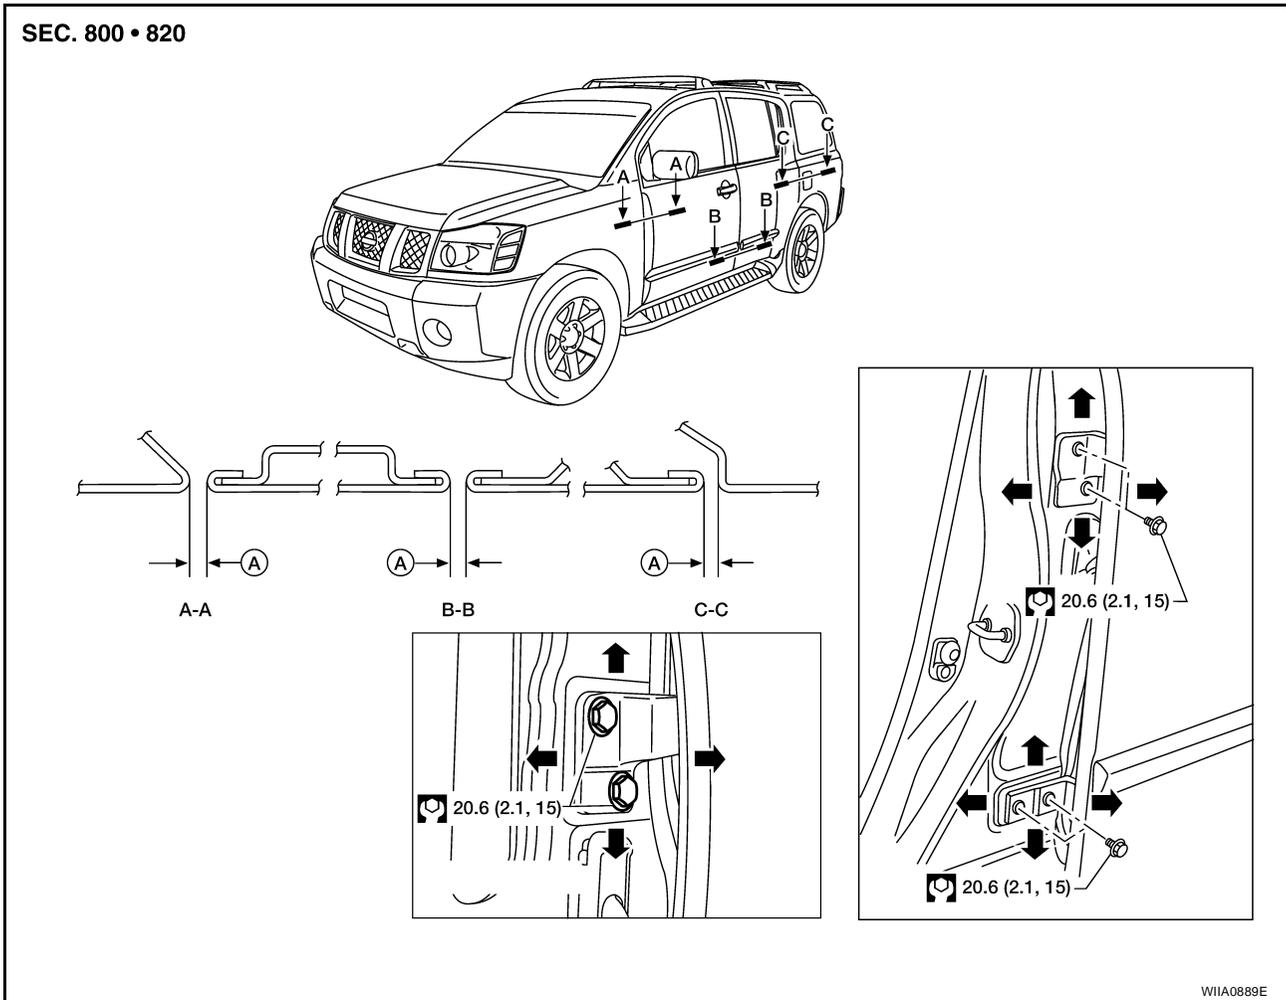

A.  $4.5 \pm 1.0$  mm ( $0.177 \pm 0.039$  in)

WIA0889E

### FRONT DOOR

#### Longitudinal clearance and surface height adjustment at front end

1. Remove the front fender. Refer to [EI-20, "FRONT FENDER"](#).
2. Loosen the hinge bolts. Raise the front door at rear end to adjust.
3. Install the front fender. Refer to [EI-20, "FRONT FENDER"](#).


### REAR DOOR

#### Longitudinal clearance and surface height adjustment at front end

1. Loosen the bolts. Open the rear door, and raise the rear door at rear end to adjust.

### STRIKER ADJUSTMENT

1. Adjust the striker so that it becomes parallel with the lock insertion direction.

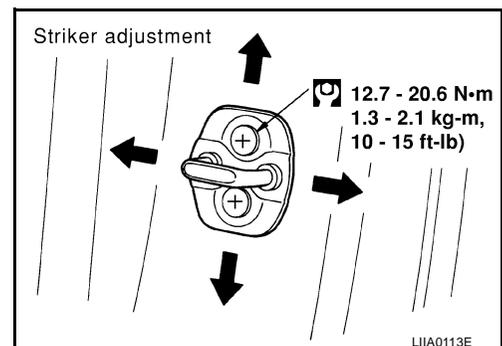

LIA0113E

# DOOR


EIS004JI

## Removal and Installation

### FRONT DOOR


#### CAUTION:

- When removing and installing the door assembly, support the door with a jack and shop cloth to protect the door and body.
  - When removing and installing door assembly, be sure to carry out the fitting adjustment.
  - Check the hinge rotating part for poor lubrication. If necessary, apply "body grease".
1. Remove the door window and module assembly. Refer to [GW-62, "FRONT DOOR GLASS AND REGULATOR"](#).
  2. Remove the door harness.
  3. Remove the check link cover.
  4. Remove the check link bolt from the hinge pillar.

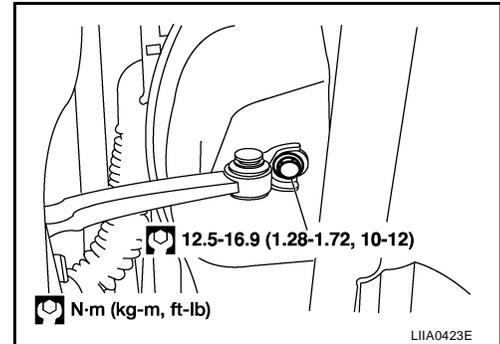

5. Remove the door-side hinge nuts and bolts, and remove the door assembly.


Installation is in the reverse order of removal.

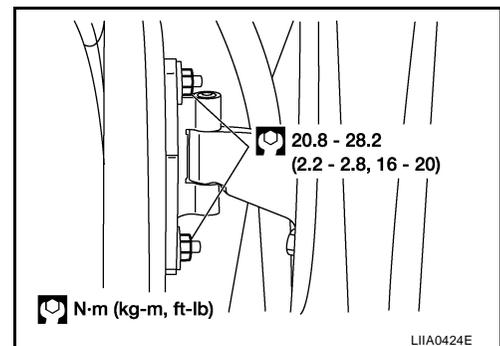

### REAR DOOR

#### CAUTION:


- When removing and installing the door assembly, support the door with a jack and shop cloth to protect the door and body.
  - When removing and installing door assembly, be sure to carry out the fitting adjustment.
  - Check the hinge rotating part for poor lubrication. If necessary, apply "body grease".
1. Remove the door window and module assembly. Refer to [GW-65, "REAR DOOR GLASS AND REGULATOR"](#).
  2. Remove the door harness.
  3. Remove the check link cover.
  4. Remove the check link bolt from the hinge pillar.

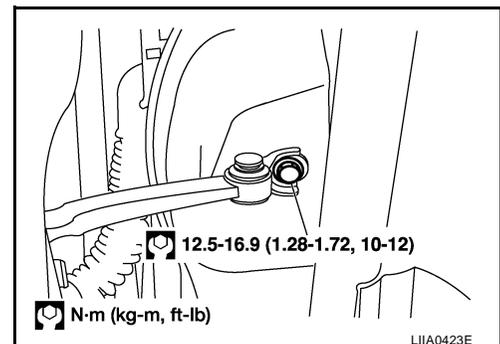

# DOOR

5. Remove the door-side hinge nuts and bolts, and remove the door assembly.

Installation is in the reverse order of removal.

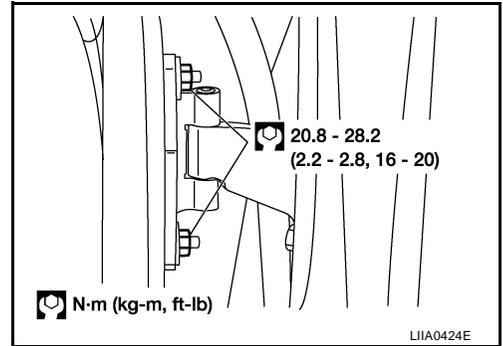

## BACK DOOR

### WARNING:


**Always support back door when removing or replacing back door stays. Power back door opener will not support back door with back door stays removed.**

1. Remove the back door glass. Refer to [GW-14, "REAR WINDOW GLASS AND MOLDING"](#).
2. Remove the back door lock assembly. Refer to [BL-130, "BACK DOOR LOCK"](#).
3. Remove the rear wiper motor. Refer to [WW-52, "Rear Wiper Motor"](#).
4. Remove the back door wire harness.
5. Remove the rear washer nozzle and hose from the back door. Refer to [WW-53, "Rear Washer Nozzle"](#).

### CAUTION:

**Two technicians should be used to avoid damaging the back door during removal.**

6. Support the back door.
7. Disconnect the power back door lift arm from the door.
8. Remove the back door stays.
9. Remove the door side nuts and the back door assembly.

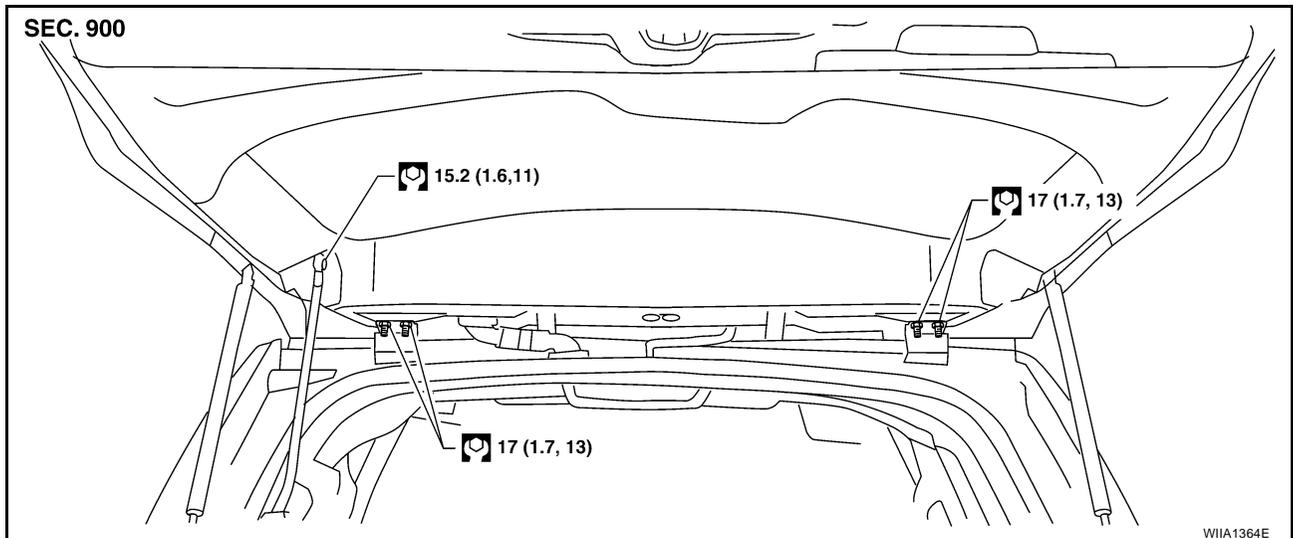


Installation is in the reverse order of removal.

# FRONT DOOR LOCK

PF8:80502

## FRONT DOOR LOCK Component Structure

EIS0062C

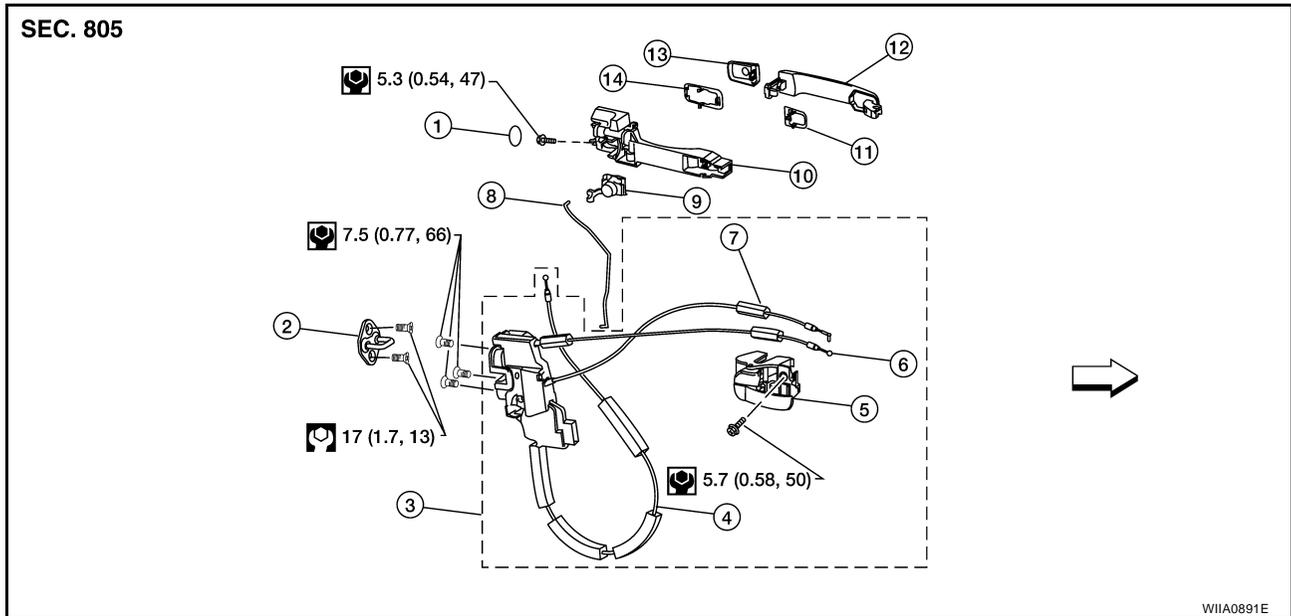

- |   |  |                        |
|---|--|------------------------|
| 1. Grommet  | 2. Front door striker                  | 3. Door lock assembly  |
| 4. Outside handle cable   | 5. Inside handle assembly              | 6. Inside handle cable |
| 7. Door lock cable  | 8. Key cylinder rod (Driver side only) | 9. Door lock assembly  |
| 10. Outside handle bracket  | 11. Front gasket                       | 12. Outside handle     |
| 13. Door key cylinder assembly (Driver side) Outside handle escutcheon (Passenger side) | 14. Rear gasket                        |                        |


## Removal and Installation REMOVAL

EIS0062D


- Remove front door speaker. Refer to [AV-71, "FRONT DOOR SPEAKER"](#).
- Remove the front door speaker housing and vapor sheet.
- Remove the door side grommet, and the bolt (TORX T30) from the grommet hole.

**Torx bolt**

**5.3 N·m (0.54 kg·m, 47 in-lb)**

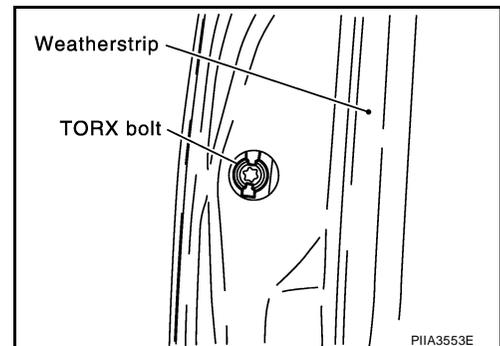


- While pulling the outside handle, remove the door key cylinder assembly or escutcheon.

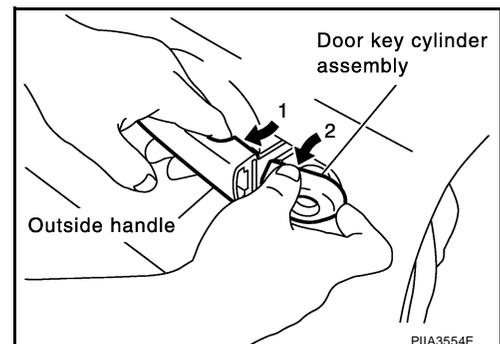


# FRONT DOOR LOCK


5. Separate the key cylinder rod from the door key cylinder assembly (if equipped).
6. While pulling the outside handle, slide it toward rear of vehicle to remove.

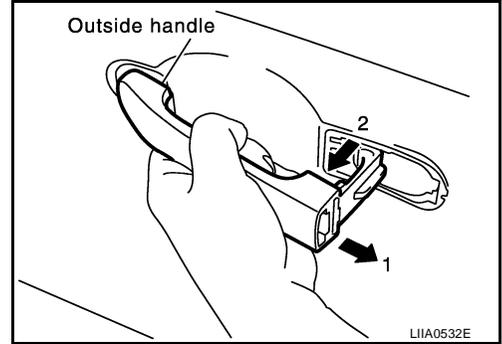


7. Remove the front and rear gaskets.

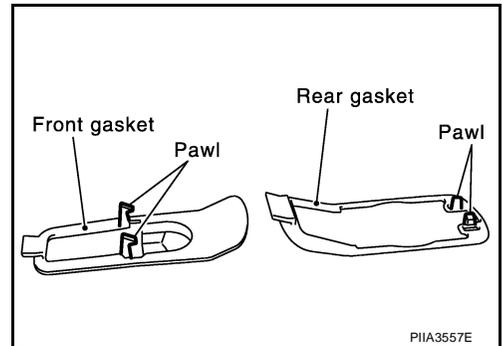

8. Remove the TORX bolts (T30), and the door lock assembly.  
**Door lock assembly bolts 7.5 N·m (0.77 kg·m, 66 in·lb)**

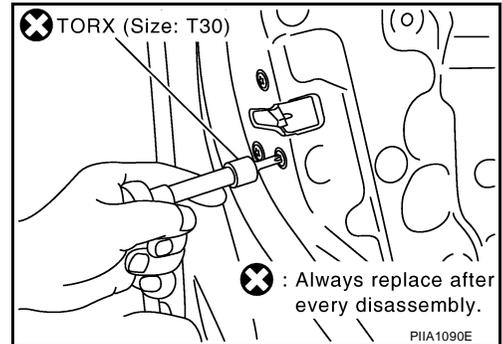

9. While pulling the outside handle bracket, slide it toward the rear of vehicle to remove it and the door lock assembly.

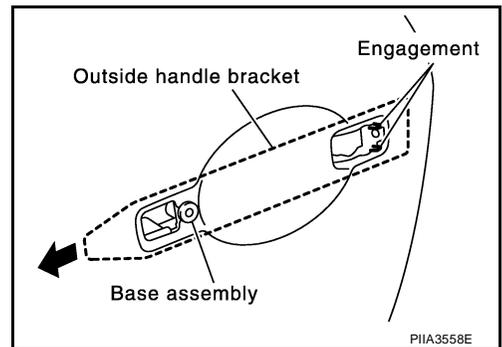


10. Disconnect the door lock actuator electrical connector.

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

# FRONT DOOR LOCK

11. Separate the outside handle cable connection from the outside handle bracket.

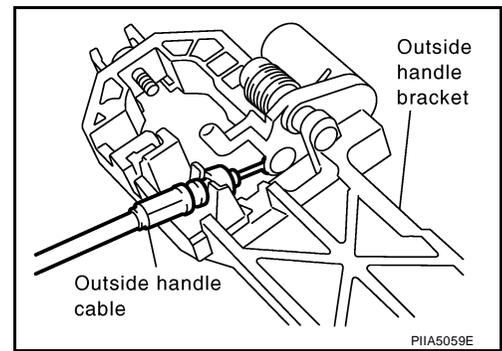

## INSTALLATION


Installation in the reverse order of removal.

### CAUTION:

To install each rod, be sure to rotate the rod holder until a click is felt.

## Disassembly and Assembly DOOR KEY CYLINDER ASSEMBLY

EIS0062E

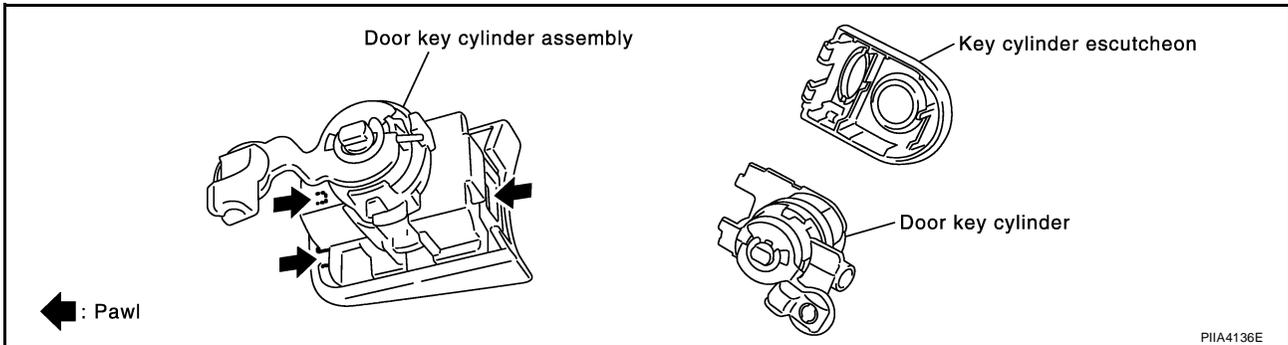

Remove the key cylinder escutcheon pawl and remove the door key cylinder.


# REAR DOOR LOCK

## REAR DOOR LOCK

PFP:82502

### Component Structure

EIS004JM

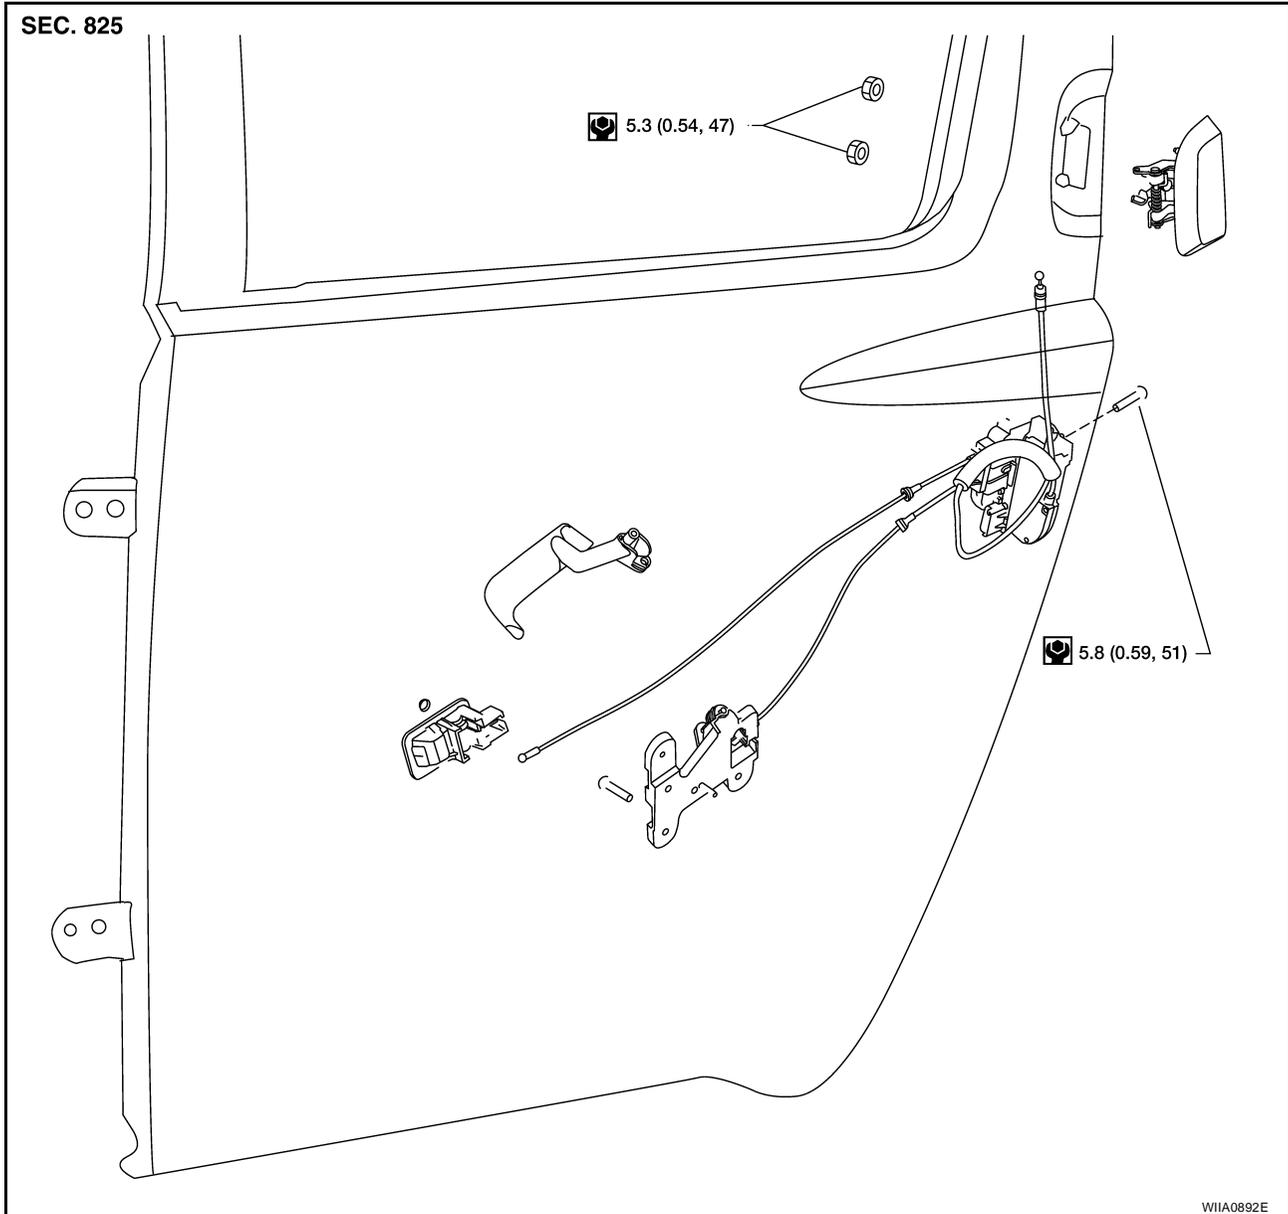

## Removal and Installation

EIS004JN

### REMOVAL

1. Remove the rear door window and rear door module assembly. Refer to [GW-65, "REAR DOOR GLASS AND REGULATOR"](#).
2. Remove door grommets, and remove outside handle nuts from grommet hole.
3. Remove outside handle.
4. Disconnect the door lock actuator connector.
5. Reach to separate outside handle rod connection.

### INSTALLATION

Installation is in the reverse order of removal.

# BACK DOOR LOCK


## BACK DOOR LOCK

PFP:90504

### Power Back Door Opener REMOVAL

EIS0062H

SEC. 905

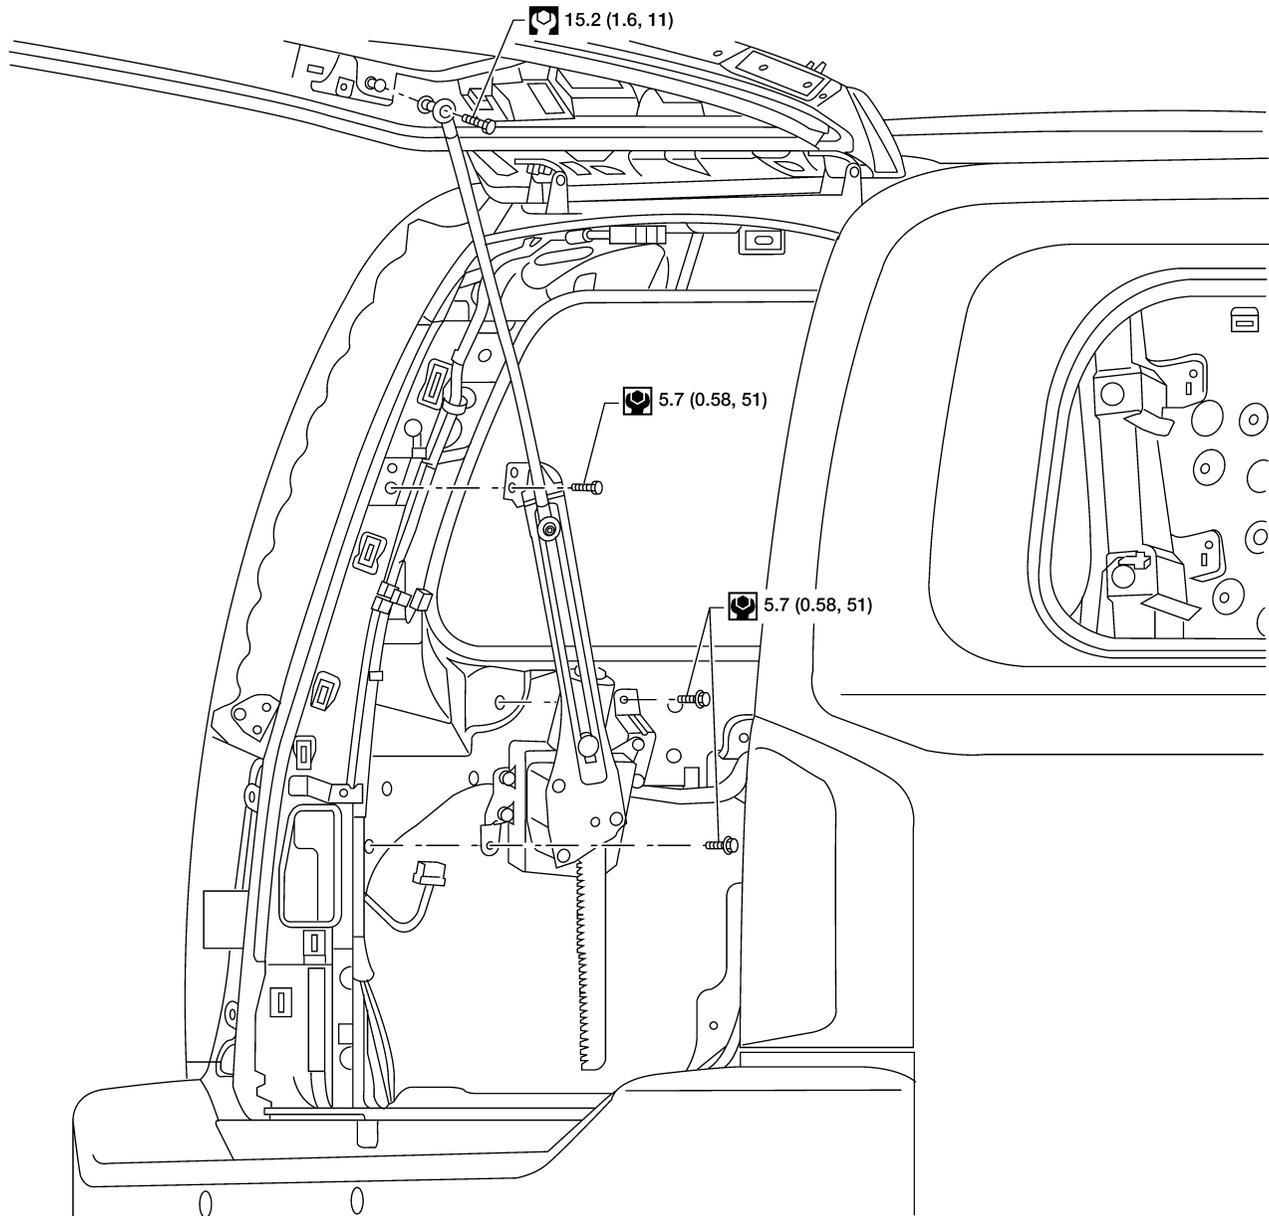

WIIA0893E

1. Remove the LH luggage side upper. Refer to [EI-37, "LUGGAGE FLOOR TRIM"](#) .
2. Disconnect the power back door motor electrical connector.
3. Disconnect the ball socket from the back door.
4. Remove the power back door motor assembly.

### INSTALLATION


Installation is in the reverse order of removal.

# BACK DOOR LOCK

## Door Lock Assembly REMOVAL

EIS00621

SEC. 905

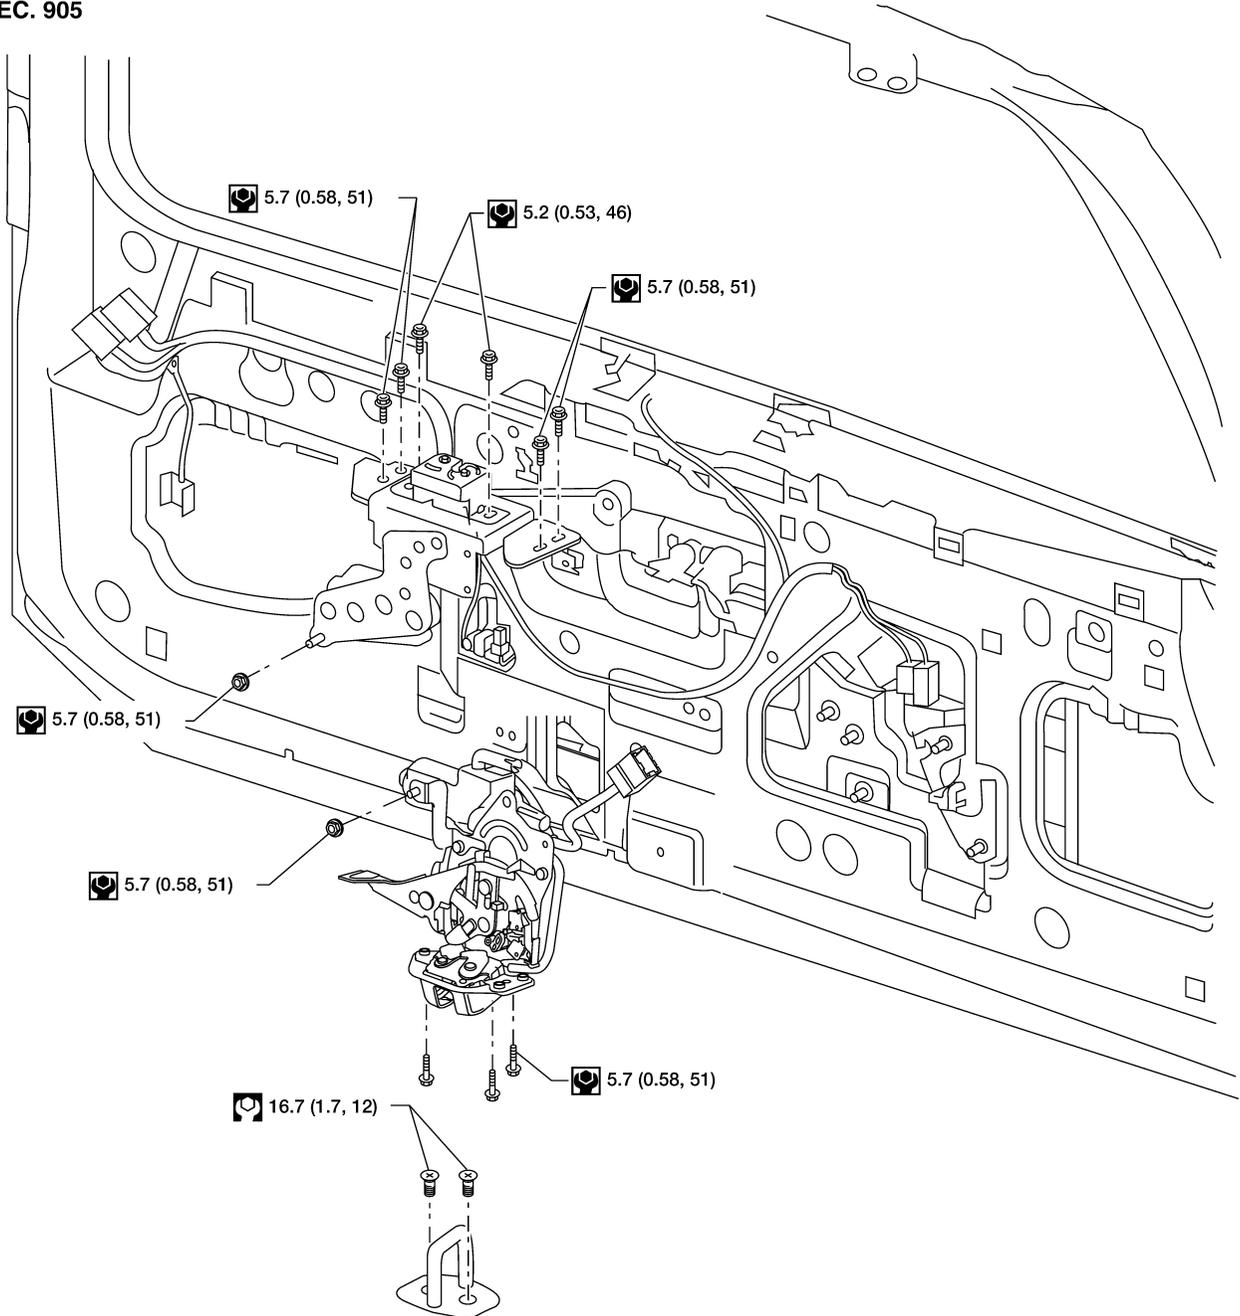

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

W11A0894E

1. Remove the lower back door trim panel. Refer to [EI-39, "BACK DOOR TRIM"](#).
2. Remove the weathershields.
3. Disconnect the back door lock electrical connectors.
4. Remove the back door lock assembly.
5. Disconnect the back door glass lock electrical connector.
6. Remove the back door glass lock.

## INSTALLATION

Installation is in the reverse order of removal.


# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

## NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

PF2:28591

### Component Parts and Harness Connector Location

EIS004JP

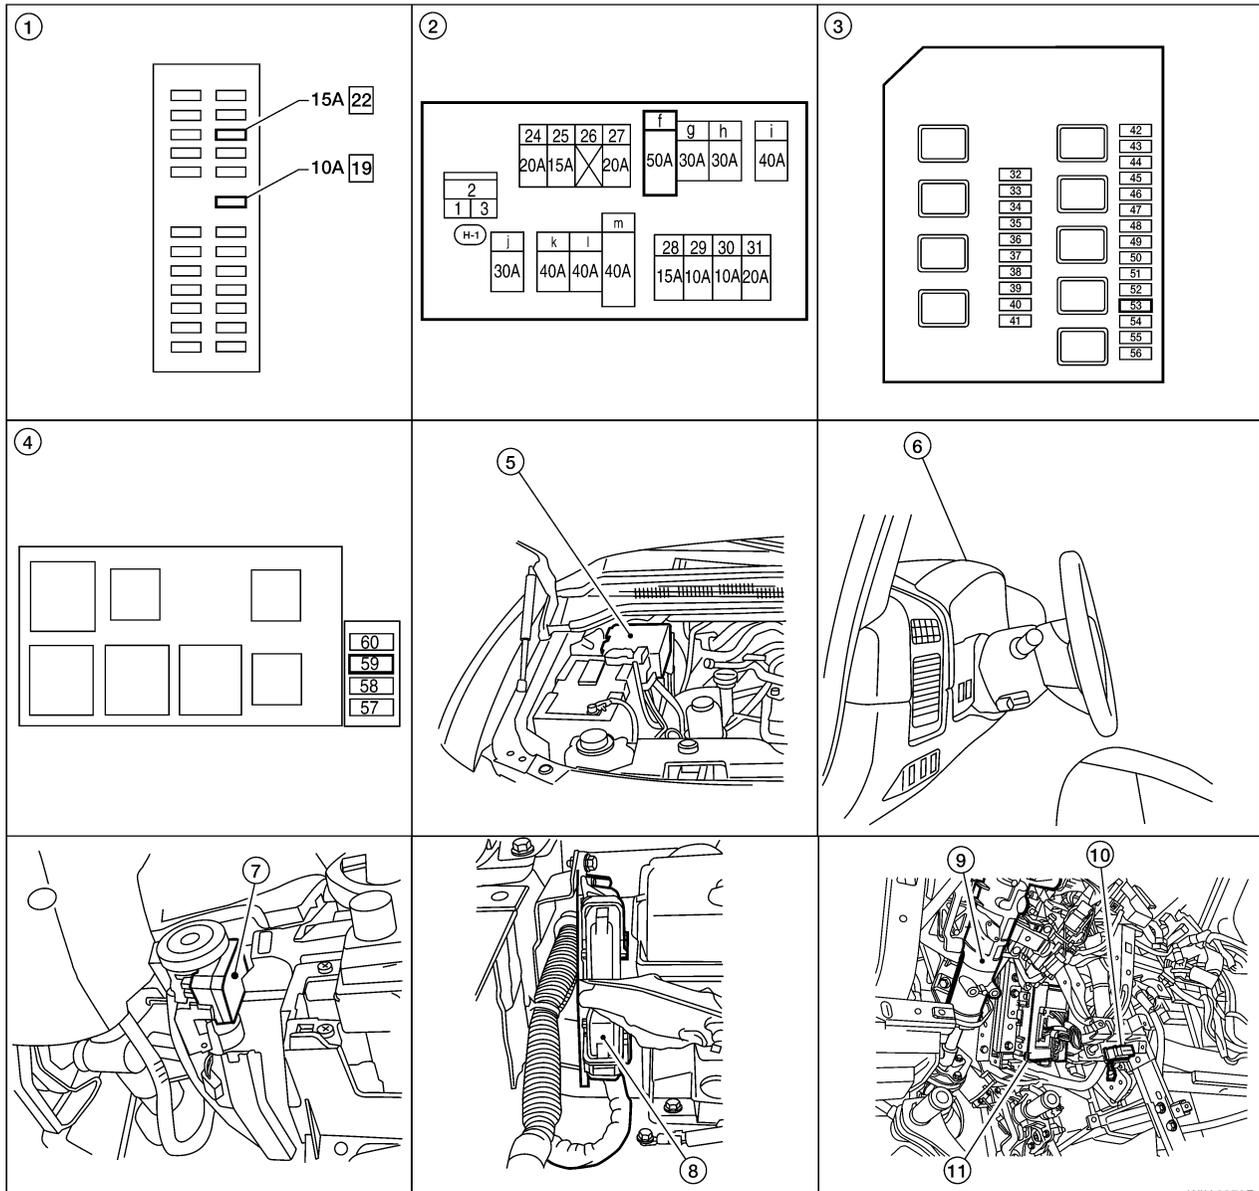

W11A0876E

- |   |  |  |
|---|--|--|
| 1. Fuse block (J/B)   | 2. Fuse and fusible link box                                   | 3. IPDM E/R fuse layout  |
| 4. Fuse and relay box   | 5. IPDM E/R E121   | 6. Combination meter M24   |
| 7. NATS antenna amplifier M21<br>(view with lower driver instrument<br>panel removed) | 8. ECM E16<br>(view with battery removed)                      | 9. Steering column<br>(view with instrument panel LH<br>removed) |
| 10. Data link connector M22<br>(view with instrument panel LH<br>removed)             | 11. BCM M18, M20<br>(view with instrument panel LH<br>removed) |  |

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

EIS004JQ

## System Description

NVIS (Nissan Vehicle Immobilizer System-NATS) has the following immobilizer functions:

- Since only NVIS (NATS) ignition keys, whose IDs have been registered into the ECM and BCM, allow the engine to run, operation of a stolen vehicle without a NVIS (NATS) registered key is prevented by NVIS (NATS).  
NVIS (NATS) will immobilize the engine if someone tries to start it without the registered key of NVIS (NATS).
- All of the originally supplied ignition key IDs have been NVIS (NATS) registered.  
If requested by the vehicle owner, a maximum of five key IDs can be registered into the NVIS (NATS) components.
- The security indicator blinks when the ignition switch is in OFF or ACC position. NVIS (NATS) warns outsiders that the vehicle is equipped with the anti-theft system.
- When NVIS (NATS) detects a malfunction, the security indicator lamp lights up while ignition key is in the ON position.
- NVIS (NATS) trouble diagnoses, system initialization and additional registration of other NVIS (NATS) ignition key IDs must be carried out using CONSULT-II hardware and CONSULT-II NVIS (NATS) software. When NVIS (NATS) initialization has been completed, the ID of the inserted ignition key is automatically NVIS (NATS) registered. Then, if necessary, additional registration of other NVIS (NATS) ignition key IDs can be carried out.  
Regarding the procedures of NVIS (NATS) initialization and NVIS (NATS) ignition key ID registration, refer to CONSULT-II Operation Manual NATS-IVIS/NVIS.
- **When servicing a malfunction of the NVIS (NATS) (indicated by lighting up of Security Indicator Lamp) or registering another NVIS (NATS) ignition key ID, it may be necessary to re-register original key identification. Therefore, be sure to receive ALL KEYS from vehicle owner.**

## System Composition


EIS004JR

The immobilizer function of the NVIS (NATS) consists of the following:

- NATS ignition key
- NATS antenna amp. located in the ignition key cylinder
- Body control module (BCM)
- Engine control module (ECM)
- Security indicator

### NOTE:

The communication between ECM and BCM uses the CAN communication system.

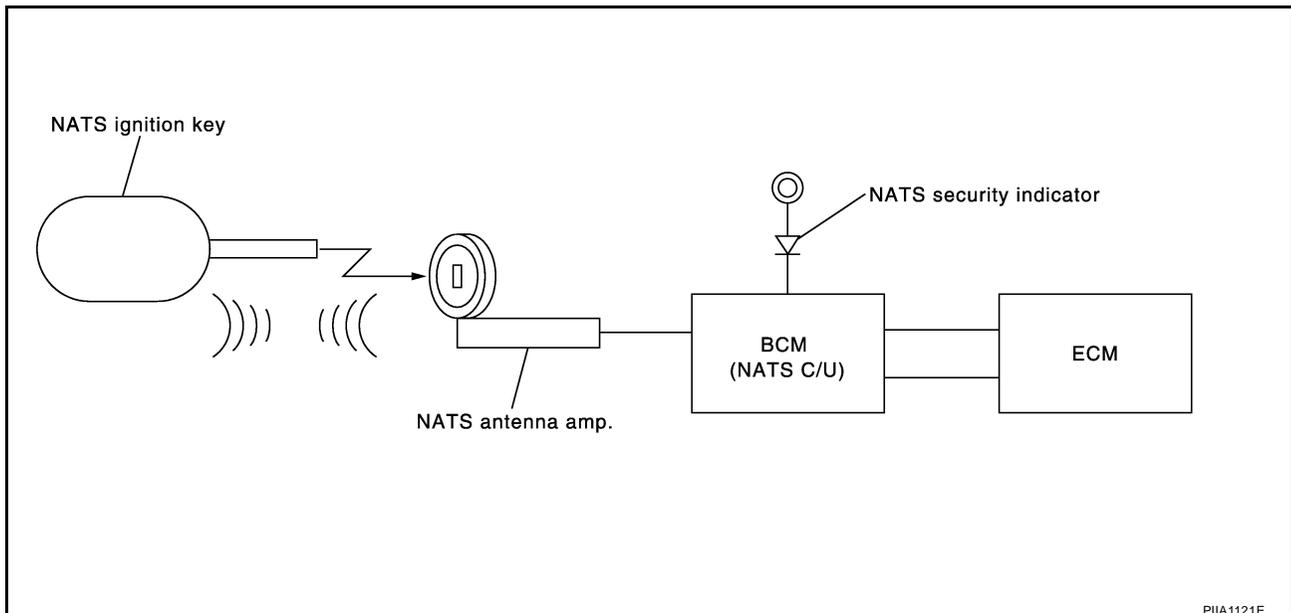

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

EIS004JS

## ECM Re-communicating Function

The following procedure can automatically perform re-communication of ECM and BCM, but only when the ECM has been replaced with a new one which has never been energized on-board.  
(In this step, initialization procedure by CONSULT-II is not necessary)

### NOTE:

- **When registering new key IDs or replacing the ECM other than brand new, refer to CONSULT-II Operation Manual NATS-IVIS/NVIS.**
- **If multiple keys are attached to the key holder, separate them before work.**
- **Distinguish keys with unregistered key ID from those with registered ID.**

1. Install ECM.
2. Using a registered key (\*1), turn ignition switch to ON.  
\*1: To perform this step, use the key that has been used before performing ECM replacement.
3. Maintain ignition switch in ON position for at least 5 seconds.
4. Turn ignition switch to OFF.
5. Start engine.

If engine can be started, procedure is completed.



If engine cannot be started, refer to CONSULT-II Operation Manual NATS-IVIS/NVIS and initialize control unit.

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

EIS004JT

## Wiring Diagram — NATS —

BL-NATS-01

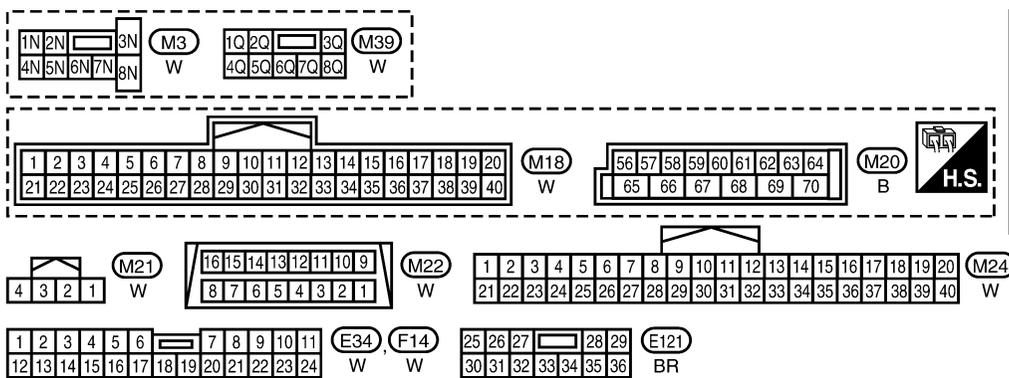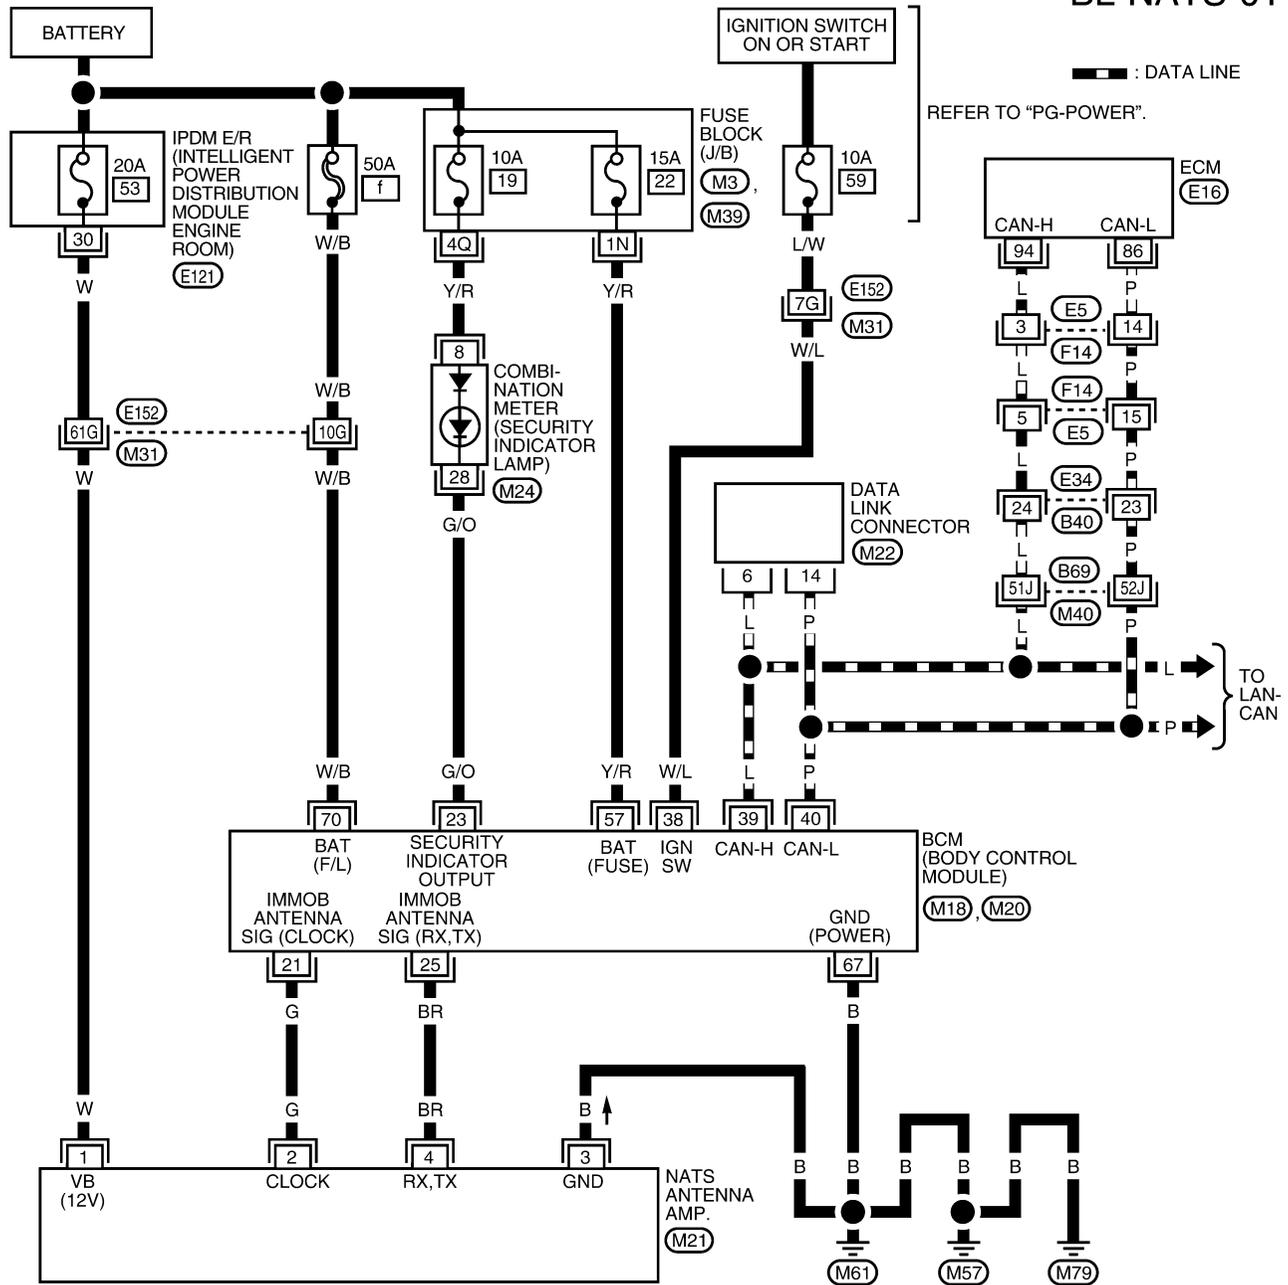

REFER TO THE FOLLOWING.  
 (E16) - ELECTRICAL UNITS  
 (M31), (M40) - SUPER MULTIPLE JUNCTION (SMJ)

W1WA1233E

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

## Terminals and Reference Value for BCM

EIS004JU

Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)
21	G	NATS antenna amp.	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move.
23	G/O	Security indicator lamp	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0
25	BR	NATS antenna amp.	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move.
38	W/L	Ignition switch (ON or START)	Ignition switch (ON or START position)	Battery voltage
39	L	CAN-H	—	—
40	P	CAN-L	—	—
57	Y/R	Power source BAT	—	Battery voltage
67	B	Ground	—	—
70	W/B	Power source BAT	—	Battery voltage

## CONSULT-II


### CONSULT-II INSPECTION PROCEDURE

EIS004JV


#### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. Turn ignition switch OFF.
2. Insert NVIS (NATS) program card into CONSULT-II.  
**Program card : NATS (AEN04A-1) or later**
3. Connect CONSULT-II and CONSULT-II CONVERTER to data link connector.
4. Turn ignition switch ON.
5. Touch "START".

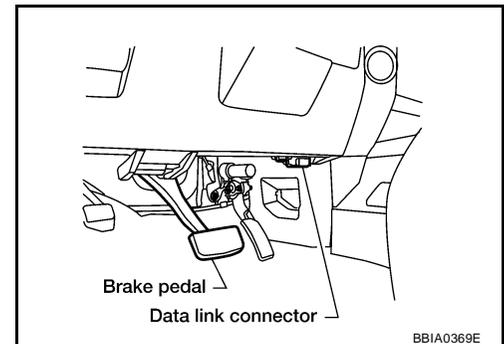


BBIA0369E

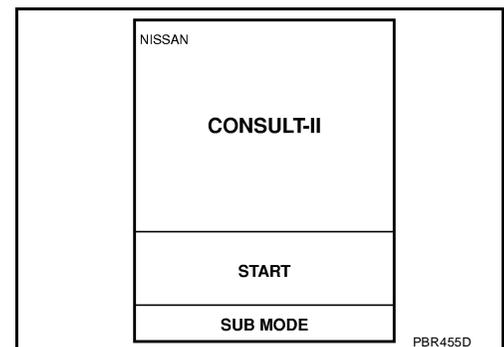


PBR455D

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)


6. Touch "OTHER".

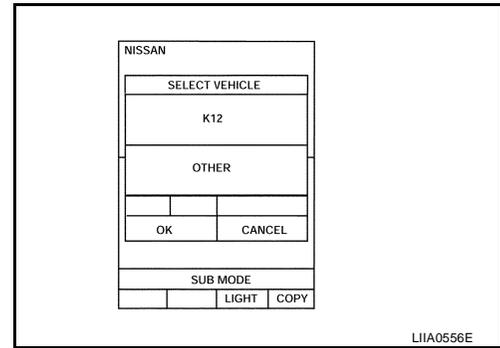

7. Select "NATS V.5.0".  
If "NATS V5.0" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

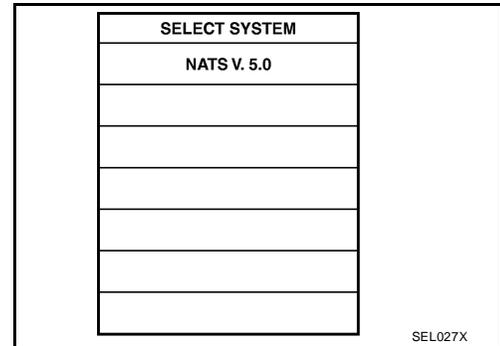

8. Perform each diagnostic test mode according to each service procedure.  
**For further information, see the CONSULT-II Operation Manual NATS-IVIS/NVIS.**

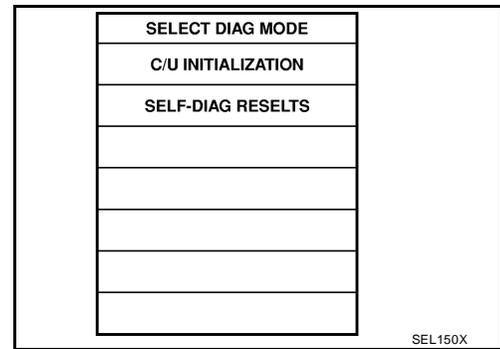

## CONSULT-II DIAGNOSTIC TEST MODE FUNCTION

CONSULT-II DIAGNOSTIC TEST MODE	Description
C/U INITIALIZATION	When replacing any of the following components, C/U initialization and re-registration of all NATS ignition keys are necessary. [(NATS ignition key/ BCM/ ECM]
SELF-DIAG RESULTS	Detected items (screen terms) are as shown in the chart. Refer to <a href="#">BL-138, "NVIS (NATS) SELF-DIAGNOSTIC RESULTS ITEM CHART"</a> .

### NOTE:


- When any initialization is performed, all IDs previously registered will be erased and all NATS ignition keys must be registered again.
- The engine cannot be started with an unregistered key. In this case, the system will show "DIFFERENCE OF KEY" or "LOCK MODE" as a self-diagnostic result on the CONSULT-II screen.
- In rare case, "CHAIN OF ECM-IMMU" might be stored as a self-diagnostic result during key registration procedure, even if the system is not malfunctioning.



# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

EIS004JW

## Work Flow

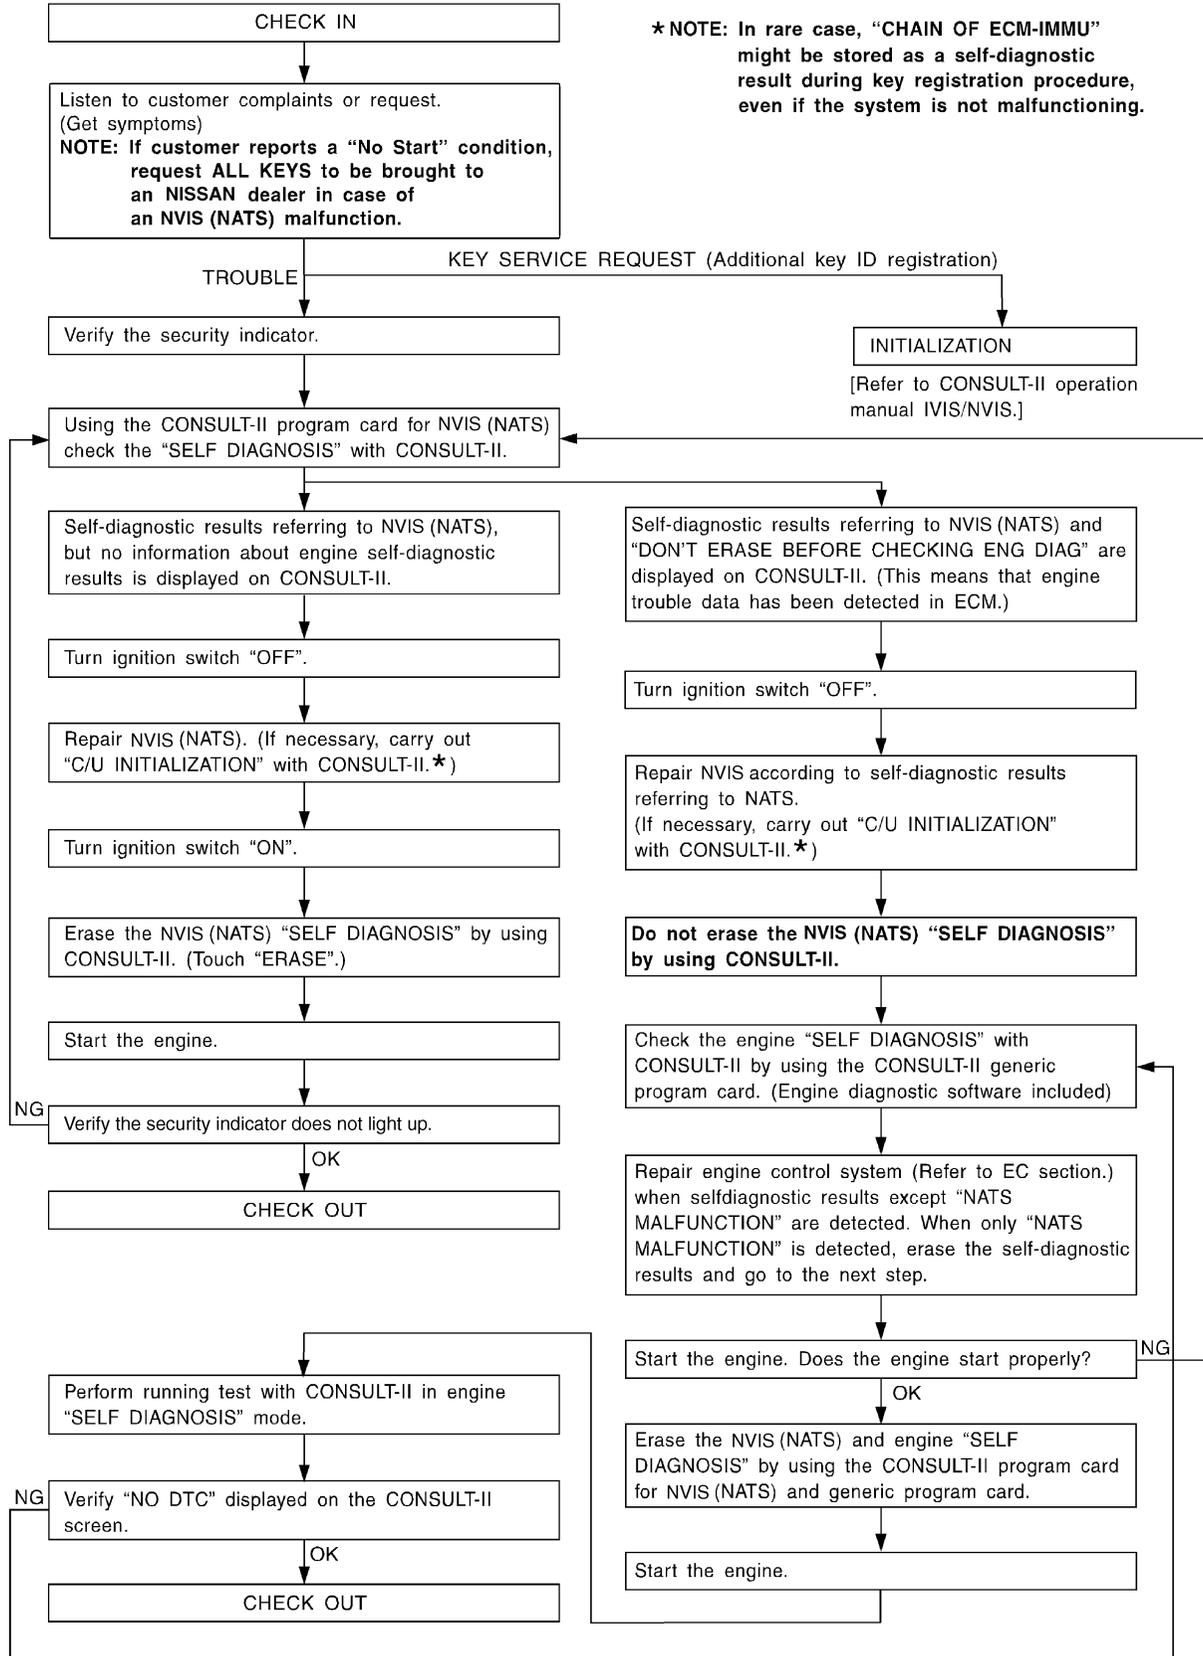

LIA1152E

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

EIS004JX

## Trouble Diagnoses SYMPTOM MATRIX CHART 1 Self-diagnosis related item

Symptom	Displayed "SELF-DIAG RESULTS" on CONSULT-II screen.	Diagnostic Procedure (Reference page)	System (Malfunctioning part or mode)	Reference Part No. Of Illustration On System Diagram
<ul style="list-style-type: none"> <li>● Security indicator lighting up*</li> <li>● Engine cannot be started</li> </ul>	CHAIN OF ECM-IMMU [P1612]	PROCEDURE 1 ( <a href="#">BL-142</a> )	In rare case, "CHAIN OF ECM-IMMU" might be stored during key registration procedure, even if the system is not malfunctioning.	—
			Open circuit in battery voltage line of BCM circuit	C1
			Open circuit in ignition line of BCM circuit	C2
			Open circuit in ground line of BCM circuit	C3
			Open or short circuit between BCM and ECM communication line	C4
			ECM	B
			BCM	A
	DIFFERENCE OF KEY [P1615]	PROCEDURE 2 ( <a href="#">BL-143</a> )	Unregistered key	D
			BCM	A
	CHAIN OF IMMU-KEY [P1614]	PROCEDURE 5 ( <a href="#">BL-146</a> )	Malfunction of key ID chip	E5
			Communication line between ANT/ AMP and BCM:	E1
			Open circuit or short circuit of battery voltage line or ground line	E2
			Open circuit in power source line of ANT/ AMP circuit	E3
			Open circuit in ground line of ANT/ AMP circuit	E4
			NATS antenna amp.	E6
			BCM	A
	ID DISCORD, IMM-ECM [P1611]	PROCEDURE 3 ( <a href="#">BL-144</a> )	System initialization has not yet been completed.	F
ECM			B	
LOCK MODE [P1610]	PROCEDURE 4 ( <a href="#">BL-145</a> )	LOCK MODE	D	
Security indicator lighting up*	DON'T ERASE BEFORE CHECKING ENG DIAG	WORK FLOW ( <a href="#">BL-139</a> )	Engine trouble data and NVIS (NATS) trouble data have been detected in ECM	—

\*: When NVIS (NATS) detects a malfunction, the security indicator lights up while ignition key is in the "ON" position.

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)


## SYMPTOM MATRIX CHART 2

### Non self-diagnosis related item

Symptom	Diagnostic Procedure (Reference page)	System (Malfunctioning part or mode)	Reference Part No. Of Illustration On System Diagram
Security indicator does not light up*.	PROCEDURE 6 ( <a href="#">BL-149</a> )	Combination meter (security indicator lamp)	—
		Open circuit between Fuse and BCM	—
		BCM	A

\*: CONSULT-II self-diagnostic results display screen "no malfunction is detected".

## DIAGNOSTIC SYSTEM DIAGRAM

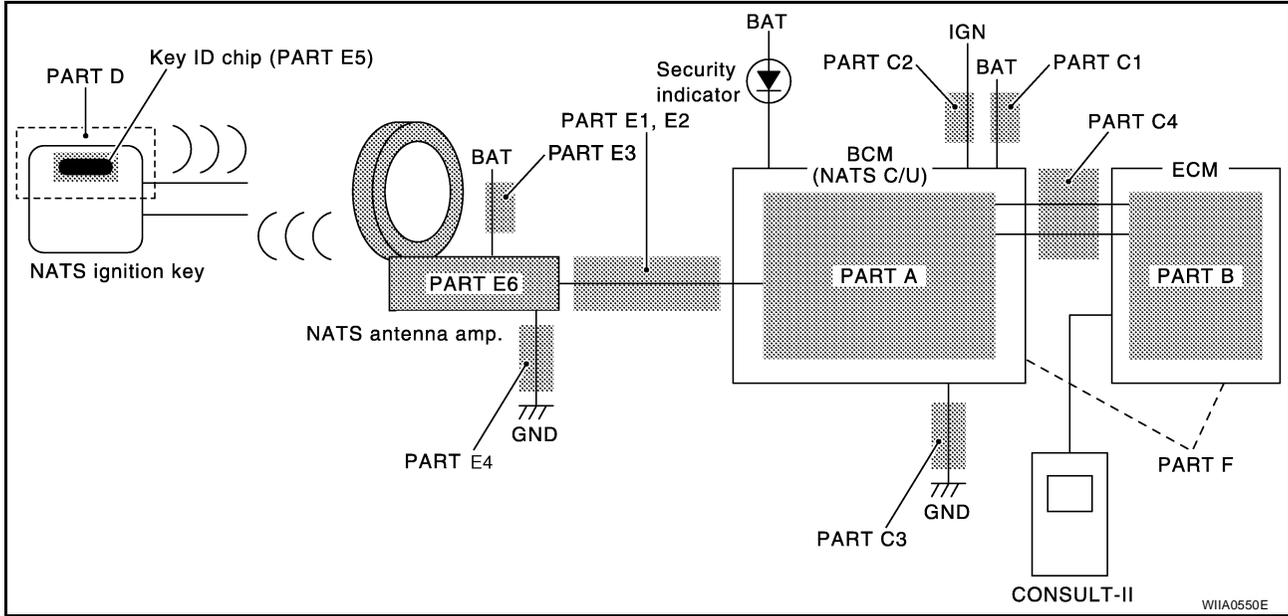

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

EIS004JY

## Diagnostic Procedure 1

### Self-diagnostic results:

“CHAIN OF ECM-IMMU” displayed on CONSULT-II screen

First perform the “SELF-DIAG RESULTS” in “BCM” with CONSULT-II, then perform the trouble diagnosis of malfunction system indicated “SELF-DIAG RESULTS” of “BCM”. Refer to [BL-136. "CONSULT-II"](#)

### 1. CONFIRM SELF-DIAGNOSTIC RESULTS

Confirm SELF-DIAGNOSTIC RESULTS “CHAIN OF ECM-IMMU” displayed on CONSULT-II screen.

#### NOTE:

In rare case, “CHAIN OF ECM-IMMU” might be stored during key registration procedure, even if the system is not malfunctioning.

Is CONSULT-II screen displayed as above?

Yes >> GO TO 2.

No >> GO TO [BL-140. "SYMPTOM MATRIX CHART 1"](#).

SELF DIAGNOSIS	
DTC RESULTS	TIME
CHAIN OF ECM-IMMU [P1612]	0

PIA1260E

### 2. CHECK POWER SUPPLY CIRCUIT FOR BCM

1. Disconnect BCM.
2. Check voltage between BCM connector M20 terminal 70 and ground.


**70 – Ground** :Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check the following:

- 50A fusible link (letter f , located in fuse and fusible link box)
  - Harness for open or short between fuse and BCM connector
- Ref. Part No. C1**

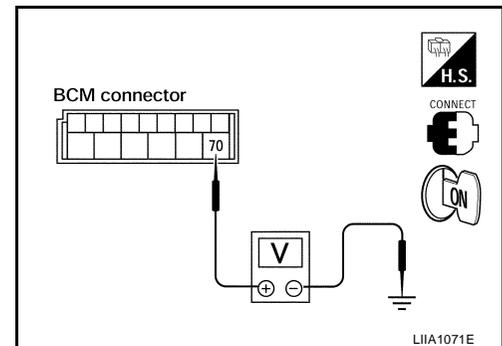

### 3. CHECK IGN SW. ON SIGNAL

1. Turn ignition switch ON.
2. Check voltage between BCM connector M18 terminal 38 and ground.


**38 – Ground** :Battery voltage

OK or NG

OK >> GO TO 4.

NG >> Check the following:

- 10A fuse [No. 59, located in the fuse and relay box]
  - Harness for open or short between fuse and BCM connector
- Ref. part No. C2**

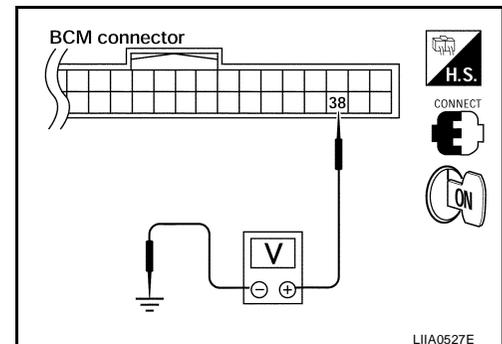

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)


## 4. CHECK GROUND CIRCUIT FOR BCM

1. Turn ignition switch OFF.
2. Check continuity between BCM connector M20 terminal 67 and ground.

**67 – Ground :Continuity should exist.**

OK or NG

- OK >> GO TO 5.  
NG >> Repair or replace harness. **Ref. part No. C3**

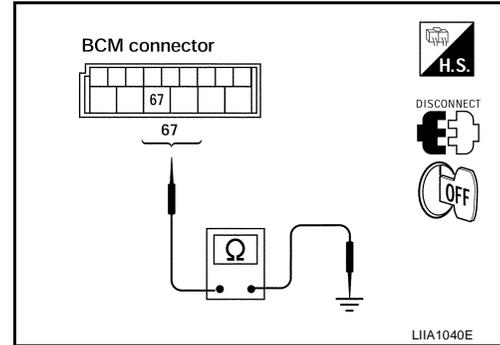

## 5. REPLACE BCM

1. Replace BCM. **Ref. part No. A**
2. Perform initialization with CONSULT-II.  
For initialization, refer to “CONSULT-II Operation Manual NATS-IVIS/NVIS”.

Does the engine start?

- Yes >> BCM is malfunctioning.  
No >> ECM is malfunctioning.
- Replace ECM. **Ref. part No. B**
  - Perform initialization or re-communicating function.
  - For initialization, refer to “CONSULT-II Operation Manual NATS-IVIS/NVIS”.
  - For re-communicating function, refer to [BL-134, "ECM Re-communicating Function"](#).

## Diagnostic Procedure 2

EIS004JZ

**Self-diagnostic results:**

**“DIFFERENCE OF KEY” displayed on CONSULT-II screen**

### 1. CONFIRM SELF-DIAGNOSTIC RESULTS

Confirm SELF-DIAGNOSTIC RESULTS “DIFFERENCE OF KEY” displayed on CONSULT-II screen.

Is CONSULT-II screen displayed as above?

- Yes >> GO TO 2.  
No >> GO TO [BL-140, "SYMPTOM MATRIX CHART 1"](#).

SELF DIAG RESULTS	
DTC RESULTS	TIME
DIFFERENCE OF KEY [P1615]	0

PIIA1261E

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

## 2. PERFORM INITIALIZATION WITH CONSULT-II

Perform initialization with CONSULT-II. Re-register all NATS ignition key IDs.

For initialization and registration of NATS ignition key IDs, refer to "CONSULT-II Operation Manual NATS-IVIS/NVIS".

### NOTE:


If the initialization is not completed or malfunctions, CONSULT-II shows message on the screen.

Can the system be initialized and can the engine be started with re-registered NATS ignition key?

Yes >> Ignition key ID was unregistered. **Ref. part No. D**

No >> BCM is malfunctioning.

- Replace BCM. **Ref. part No. A**
- Perform initialization with CONSULT-II.
- For initialization, refer to "CONSULT-II Operation Manual NATS-IVIS/NVIS".

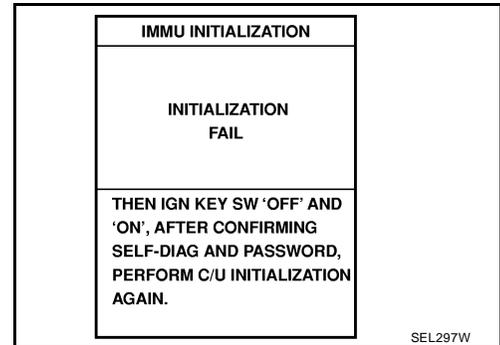

## Diagnostic Procedure 3

EIS004K0

### Self-diagnostic results:

"ID DISCORD, IMM-ECM" displayed on CONSULT-II screen

## 1. CONFIRM SELF-DIAGNOSTIC RESULTS

Confirm SELF-DIAGNOSTIC RESULTS "ID DISCORD, IMM-ECM" displayed on CONSULT-II screen.

### NOTE:

"ID DISCORD IMM-ECM":

Registered ID of BCM is in discord with that of ECM.

Is CONSULT-II screen displayed as above?

Yes >> GO TO 2.

No >> GO TO [BL-140, "SYMPTOM MATRIX CHART 1"](#).

SELF DIAG RESULTS	
DTC RESULTS	TIME
ID DISCORD, IMM-ECM [P1611]	0

PIA1262E

## 2. PERFORM INITIALIZATION WITH CONSULT-II

Perform initialization with CONSULT-II. Re-register all NATS ignition key IDs.

For initialization, refer to "CONSULT-II Operation Manual NATS-IVIS/NVIS".

### NOTE:

If the initialization is not completed or malfunctions, CONSULT-II shows message on the screen.


Can the system be initialized?

Yes >> ● Start engine. (END)

- (System initialization had not been completed. **Ref. part No. F**)

No >> ECM is malfunctioning.

- Replace ECM. **Ref. part No. B**
- Perform initialization with CONSULT-II.  
For initialization, refer to "CONSULT-II Operation Manual NATS-IVIS/NVIS".

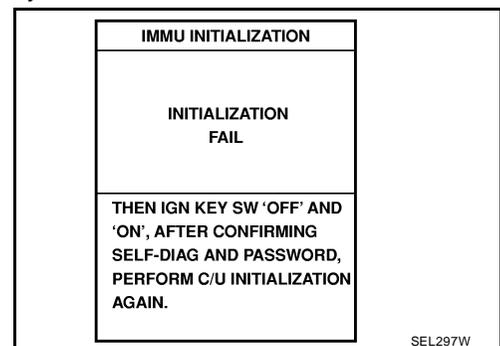

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

## Diagnostic Procedure 4

EIS004K1

### Self-diagnostic results:

“LOCK MODE” displayed on CONSULT-II screen

### 1. CONFIRM SELF-DIAGNOSTIC RESULTS

Confirm SELF-DIAGNOSTIC RESULTS “LOCK MODE” is displayed on CONSULT-II screen.

Is CONSULT-II screen displayed as above?

Yes >> GO TO 2.

No >> GO TO [BL-140. "SYMPTOM MATRIX CHART 1"](#).

SELF DIAG RESULTS	
DTC RESULTS	TIME
LOCK MODE [P1610]	0

PIIA1264E

### 2. ESCAPE FROM LOCK MODE

1. Turn ignition switch OFF.
2. Turn ignition switch ON with registered key. (Do not start engine.) Wait 5 seconds.
3. Return the key to OFF position. Wait 5 seconds.
4. Repeat steps 2 and 3 twice (total of three cycles).
5. Start the engine.

Does engine start?

Yes >> System is OK (Now system is escaped from “LOCK MODE”). Clear all codes.

No >> GO TO 3.

### 3. PERFORM INITIALIZATION WITH CONSULT-II

Perform initialization with CONSULT-II.

For initialization, refer to “CONSULT-II Operation Manual NATS-IVIS/NVIS”.

#### NOTE:

If the initialization is not completed or malfunctions, CONSULT-II shows the message on the screen.

Can the system be initialized?

Yes >> System is OK.

No >> GO TO 4.

IMMU INITIALIZATION
INITIALIZATION FAIL
THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION AGAIN.

SEL297W

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

## 4. PERFORM INITIALIZATION WITH CONSULT-II AGAIN

1. Replace BCM.
2. Perform initialization with CONSULT-II.  
For initialization, refer to "CONSULT-II Operation Manual NATS-IVIS/NVIS".


### NOTE:

If the initialization is not completed or malfunctions, CONSULT-II shows the message on the screen.

Can the system be initialized?

- Yes >> System is OK. BCM is malfunctioning. **Ref. part No. A**  
No >> ECM is malfunctioning.

- Replace ECM. **Ref. part No. B**
- Perform initialization with CONSULT-II.  
For initialization, refer to "CONSULT-II Operation Manual NATS-IVIS/NVIS".

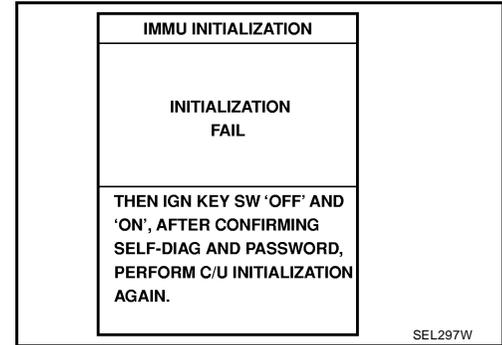

## Diagnostic Procedure 5

EIS004K2

### Self-diagnostic results:

"CHAIN OF IMMU-KEY" displayed on CONSULT-II screen

### 1. CONFIRM SELF-DIAGNOSTIC RESULTS

Confirm SELF-DIAGNOSTIC RESULTS "CHAIN OF IMMU-KEY" displayed on CONSULT-II screen.

Is CONSULT-II screen displayed as above?

- Yes >> GO TO 2.  
No >> GO TO [BL-140, "SYMPTOM MATRIX CHART 1"](#) .

The screenshot shows a CONSULT-II screen with the following table:

SELF DIAGNOSIS	
DTC RESULTS	TIME
CHAIN OF IMMU-KEY [P1614]	0

PIIA1263E

### 2. CHECK NATS ANTENNA AMP. INSTALLATION

Check NATS antenna amp. installation. Refer to [BL-150, "How to Replace NATS Antenna Amp."](#) .

OK or NG

- OK >> GO TO 3.  
NG >> Reinstall NATS antenna amp. correctly.

### 3. CHECK NVIS (NATS) IGNITION KEY ID CHIP

Start engine with another registered NATS ignition key.

Does the engine start?

- Yes >> Ignition key ID chip is malfunctioning.
- Replace the ignition key.  
**Ref. part No. E5**
  - Perform initialization with CONSULT-II.  
For initialization, refer to "CONSULT-II Operation Manual NATS-IVIS/NVIS".
- No >> GO TO 4.

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)


## 4. CHECK POWER SUPPLY FOR NATS ANTENNA AMP.

1. Turn ignition switch ON.
2. Check voltage between NATS antenna amp. connector M21 terminal 1 and ground.

**1 – Ground** :Battery voltage

OK or NG


- OK >> GO TO 5.  
 NG >> Repair or replace fuse or harness. **Ref. part No. E3**

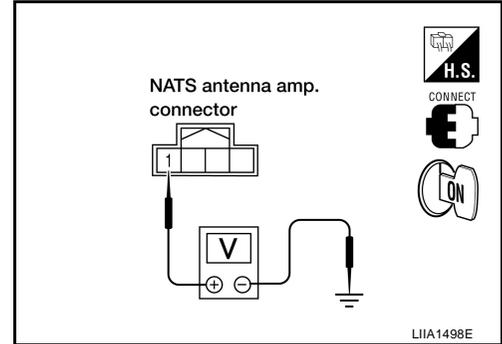

## 5. CHECK NATS ANTENNA AMP. SIGNAL LINE- 1

Check voltage between NATS antenna amp. connector M21 terminal 2 and ground with analog tester.

Connector	Terminals	Condition	Voltage (V) (Approx.)
M21	2 – Ground	Before inserting key into ignition key cylinder	Battery voltage
		After inserting key into ignition key cylinder	Pointer of tester should move for 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage.

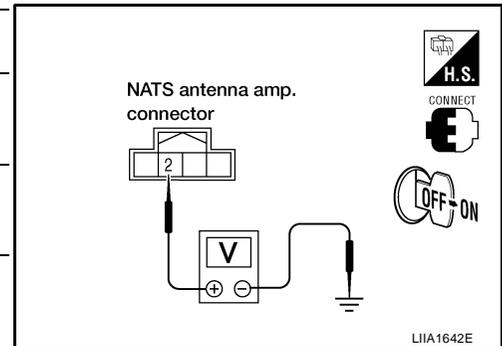

OK or NG

- OK >> GO TO 6.  
 NG >> ● Repair or replace harness. **Ref. part No. E1**

**NOTE:**


If harness is OK, replace BCM, perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II Operation Manual NATS-IVIS/NVIS".

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

## 6. CHECK NATS ANTENNA AMP. SIGNAL LINE- 2

Check voltage between NATS antenna amp. connector M21 terminal 4 and ground with analog tester.

Connector	Terminals	Condition	Voltage (V) (Approx.)
M21	4 – Ground	Before inserting key into ignition key cylinder	Battery voltage
		After inserting key into ignition key cylinder	Pointer of tester should move for 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage.

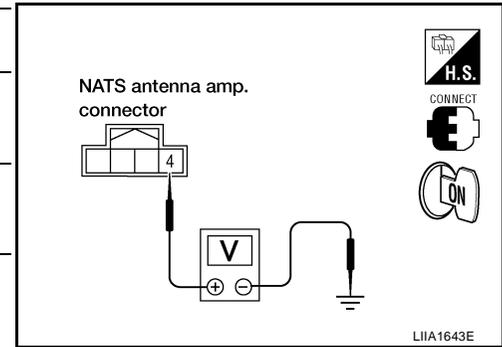

OK or NG

OK >> GO TO 7.

NG >> ● Repair or replace harness. **Ref. part No. E2**

**NOTE:**

If harness is OK, replace BCM, perform initialization with CONSULT-II. For initialization, refer to “CONSULT-II Operation Manual NATS-IVIS/NVIS”.

## 7. CHECK NATS ANTENNA AMP. GROUND LINE CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between NATS antenna amp. connector M21 terminal 3 and ground.

**3 – Ground** :Continuity should exist.


OK or NG

OK >> NATS antenna amp. is malfunctioning. **Ref. part No. E6**

NG >> ● Repair or replace harness. **Ref. part No. E4**

**NOTE:**

If harness is OK, replace BCM, perform initialization with CONSULT-II. For initialization, refer to “CONSULT-II Operation Manual NATS-IVIS/NVIS”.

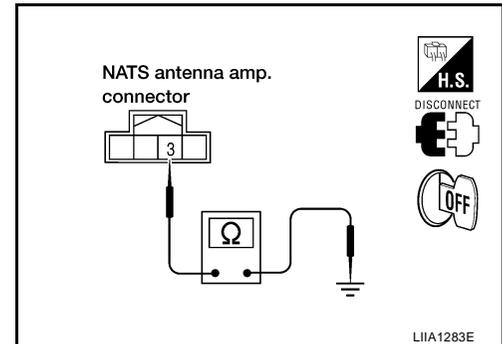

# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

EIS004K3

## Diagnostic Procedure 6

“SECURITY INDICATOR LAMP DOES NOT LIGHT UP”

### 1. CHECK FUSE

Check 10A fuse [No.19, located in the fuse block (J/B)]

OK or NG

- OK >> GO TO 2.
- NG >> Replace fuse.

### 2. CHECK SECURITY INDICATOR LAMP

1. Install 10A fuse.
2. Start engine and turn ignition switch OFF.
3. Check the security indicator lamp lights up.

**Security indicator lamp should light up.**

OK or NG

- OK >> INSPECTION END.
- NG >> GO TO 3.


### 3. CHECK SECURITY INDICATOR LAMP POWER SUPPLY CIRCUIT

1. Disconnect security indicator lamp.
2. Check voltage between security indicator lamp connector M24 terminal 8 and ground.

**8 – Ground :Battery voltage**

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace harness.

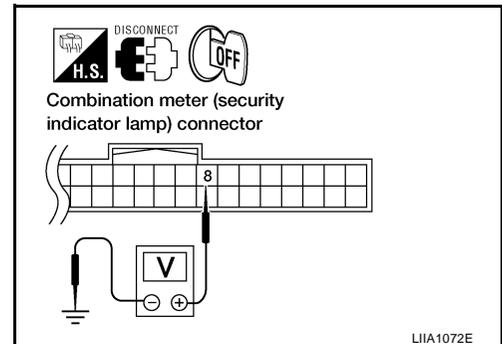

### 4. CHECK BCM (NATS CONTROL UNIT) FUNCTION


1. Connect security indicator lamp.
2. Disconnect BCM.
3. Check voltage between BCM connector M18 terminal 23 and ground.

**23 – Ground :Battery voltage**

OK or NG

- OK >> BCM is malfunctioning.
  - Replace BCM.  
**Ref. part No. A**
  - Perform initialization with CONSULT-II.
  - For initialization, refer to “CONSULT-II Operation Manual NATS-IVIS/NVIS”.

- NG >> Check the following:
  - Harness for open or short between security indicator lamp and BCM (NATS control unit).
  - Indicator lamp condition

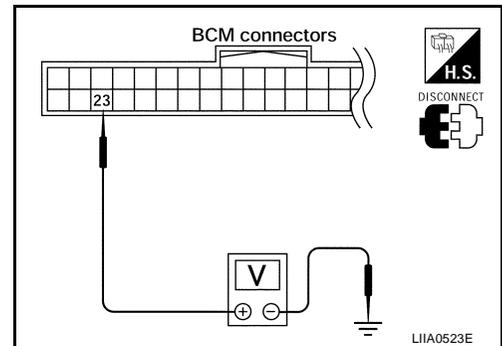


# NVIS(NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

EIS004K4

## How to Replace NATS Antenna Amp.

### NOTE:

- If NATS antenna amp. is not installed correctly, NVIS (NATS) system will not operate properly and SELF-DIAG RESULTS on CONSULT-II screen will show "LOCK MODE" or "CHAIN OF IMMU-KEY".
- Initialization is not necessary when only NATS antenna amp. is replaced with a new one.

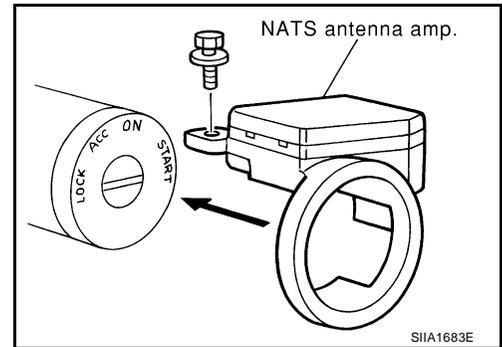

# HOMELINK UNIVERSAL TRANSCEIVER


## HOMELINK UNIVERSAL TRANSCEIVER

### Wiring Diagram — TRNSCV —


PF9:96401

EIS004K5

## BL-TRNSCV-01

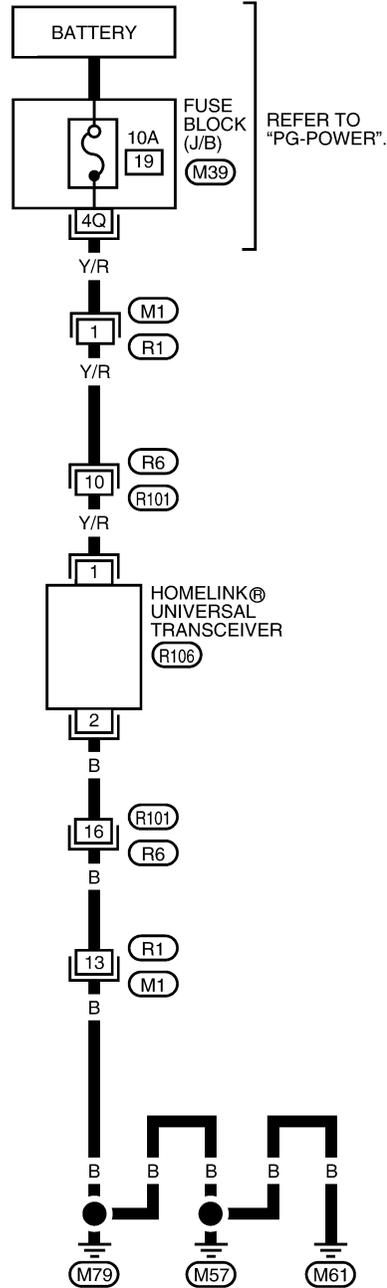

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

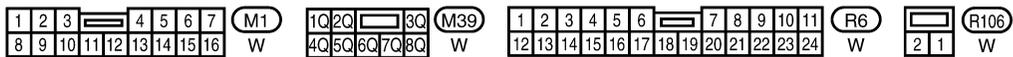

WIWA0759E

# HOMELINK UNIVERSAL TRANSCEIVER

EIS005XG

## Trouble Diagnoses DIAGNOSTIC PROCEDURE

### SYMPTOM: Transmitter does not activate receiver.

Before conducting the procedure given below, make sure that system receiver (garage door opener, etc.) operates with original, hand-held transmitter. If NG, receiver or hand-held transmitter is at fault, not vehicle related.


### 1. ILLUMINATE CHECK

- Turn ignition switch OFF.
- Does amber light (LED) of transmitter illuminate when any button is pressed?

#### YES or NO

YES >> GO TO 2.

NO >> GO TO 3.

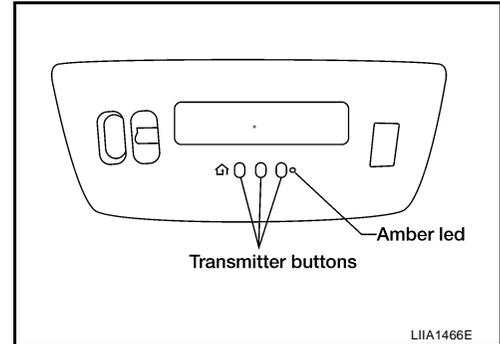

### 2. TRANSMITTER CHECK

Check transmitter with Tool.\*

\*For details, refer to Technical Service Bulletin.

#### OK or NG

OK >> Receiver or hand-held transmitter malfunction, not vehicle related.

NG >> Replace transmitter.

### 3. POWER SUPPLY CHECK


1. Disconnect transmitter.
2. Check voltage between Homelink® universal transceiver connector R106 terminal 1 and ground.

**1 - Ground** : **Battery voltage**

#### OK or NG

OK >> GO TO 4.

NG >> Repair or replace fuse or harness.

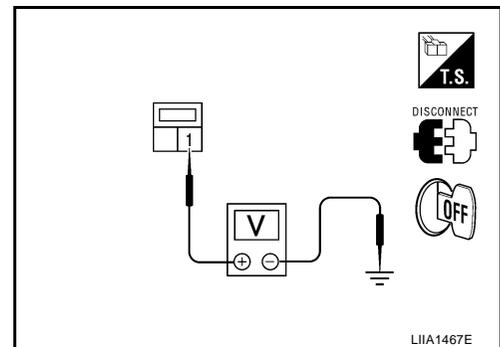

# HOMELINK UNIVERSAL TRANSCEIVER


## 4. GROUND CIRCUIT CHECK

Check continuity between Homelink® universal transceiver connector R106 terminal 2 and body ground.

**2 - Ground** : **Continuity should exist.**

OK or NG

- OK >> Replace compass and thermometer assembly.
- NG >> Repair or replace harness.

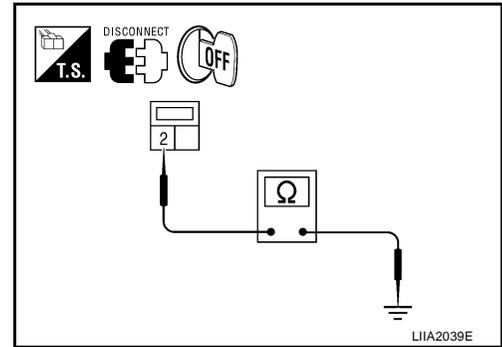

A  
B  
C  
D  
E  
F  
G  
H  
J  
K  
L  
M

BL

# CAB AND REAR BODY

## CAB AND REAR BODY


PFP:93020

### Body Mounting

EIS004K7

When removing, be sure to replace bolts and nuts (sealant applied bolts or self-lock nuts are used for all mounting).

SEC. 930

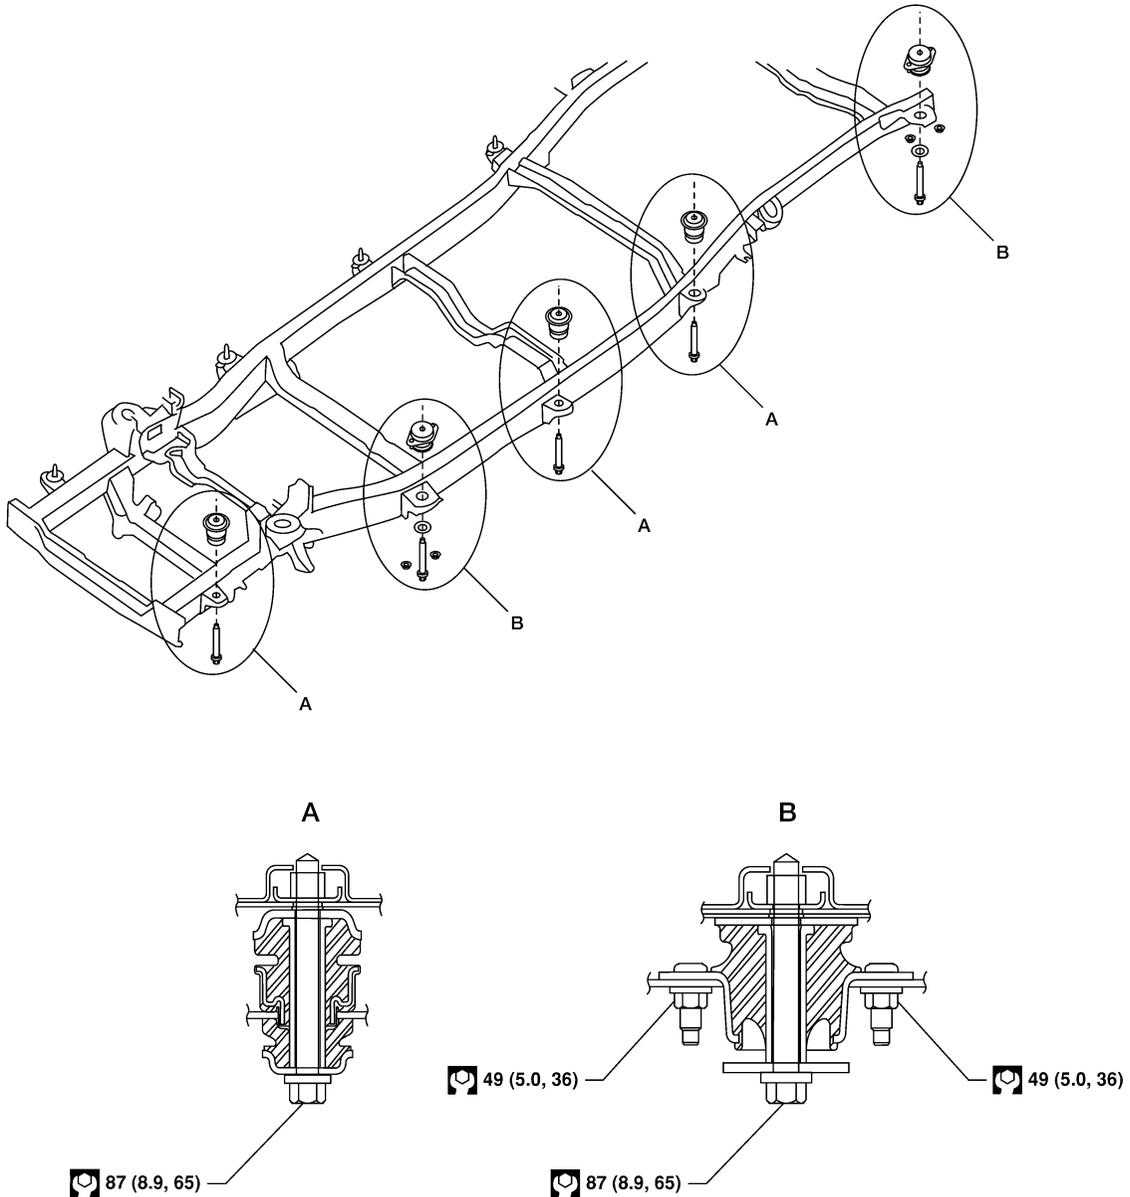

 N·m (kg-m, ft-lb)

LIA1564E


# BODY REPAIR

## BODY REPAIR

PF:60100

### Body Exterior Paint Color

E/S004K8

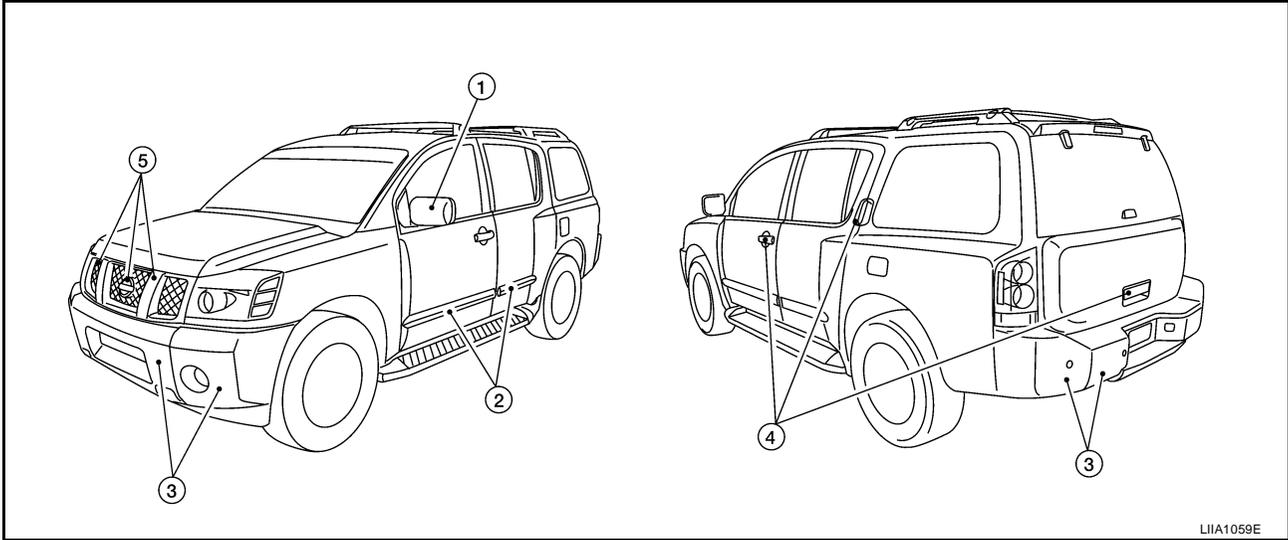

LIA1059E


Component			Color code	A15	B18	BW9	G10	K11	K12	KY2	Q10
			Description	Red Brawn	Deep Water Blue	Majestic Blue	Galaxy	Smoke	Silver Lightening	Granite	Blizzard
			Type	M	M	M	M	M	M	M	S
			Clear coat	t	t	t	t	t	t	t	t
1	Outside mirror	Body	Body color	A15	B18	BW9	G10	K11	K12	KY2	Q10
		Base	Black	KH3	KH3	KH3	KH3	KH3	KH3	KH3	KH3
2	Side Guard Molding		Body color	A15	B18	BW9	G10	K11	K12	KY2	Q10
3	Bumpers	Fascias	Body color	A15	B18	BW9	G10	K11	K12	KY2	Q10
		Center	Chromium plate	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P
4	Outside handles	Front	Chromium plate	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P
		Rear	Body color	A15	B18	BW9	G10	K11	K12	KY2	Q10
5	Radiator grille	Center and emblem	Chromium plate	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P
		Center	Black	KH3	KH3	KH3	KH3	KH3	KH3	KH3	KH3

M: Metallic; S-Solid; 2S: 2-Coat Solid, 2P: 2-Coat Pearl; 3P: 3-Coat Pearl; t: New Cross Linking Clear Coat

# BODY REPAIR

## Body Component Parts UNDERBODY COMPONENT PARTS

EIS004K9

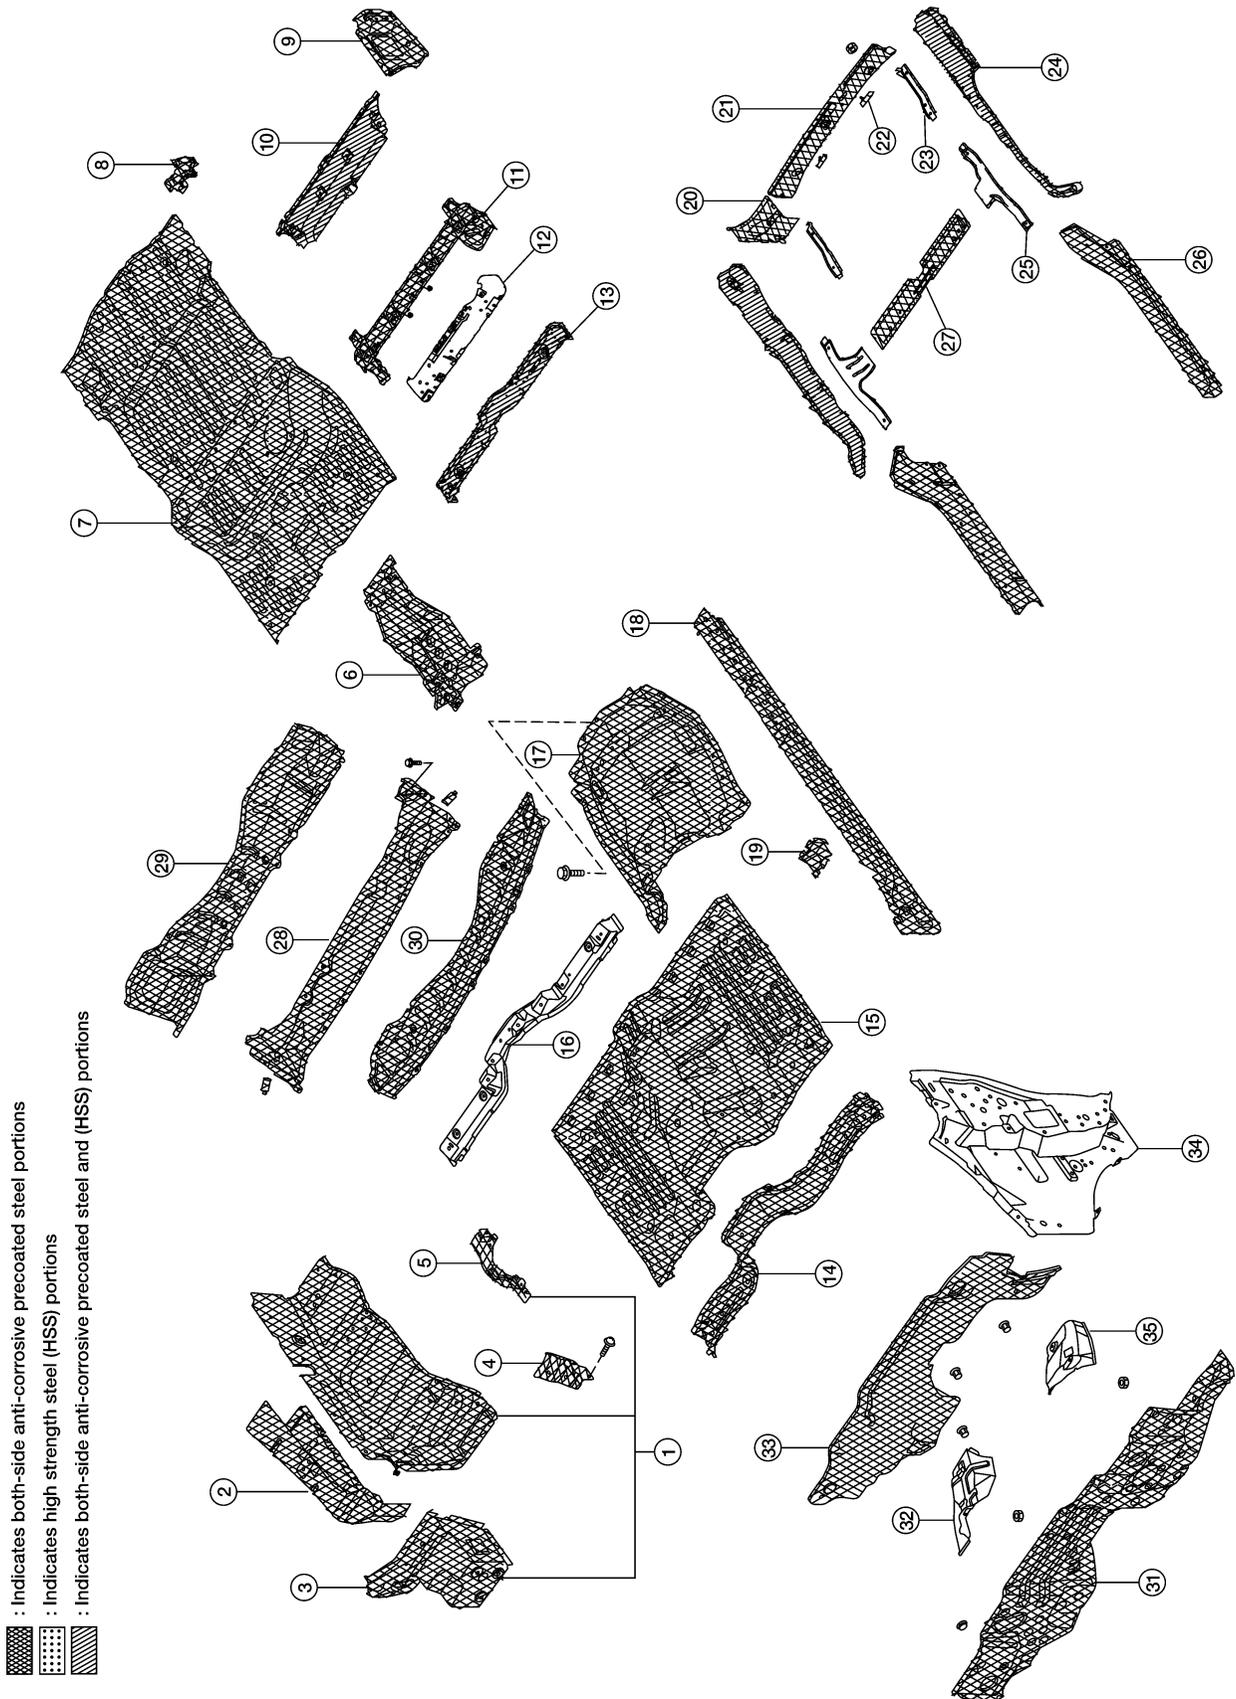

LIA0908E


## BODY REPAIR

---

1. Hoodledge assembly (RH, LH)	A
2. Hoodledge reinforcement (RH, LH)	
3. Body mounting bracket (RH, LH)	
4. Hoodledge front brace (RH), Battery mounting bracket (LH)	B
5. Harness connector bracket	
6. Rear floor reinforcement	
7. Rear floor	C
8. Rear floor reinforcement	
9. Rear floor side (RH, LH)	
10. Crossmember	D
11. Second seat rear crossmember	
12. Second seat front crossmember	
13. Rear front seat crossmember	E
14. Second Body crossmember	
15. Front floor	
16. Front seat front crossmember	F
17. Front floor reinforcement	
18. Outer sill (RH, LH)	G
19. Second crossmember extension	
20. Rear crossmember end	
21. Rear lower crossmember end	H
22. Rear crossmember end (RH, LH)	
23. Rear side member rear reinforcement (RH, LH)	
24. Rear side member (RH, LH)	BL
25. Rear side member reinforcement (RH, LH)	
26. Inner sill extension (RH, LH)	
27. Rear crossmember	J
28. Upper dash top	
29. Upper dash bottom	K
30. Cowl top	
31. Lower dash	
32. Lower dash insulator (RH)	L
33. Lower dash reinforcement	
34. Side dash (RH, LH)	
35. Lower dash insulator	M

# BODY REPAIR

## BODY COMPONENT PARTS

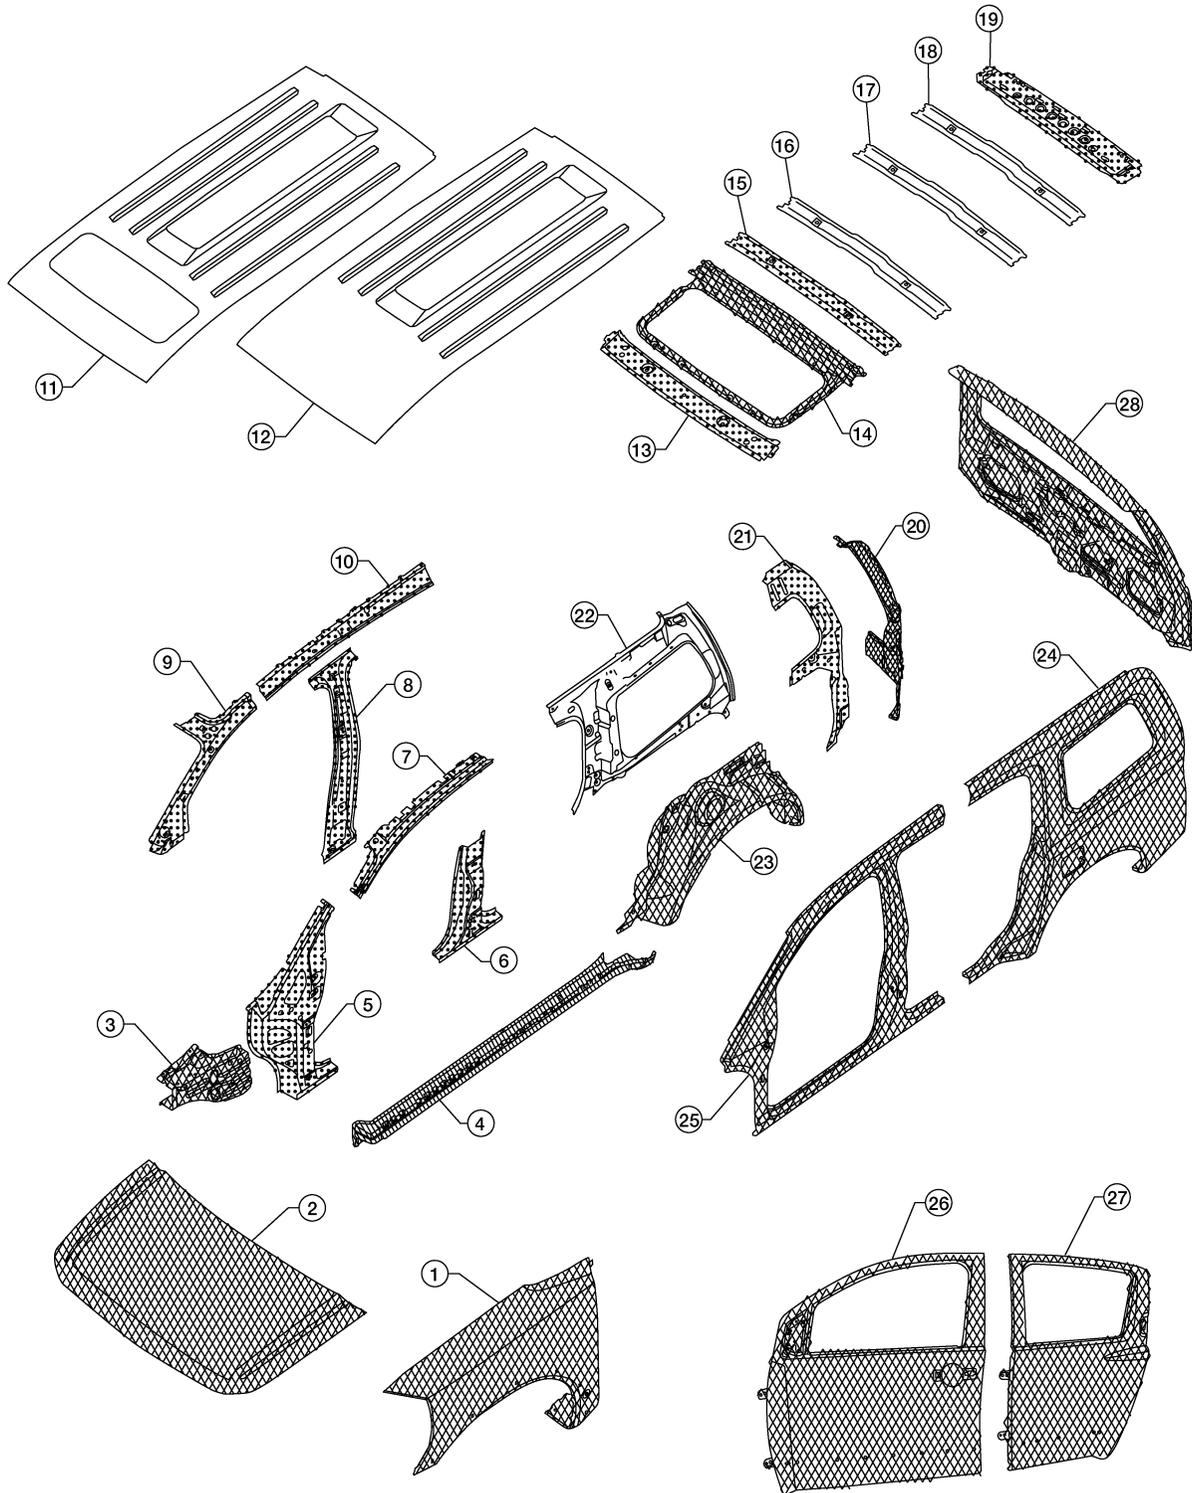

-  : Indicates both-side anti-corrosive pre-coated steel portions
-  : Indicates high strength steel (HSS) portions
-  : Indicates both-side anti-corrosive pre-coated steel and (HSS) portions

WIHA0299E

## BODY REPAIR

---

1. Front fender (RH, LH)	A
2. Hood assembly	
3. Rear hoodledge reinforcement (RH, LH)	
4. Outer sill reinforcement (RH, LH)	B
5. Front pillar hinge brace (RH, LH)	
6. Center pillar hinge brace	
7. Outer front pillar reinforcement (RH, LH)	C
8. Center inner pillar (RH, LH)	
9. Front inner pillar upper (RH, LH)	
10. Inner roof side rail (RH, LH)	D
11. Roof with sunroof opening	
12. Roof	
13. Front roof rail	E
14. Sunroof reinforcement	
15. Roof 1st bow	
16. Roof 2nd bow	F
17. Roof 3rd bow	
18. Roof 4th bow	
19. Rear roof rail	G
20. Main back pillar (RH, LH)	
21. Back pillar reinforcement (RH, LH)	H
22. Rear inner side panel (RH, LH)	
23. Rear wheel housing (RH, LH)	
24. Rear body side outer (RH, LH)	BL
25. Front body side outer (RH, LH)	
26. Front door assembly (RH, LH)	
27. Rear door assembly (RH, LH)	J
28. Lift gate assembly	


K

L

M

# BODY REPAIR

## FRAME COMPONENT PARTS

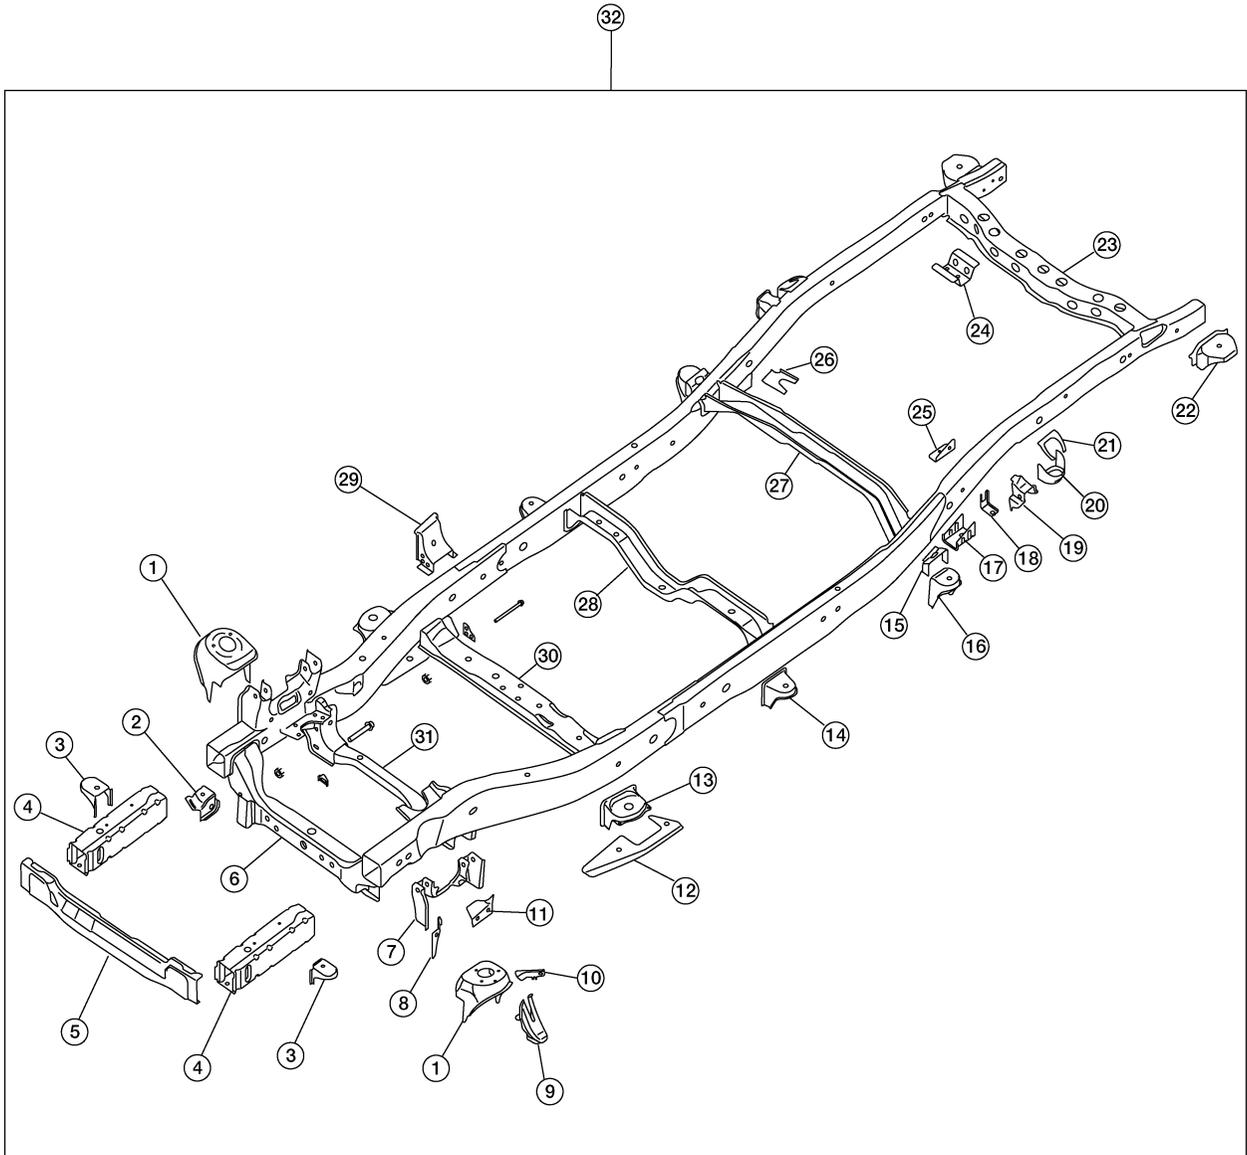

LIA1594E

## BODY REPAIR

---

1. Front shock absorber bracket RH/LH	A
2. Front differential mounting bracket RH/LH	
3. 1st cab mounting bracket RH/LH	
4. Front side member extension assembly RH/LH	
5. 1st crossmember assembly	B
6. 2nd crossmember assembly	
7. Front upper link mounting bracket RH/LH	C
8. Panhard rod bracket reinforcement	
9. Bound bumper bracket RH/LH	
10. Front brake hose bracket RH/LH	D
11. Panhard rod reinforcement	
12. 4th crossmember gusset RH/LH	
13. 2nd cab mounting bracket RH/LH	E
14. 3rd cab mounting bracket RH/LH	
15. 4th cab mounting reinforcement RH/LH	
16. 4th cab mounting bracket RH/LH	F
17. Rear suspension mounting bracket RH/LH	
18. Rear brake hose bracket	
19. Rear shock absorber bracket assembly RH/LH	G
20. Rear bound bumper bracket RH/LH	
21. Rear bracket bumper reinforcement RH/LH	H
22. Cab mounting bracket assembly RH/LH	
23. 9th crossmember assembly	
24. Exhaust bracket assembly	BL
25. Canister bracket, LH	
26. 7th crossmember reinforcement	
27. 7th crossmember assembly	J
28. 6th crossmember assembly	
29. 4th crossmember gusset RH/LH	
30. 4th crossmember assembly	K
31. 3rd crossmember assembly	
32. Frame assembly	L

M

# BODY REPAIR

EIS004KA

## Corrosion Protection


### DESCRIPTION

To provide improved corrosion prevention, the following anti-corrosive measures have been implemented in NISSAN production plants. When repairing or replacing body panels, it is necessary to use the same anti-corrosive measures.

### ANTI-CORROSIVE PRECOATED STEEL (GALVANNEALED STEEL)

To improve reparability and corrosion resistance, a new type of anti-corrosive precoated steel sheet has been adopted replacing conventional zinc-coated steel sheet.

Galvannealed steel is electroplated and heated to form Zinc-iron alloy, which provides excellent and long term corrosion resistance with cationic electrode position primer.

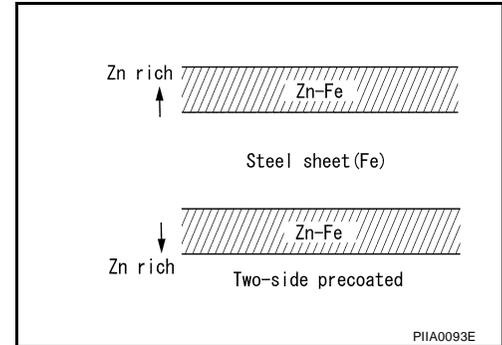


Nissan Genuine Service Parts are fabricated from galvannealed steel. Therefore, it is recommended that GENUINE NISSAN PARTS or equivalent be used for panel replacement to maintain the anti-corrosive performance built into the vehicle at the factory.

### PHOSPHATE COATING TREATMENT AND CATIONIC ELECTRODEPOSITION PRIMER

A phosphate coating treatment and a cationic electrode position primer, which provide excellent corrosion protection, are employed on all body components.

#### CAUTION:

Confine paint removal during welding operations to an absolute minimum.

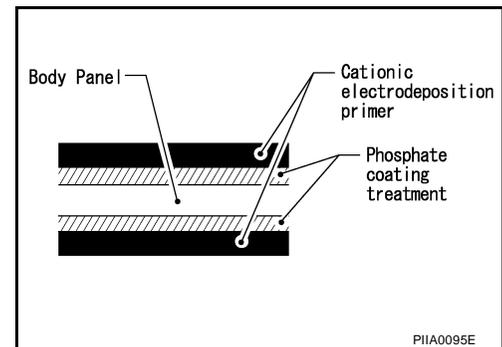


Nissan Genuine Service Parts are also treated in the same manner. Therefore, it is recommended that GENUINE NISSAN PARTS or equivalent be used for panel replacement to maintain anti-corrosive performance built into the vehicle at the factory.


# BODY REPAIR

## ANTI-CORROSIVE WAX

To improve corrosion resistance, anti-corrosive wax is applied inside the body sill and inside other closed sections. Accordingly, when replacing these parts, be sure to apply anti-corrosive wax to the appropriate areas of the new parts. Select an excellent anti-corrosive wax which will penetrate after application and has a long shelf life.

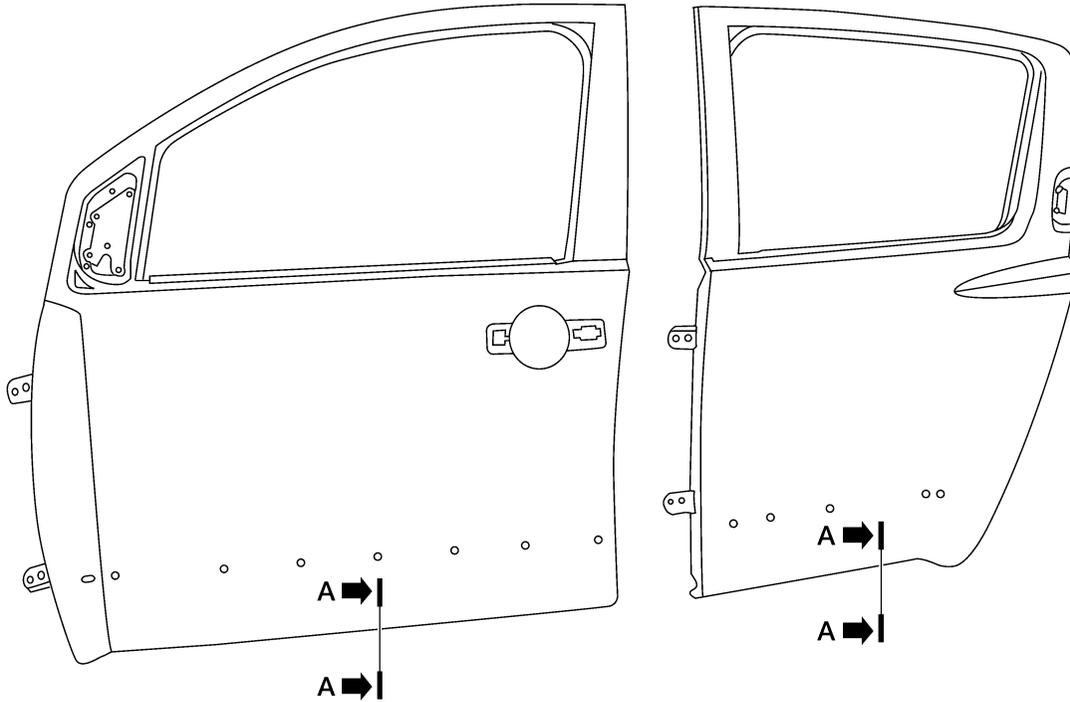

-  : Indicates outside body sealant
-  : Indicates anti-corrosive wax coated portions

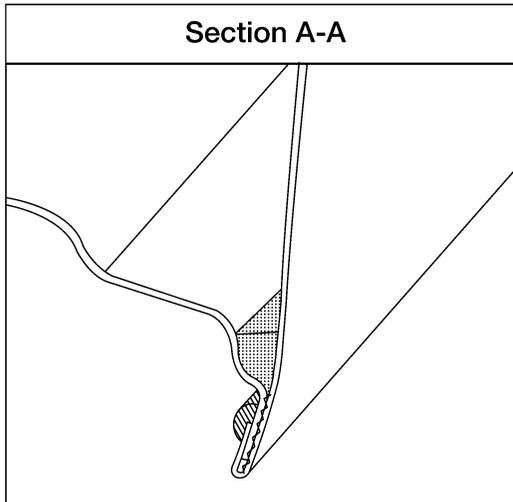

LIA0905E

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

# BODY REPAIR


## UNDERCOATING

The underside of the floor and wheelhouse are undercoated to prevent rust, vibration, noise and stone chipping. Therefore, when such a panel is replaced or repaired, apply undercoating to that part. Use an undercoating which is rust preventive, soundproof, vibration-proof, shock-resistant, adhesive, and durable.

### Precautions in undercoating

1. Do not apply undercoating to any place unless specified (such as the areas above the muffler and three way catalyst which are subjected to heat).
2. Do not undercoat the exhaust pipe or other parts which become hot.
3. Do not undercoat rotating parts.
4. Apply bitumen wax after applying undercoating.

 : Indicates undercoated portions.

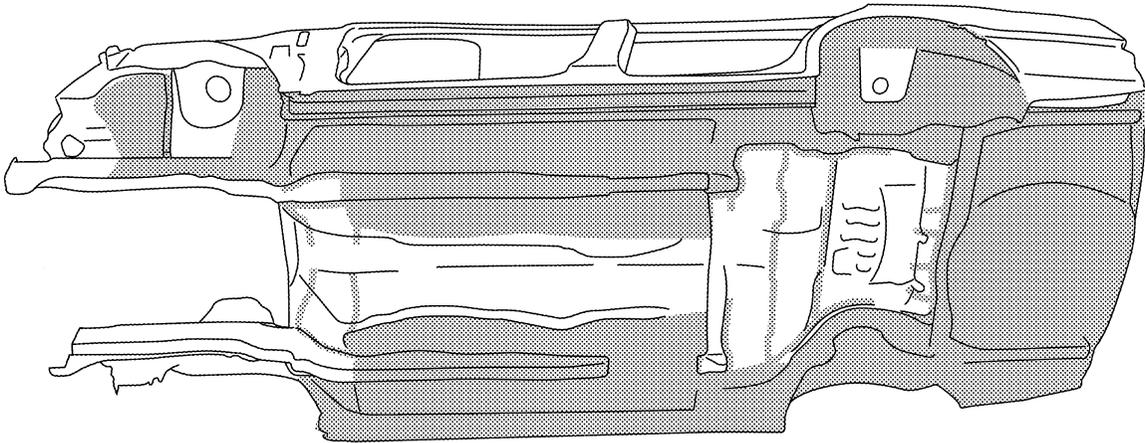



LIA0129E

# BODY REPAIR

EIS004KB


## Body Sealing DESCRIPTION

The following figure shows the areas which are sealed at the factory. Sealant which has been applied to these areas should be smooth and free from cuts or gaps. Care should be taken not to apply an excess amount of sealant and not to allow other unaffected parts to come into contact with the sealant.

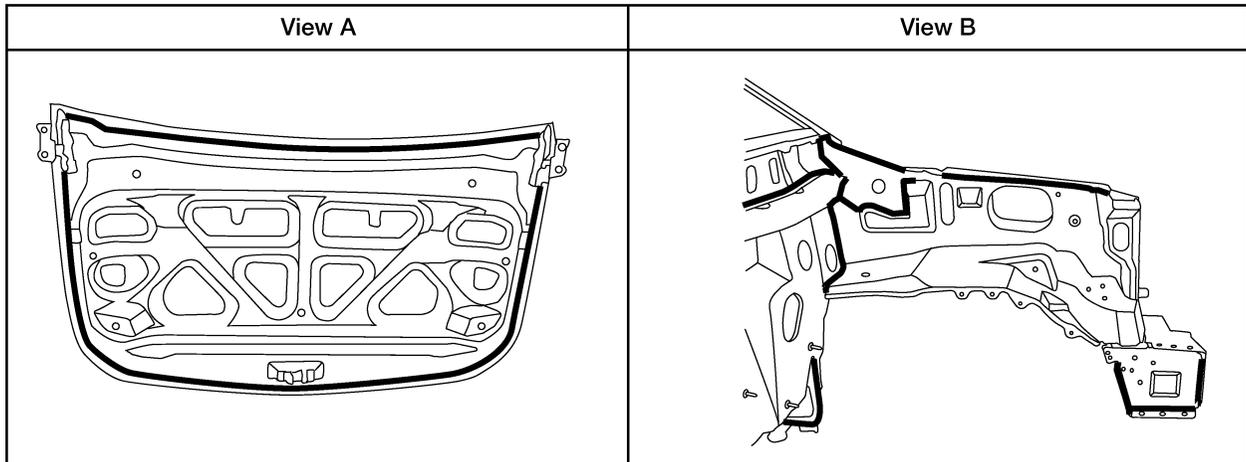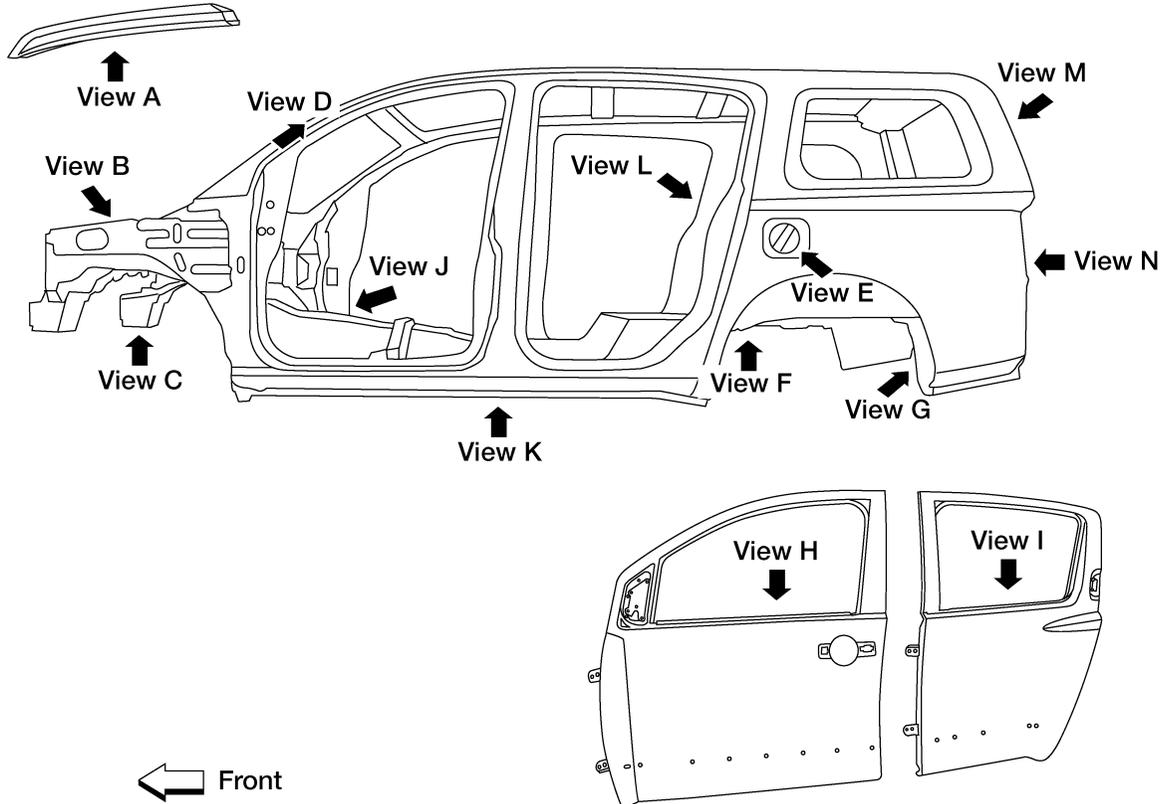


WIA0300E

# BODY REPAIR

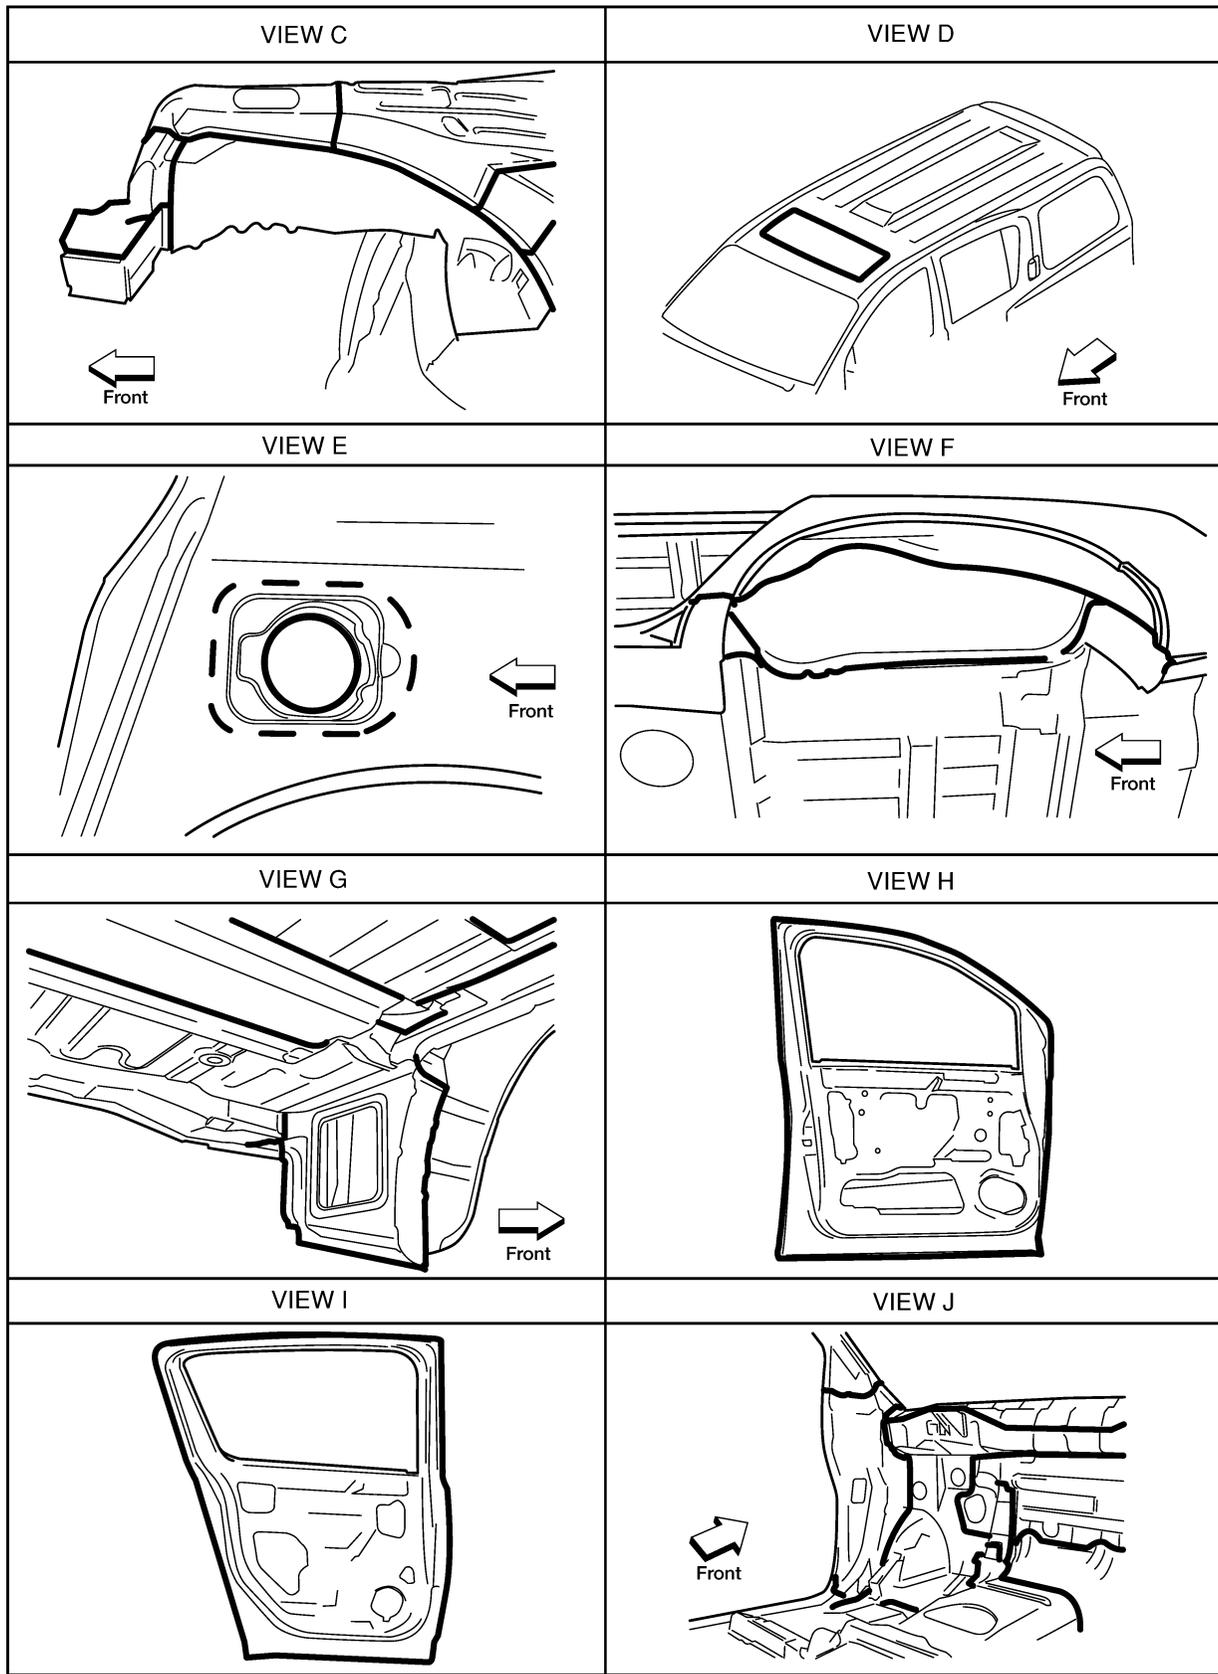

W1IA0278E

# BODY REPAIR

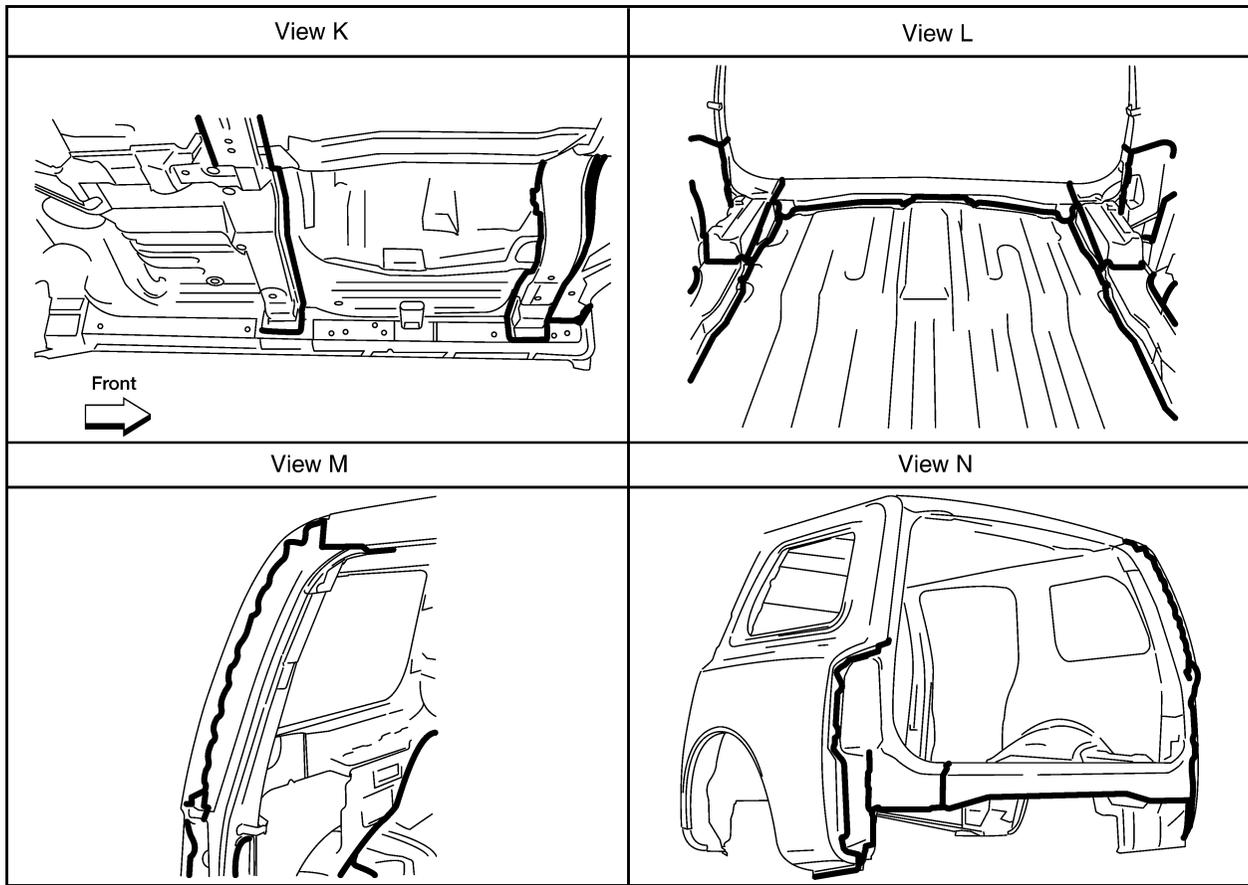


A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

LIA0912E

# BODY REPAIR

## Body Construction BODY CONSTRUCTION

EIS004KC

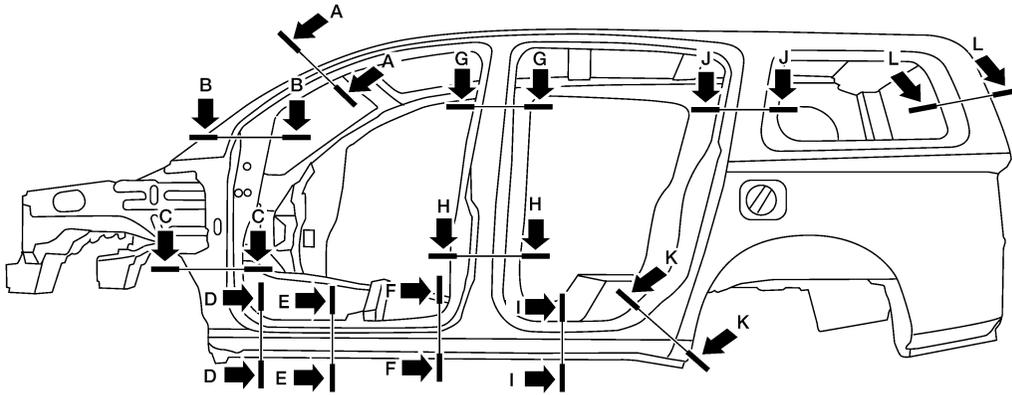

Section A-A	Section B-B	Section C-C	Section D-D
Section E-E	Section F-F	Section G-G	Section H-H
Section I-I	Section J-J	Section K-K	Section L-L

LIA1113E

# BODY REPAIR

## Body Alignment BODY CENTER MARKS

EIS004KD

A mark has been placed on each part of the body to indicate the vehicle center. When repairing parts damaged by an accident which might affect the vehicle frame (members, pillars, etc.), more accurate and effective repair will be possible by using these marks together with body alignment specifications.

A

B

C

D

E

F

G

H

**BL**



J

K

L

M

# BODY REPAIR

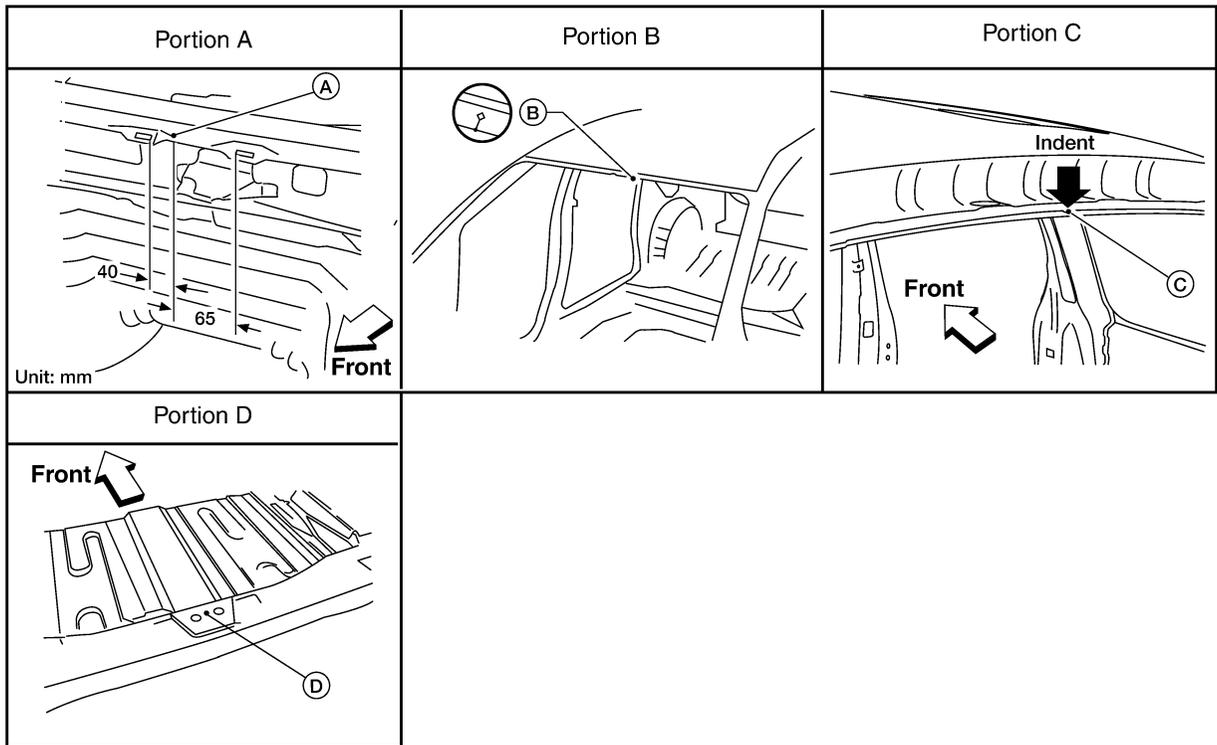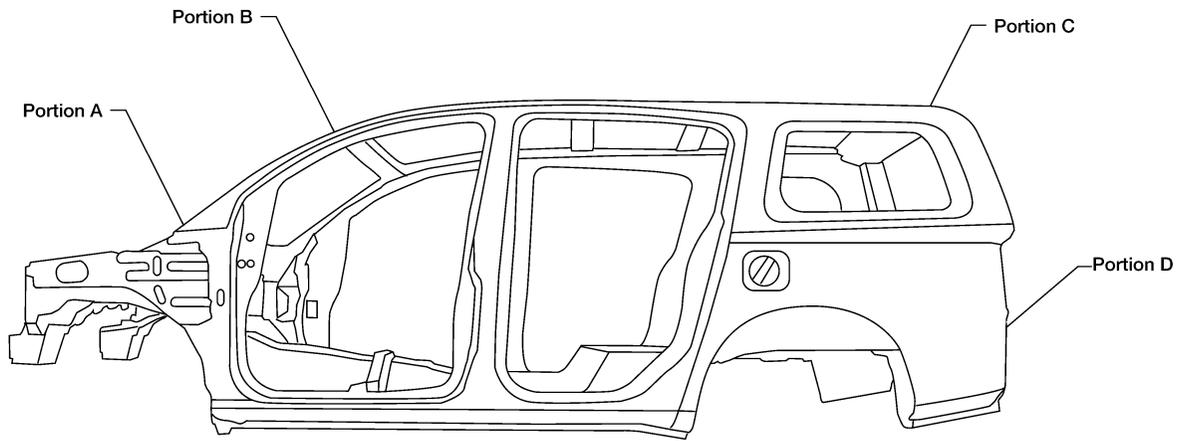


LIA1440E

# BODY REPAIR

## PANEL PARTS MATCHING MARKS

A mark has been placed on each body panel to indicate the parts matching positions. When repairing parts damaged by an accident which might affect the vehicle structure (members, pillars, etc.), more accurate and effective repair will be possible by using these marks together with body alignment specifications.

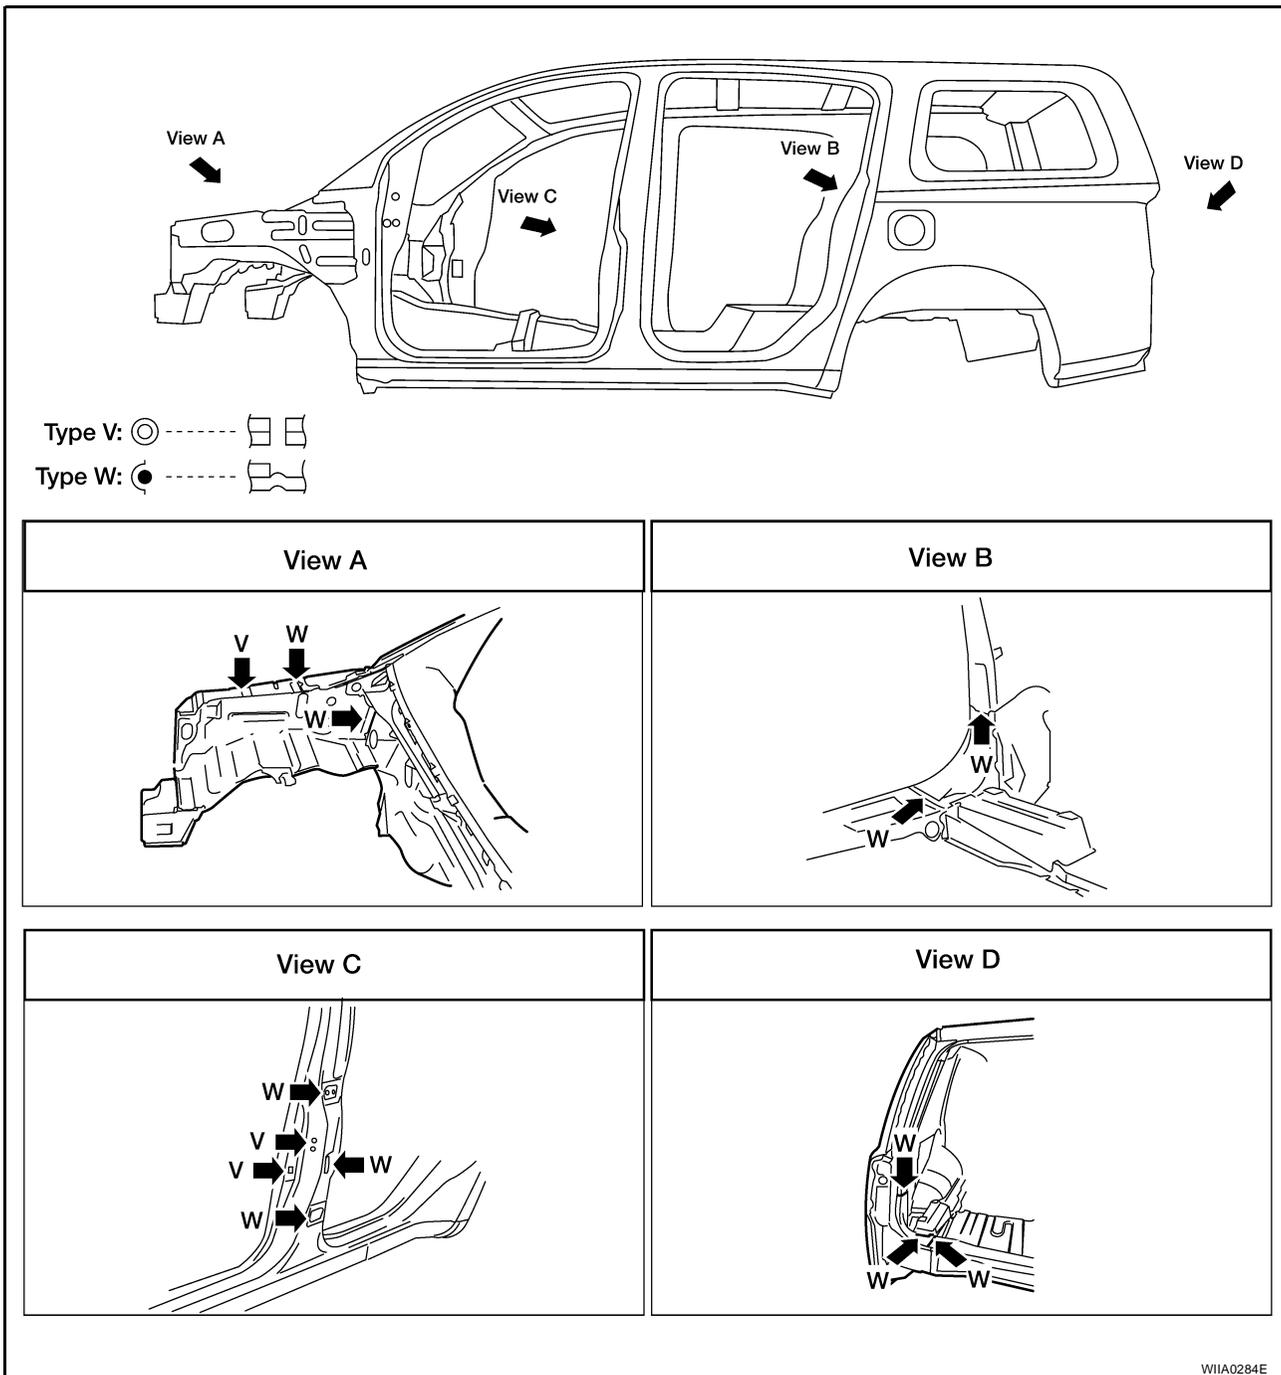


A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

# BODY REPAIR

## DESCRIPTION



- All dimensions indicated in the figures are actual.
- When using a tracking gauge, adjust both pointers to equal length. Then check the pointers and gauge itself to make sure there is no free play.
- When a measuring tape is used, check to be sure there is no elongation, twisting or bending.
- Measurements should be taken at the center of the mounting holes.
- An asterisk (\*) following the value at the measuring point indicates that the measuring point on the other side is symmetrically the same value.
- The coordinates of the measurement points are the distances measured from the standard line of "X", "Y" and "Z".

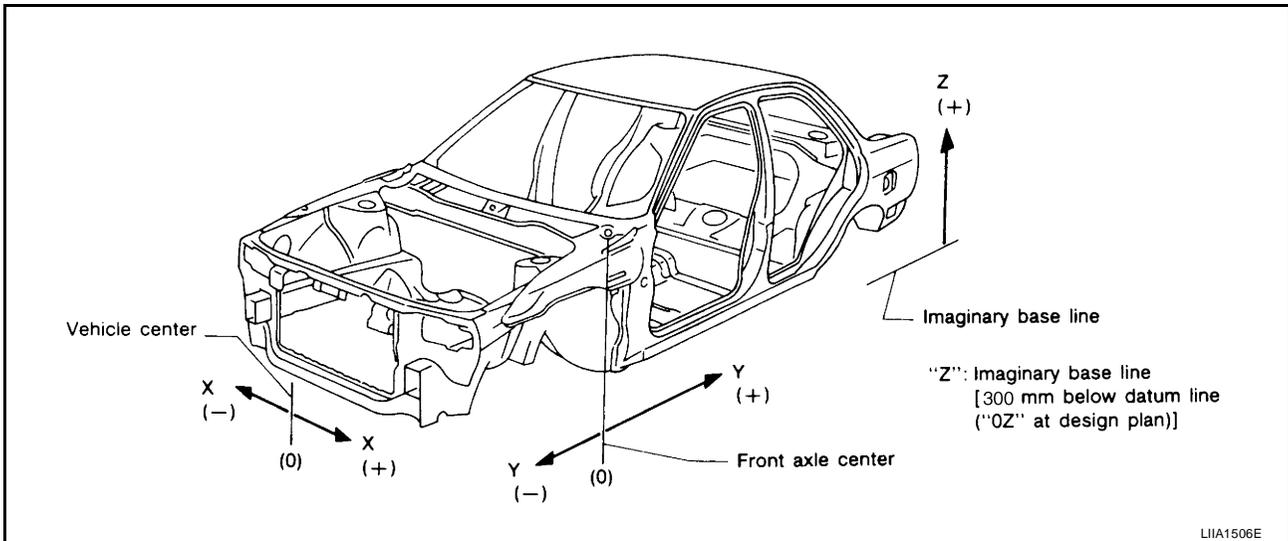

# BODY REPAIR

## ENGINE COMPARTMENT MEASUREMENT

Figures marked with a (\*) indicate symmetrically identical dimensions on both right and left hand sides of the vehicle.

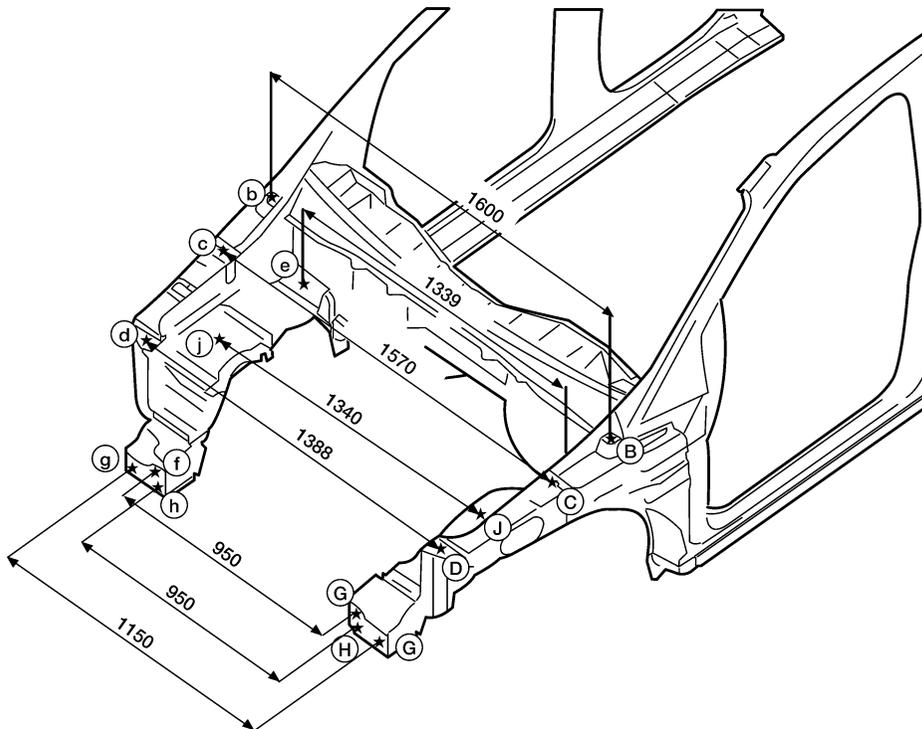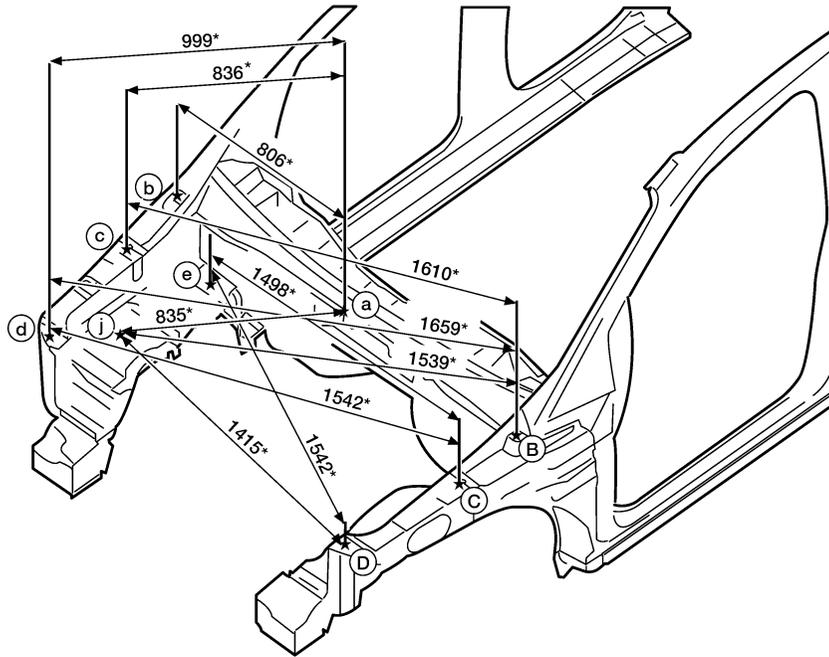

Unit: mm


W1A0551E

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M


# BODY REPAIR

## MEASUREMENT POINTS


- ⓑ Fender mount
- ⓒ Fender mount
- ⓓ Front end module mount
- ⓔ 18mm x 16mm diameter
- ⓙ 16mm diameter

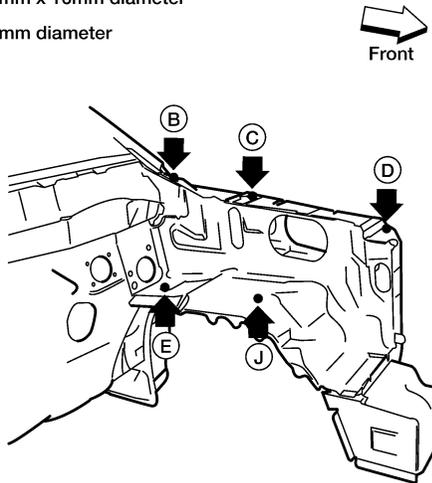

- ⓐ RH cowl
- ⓑ Fender mount
- ⓒ Fender mount
- ⓓ Front end module mount
- ⓔ 18mm x 16mm diameter
- ⓙ 16 mm diameter

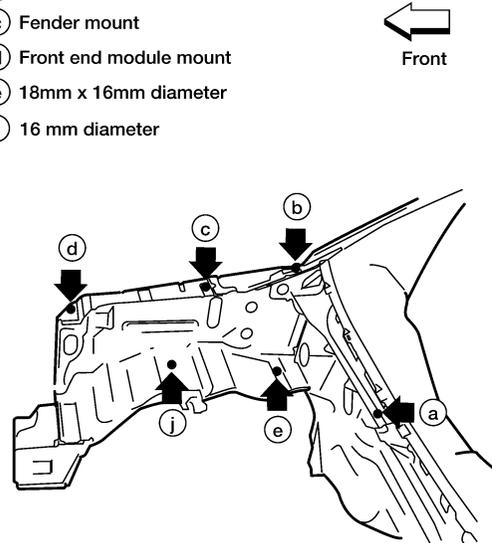

- ⓕ, ⓕ, ⓖ, ⓖ, ⓗ, ⓗ Front side member extension front

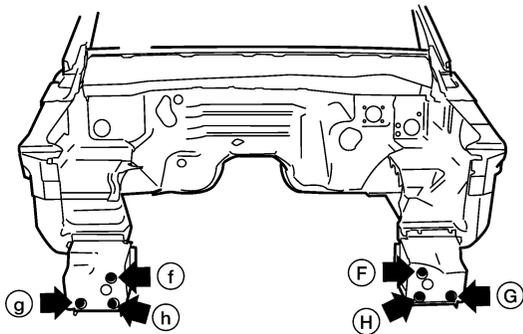

WIHA0279E



# BODY REPAIR

## UNDERBODY MEASUREMENT

Figures marked with a (\*) indicate symmetrically identical dimensions on both right and left hand sides of the vehicle.

As viewed from underside.

All dimensions indicated in this figure are actual.

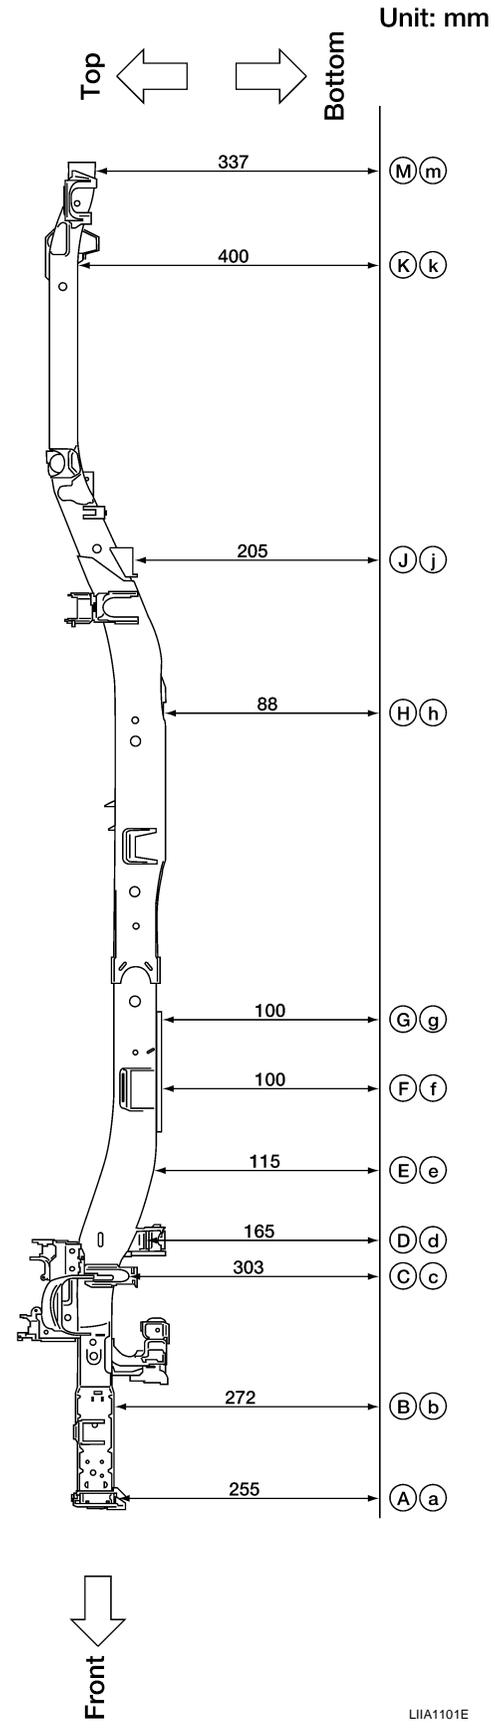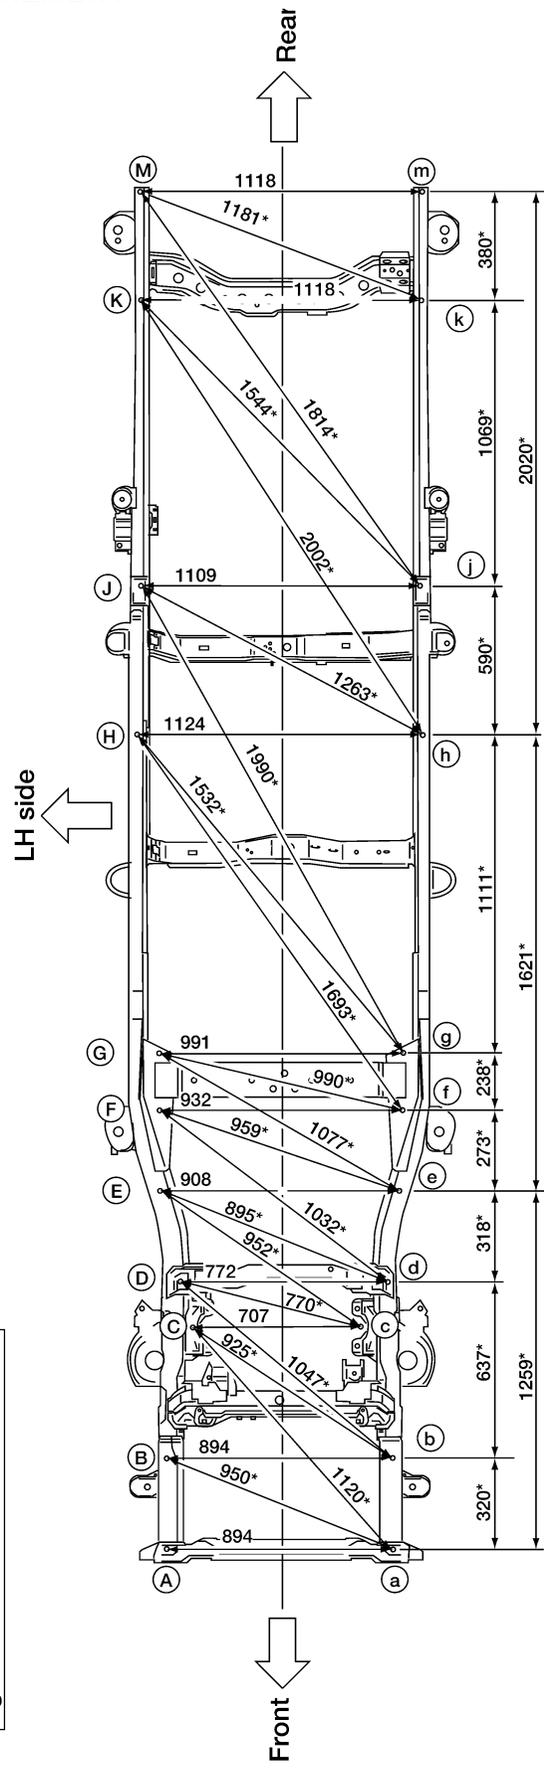


A  
B  
C  
D  
E  
F  
G  
H  
J  
K  
L  
M

BL

# BODY REPAIR

## MEASUREMENT POINTS

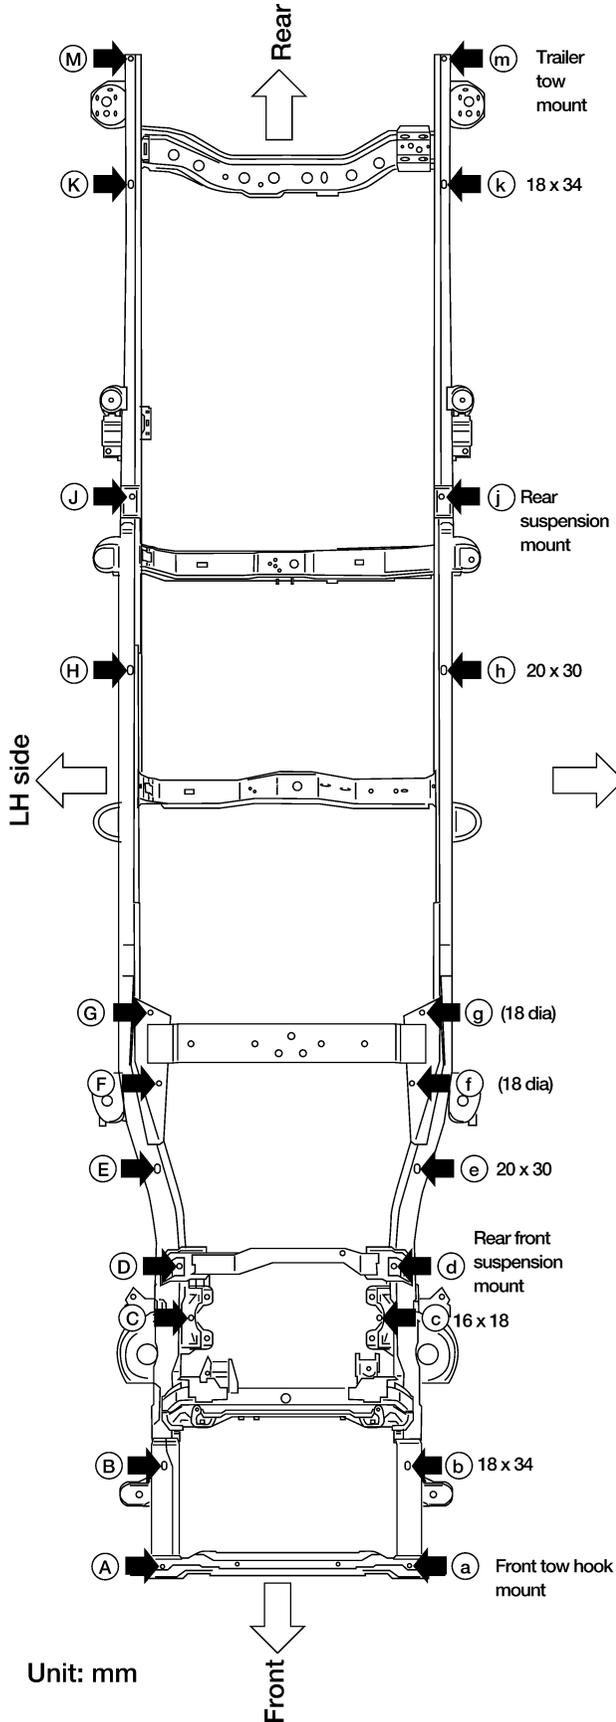


### Coordinates:

- (A), (a)  
X : ± 447  
Y : -745  
Z : 255
- (B), (b)  
X : ± 447  
Y : -427  
Z : 272
- (C), (c)  
X : ± 353  
Y : 35  
Z : 303
- (D), (d)  
X : ± 386  
Y : 198  
Z : 165
- (E), (e)  
X : ± 454  
Y : 504  
Z : 115
- (F), (f)  
X : ± 466  
Y : 777  
Z : 100
- (G), (g)  
X : ± 495  
Y : 1013  
Z : 100
- (H), (h)  
X : ± 562  
Y : 2122  
Z : 88
- (J), (j)  
X : ± 555  
Y : 2700  
Z : 205
- (K), (k)  
X : ± 559  
Y : 3751  
Z : 400
- (M), (m)  
X : ± 559  
Y : 4126  
Z : 337

Unit: mm

LIA1508E

# BODY REPAIR

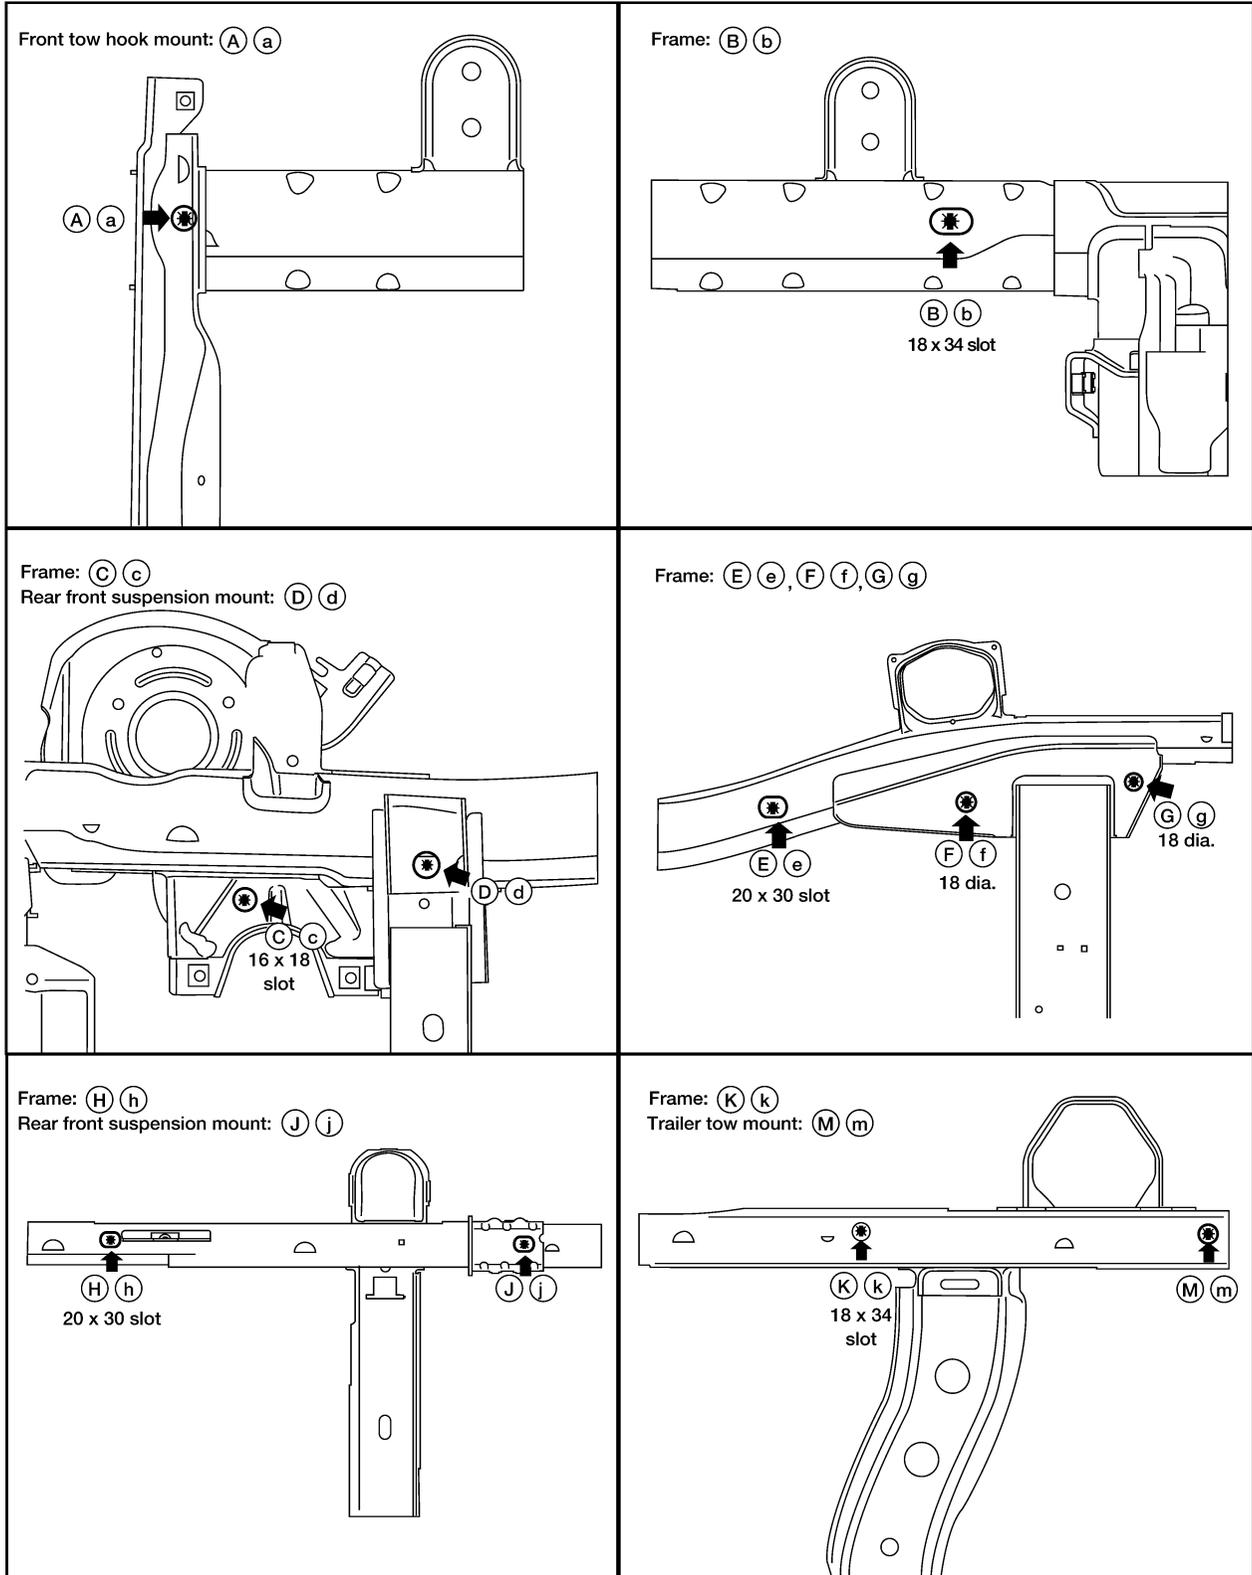

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

Coordinates:	(A, a)	(B, b)	(C, c)	(D, d)	(E, e)	(F, f)	(G, g)	(H, h)	(J, j)	(K, k)	(M, m)
X :	± 447	± 447	± 353	± 386	± 454	± 466	± 495	± 562	± 555	± 559	± 559
Y :	-747	-427	35	198	504	777	1013	2122	2700	3751	4126
Z :	255	272	303	165	115	100	100	88	205	400	337



Unit: mm

LIA1509E

# BODY REPAIR

## PASSENGER COMPARTMENT MEASUREMENT


Figures marked with a (\*) indicate symmetrically identical dimensions on both right and left hand sides of the vehicle.

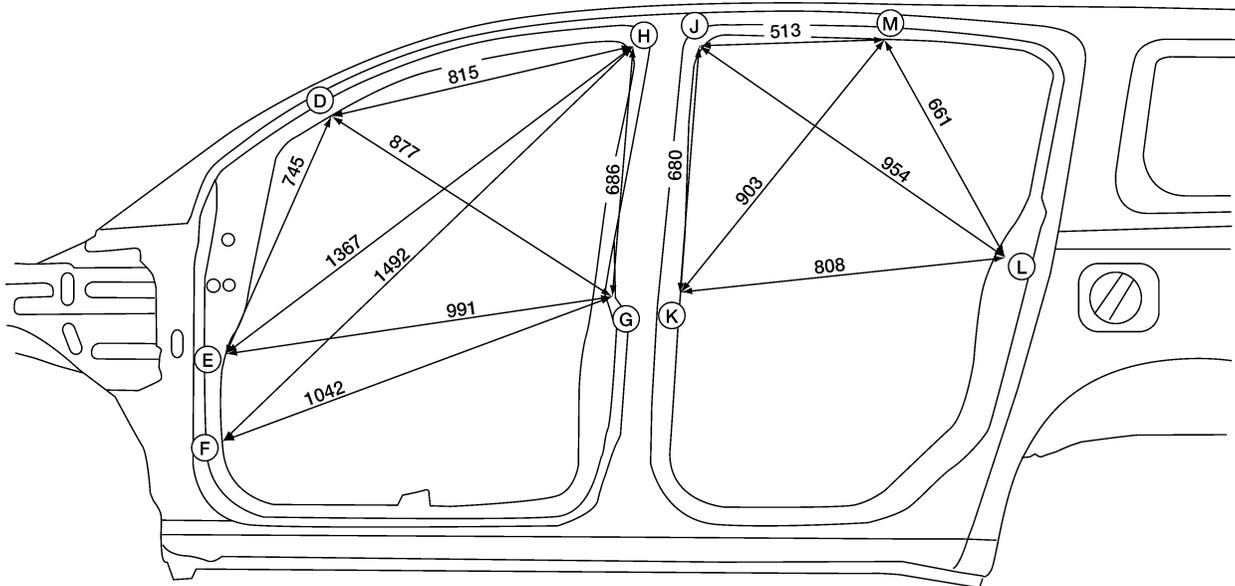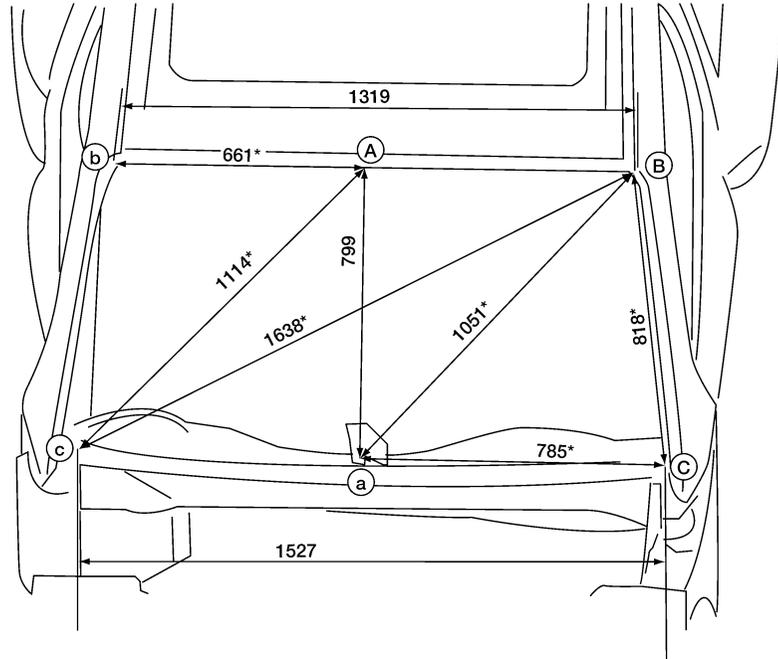

Unit: mm

LIA1510E

# BODY REPAIR

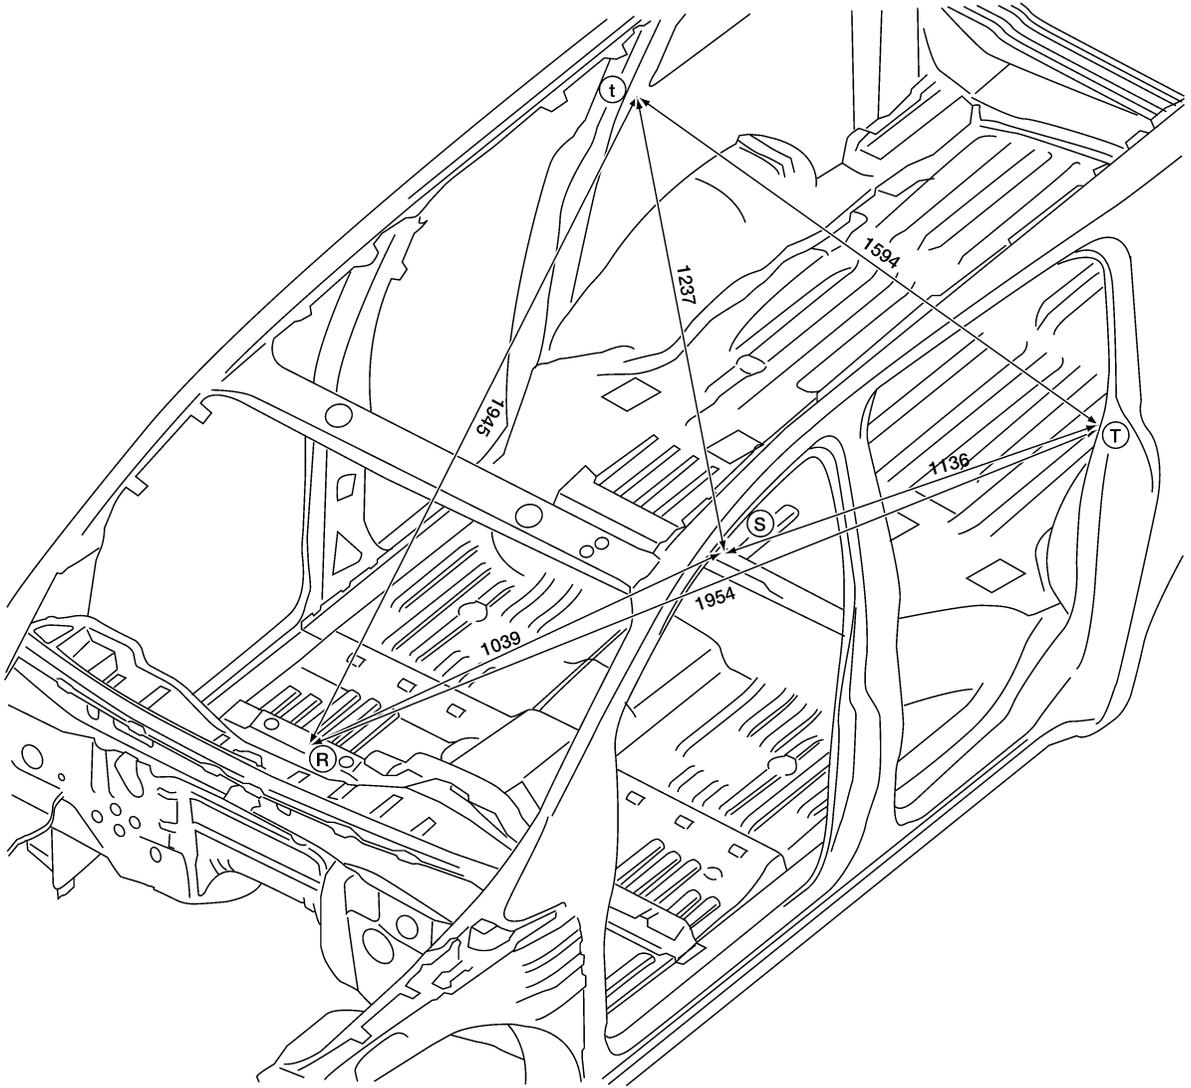







A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

Unit : mm

LIA1105E




# BODY REPAIR

## MEASUREMENT POINTS

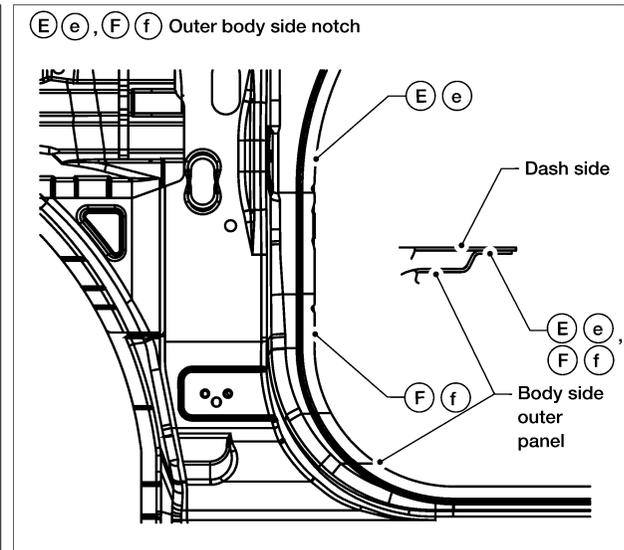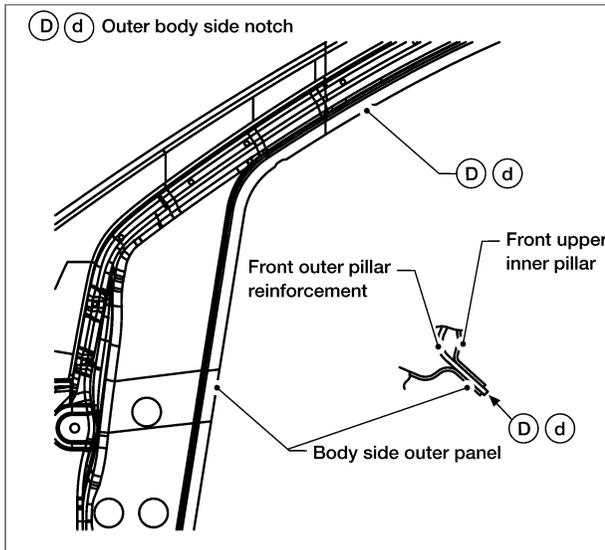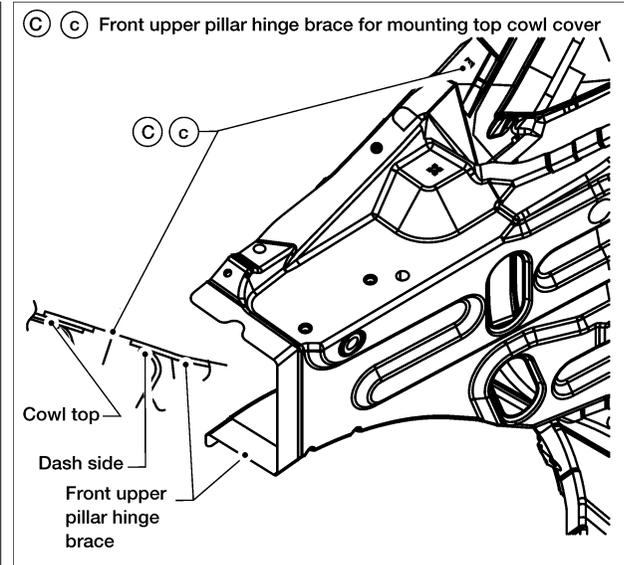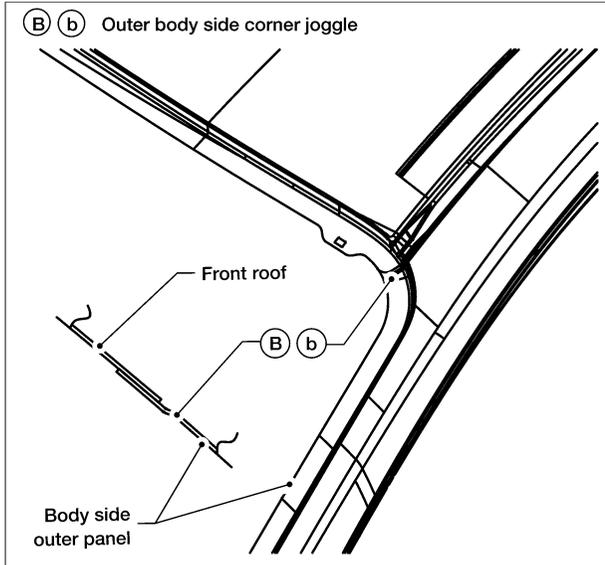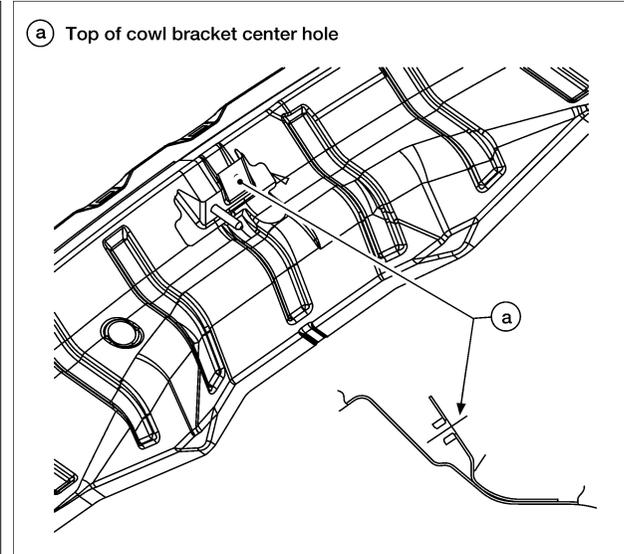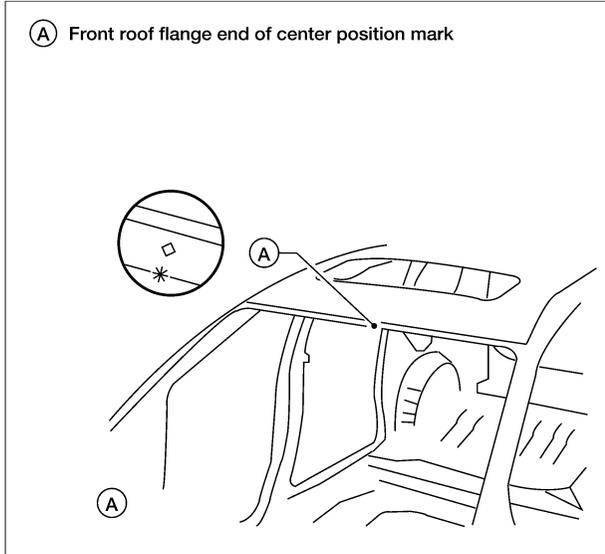

LIA1103E

# BODY REPAIR

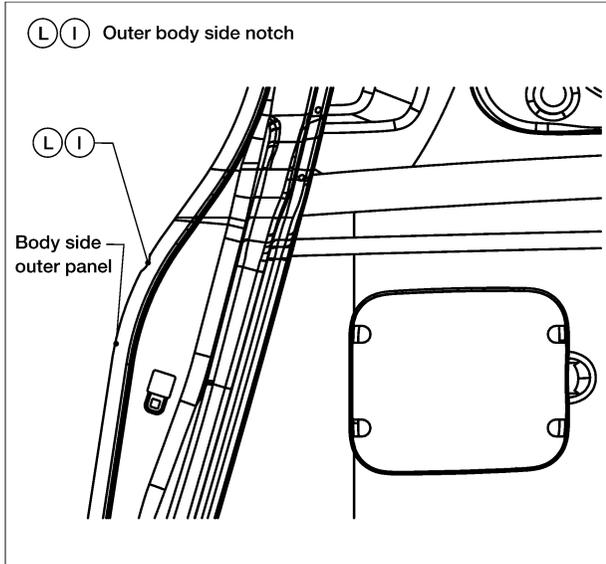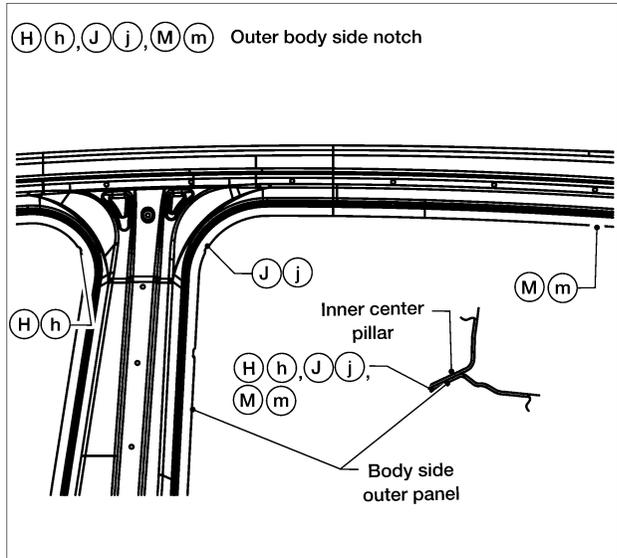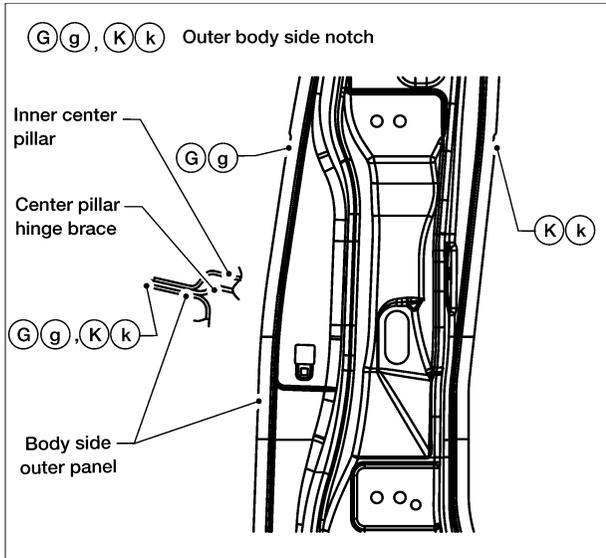


A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M


LIA1104E

# BODY REPAIR


(R) Front seat crossmember front

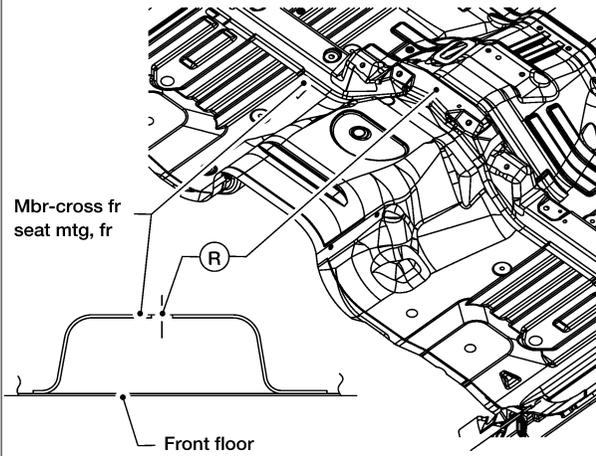

(S) 2nd seat crossmember front

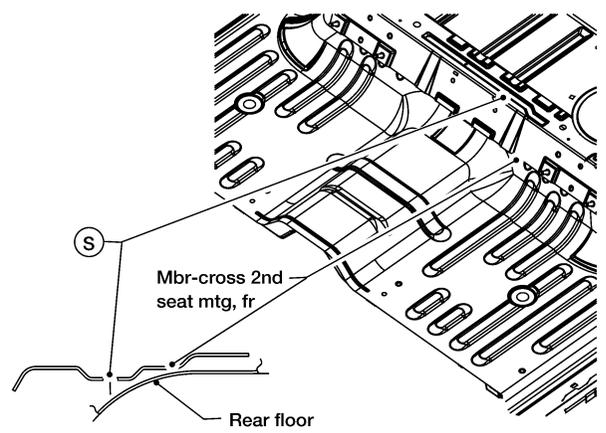

(T t) Inner side panel for seat belt anti-rotate

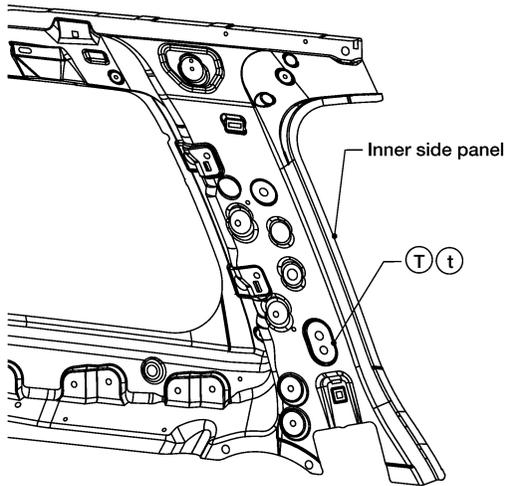


LIA1106E

# BODY REPAIR

## REAR BODY MEASUREMENT

Figures marked with a (\*) indicate symmetrically identical dimensions on both right and left hand sides of the vehicle.

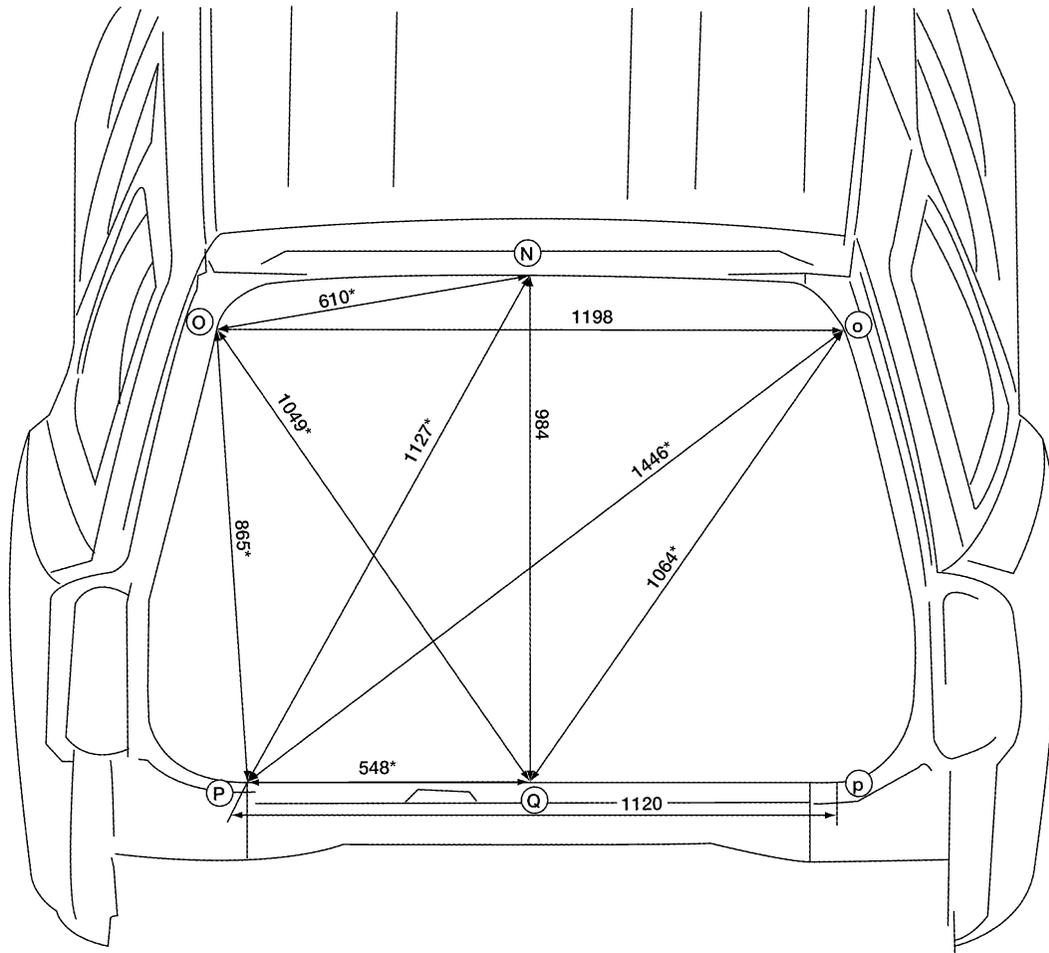





A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

Unit: mm

LIA1511E

# BODY REPAIR

## MEASUREMENT POINTS

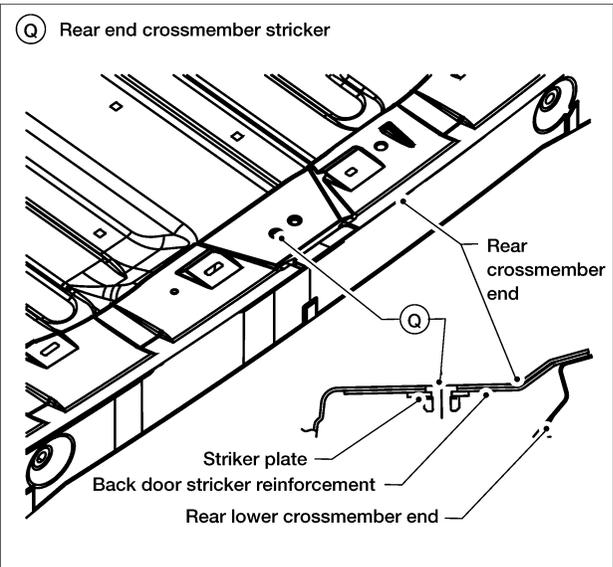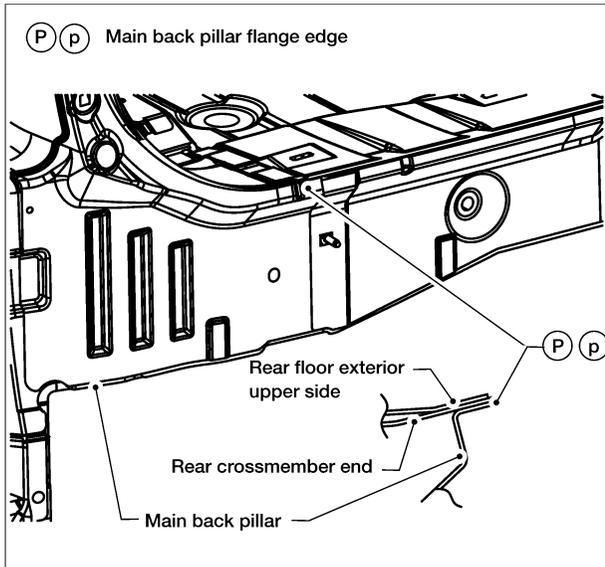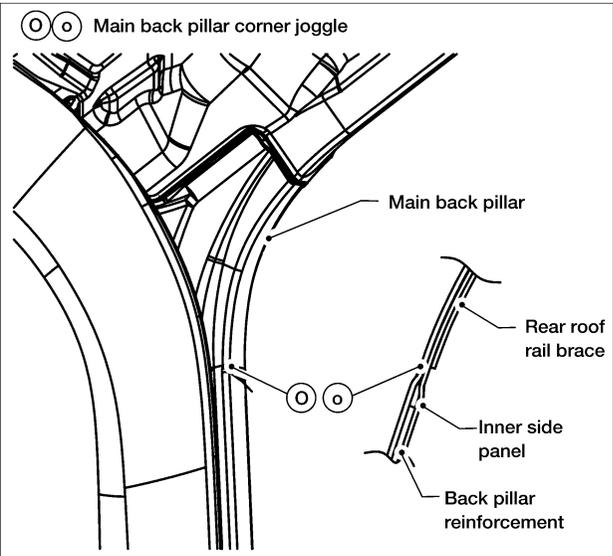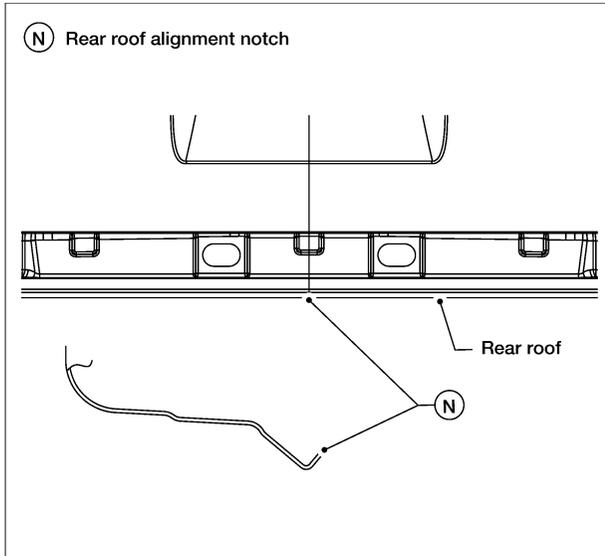

LIA1107E

# BODY REPAIR

EIS004KE


## Handling Precautions for Plastics HANDLING PRECAUTIONS FOR PLASTICS

Abbreviation	Material name	Heatresisting temperature °C (°F)	Resistance to gasoline and solvents	Other cautions
PE	Polyethylene	60 (140)	Gasoline and most solvents are harmless if applied for a very short time (wipe up quickly).	Flammable
PVC	Polyvinyl Chloride	80 (176)	Same as above.	Poison gas is emitted when burned.
EPM/EPDM	Ethylene Propylene (Diene) rubber	80 (176)	Same as above.	Flammable
TPO/TPR	Thermoplastic Olefine/Thermoplastic Rubber	80 (176)	Same as above.	Flammable
PP	Polypropylene	90 (194)	Same as above.	Flammable, avoid battery acid.
UP	Polyester thermoset	90 (194)	Same as above.	Flammable
PS	Polystyrene	80 (176)	Avoid solvents.	Flammable
ABS	Acrylonitrile Butadiene Styrene resin	80 (176)	Avoid gasoline and solvents.	
AES	Acrylonitrile Ethylene Styrene	80 (176)	Same as above.	
PMMA	Polymethyl Methacrylate	85 (185)	Same as above.	
AAS	Acrylonitrile Acrylic Styrene	85 (185)	Same as above.	
AS	Acrylonitrile Styrene	85 (185)	Same as above.	
EVA	Polyvinyl Ethyl Acetate	90 (194)	Same as above.	
ASA	Acrylonitrile Styrene Acrylate	100 (222)	Same as above.	Flammable
PPO/PPE	Polyphenylene Oxide/ Polyphenylene Ether	110 (230)	Same as above.	
PC	Polycarbonate	120 (248)	Same as above.	
PAR	Polyacrylate	180 (356)	Same as above.	
L-LDPE	Linear Low Density PE	45 (100)	Gasoline and most solvents are harmless.	Flammable
PUR	Polyurethane	90 (194)	Same as above.	
TPU	Thermoplastic Urethane	110 (230)	Same as above.	
PPC	Polypropylene Composite	115 (239)	Same as above.	Flammable
POM	Polyacetal	120 (248)	Same as above.	Avoid battery acid.
PBT+PC	Polybutylene Terephthalate+Polycarbonate	120 (248)	Same as above.	Flammable
PA	Polyamide (Nylon)	140 (284)	Same as above.	Avoid immersing in water.
PBT	Polybutylene Terephthalate	140 (284)	Same as above.	
FRP	Fiber Reinforced Plastics	170 (338)	Same as above.	Avoid battery acid.
PET	Polyethylene Terephthalate	180 (356)	Same as above.	
PEI	Polyetherimide	200 (392)	Same as above.	


1. When repairing and painting a portion of the body adjacent to plastic parts, consider their characteristics (influence of heat and solvent) and remove them if necessary or take suitable measures to protect them.
2. Plastic parts should be repaired and painted using methods suiting the materials' characteristics.

# BODY REPAIR

## LOCATION OF PLASTIC PARTS

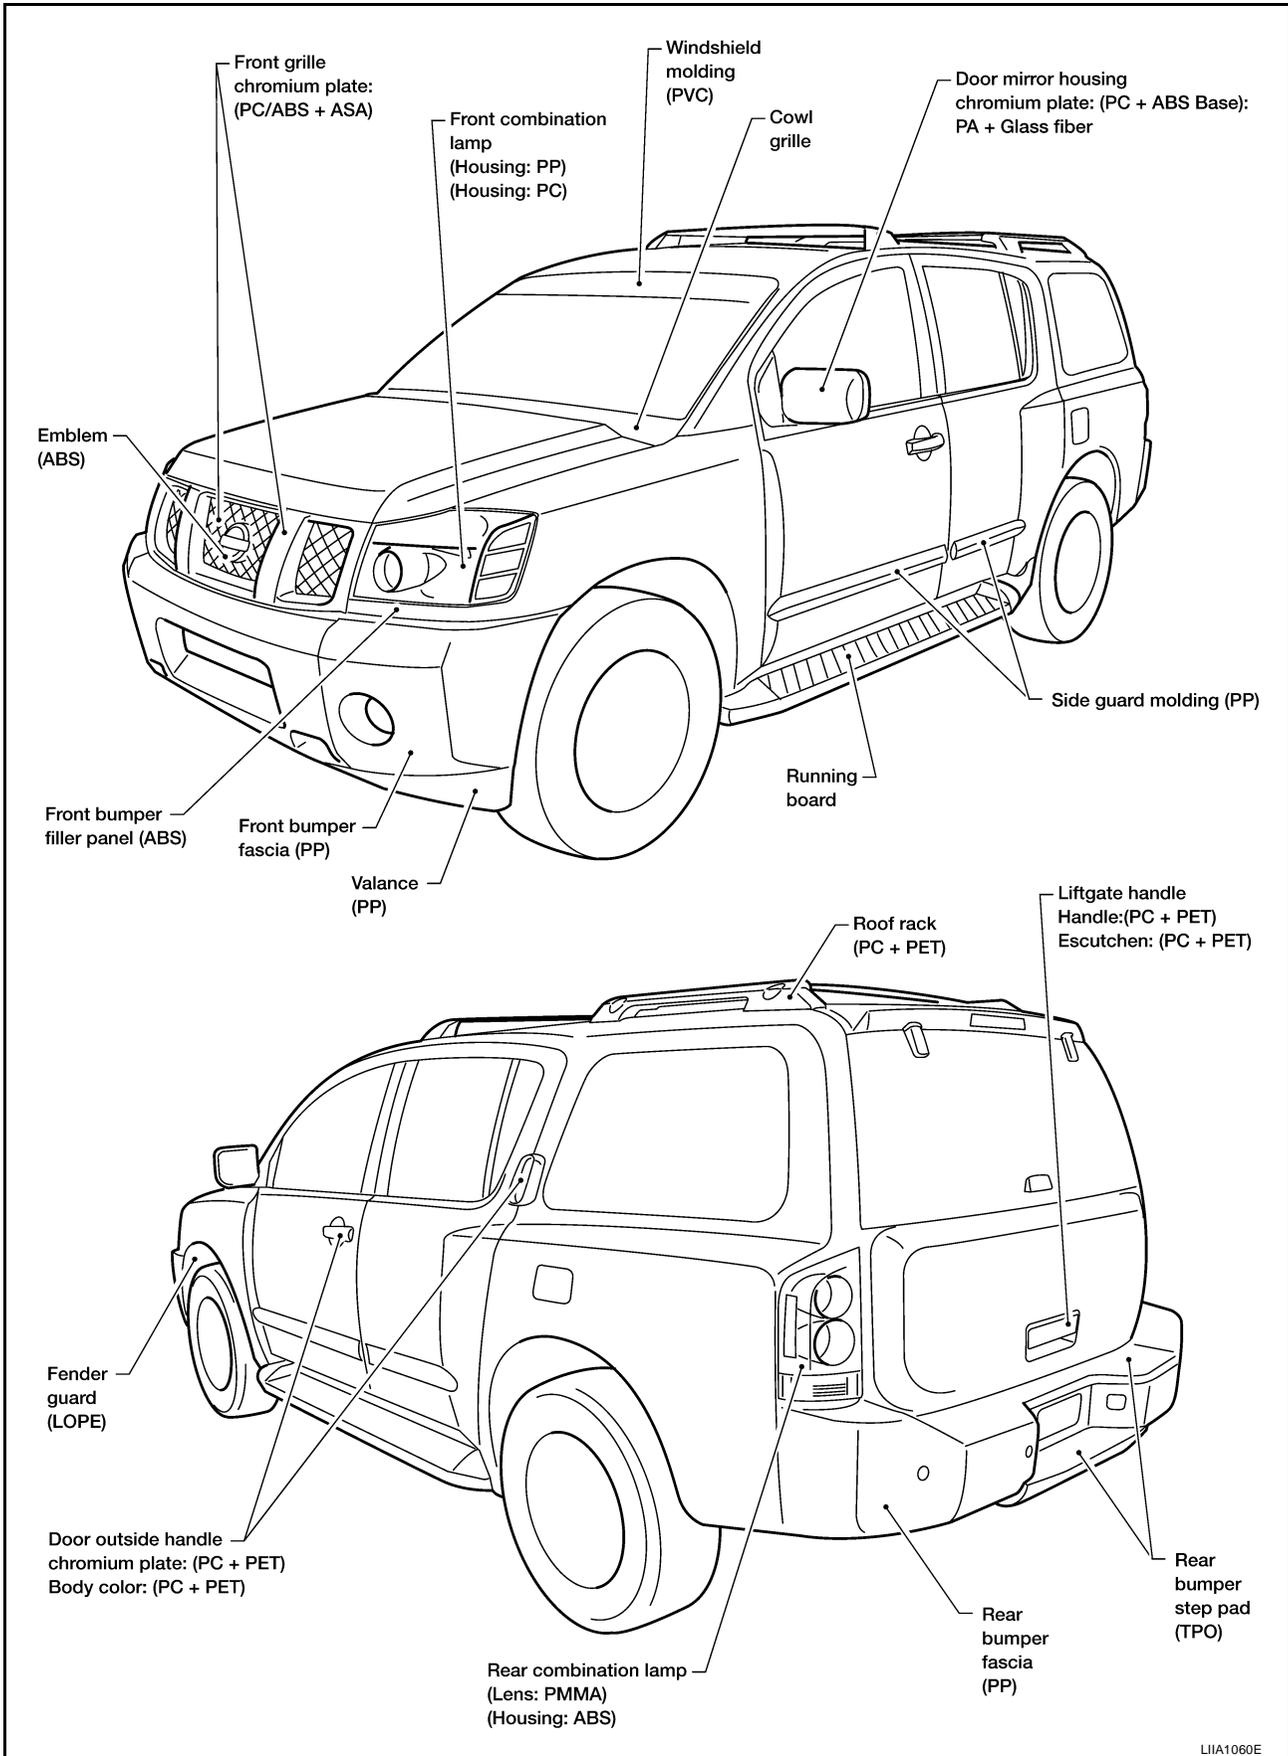

# BODY REPAIR

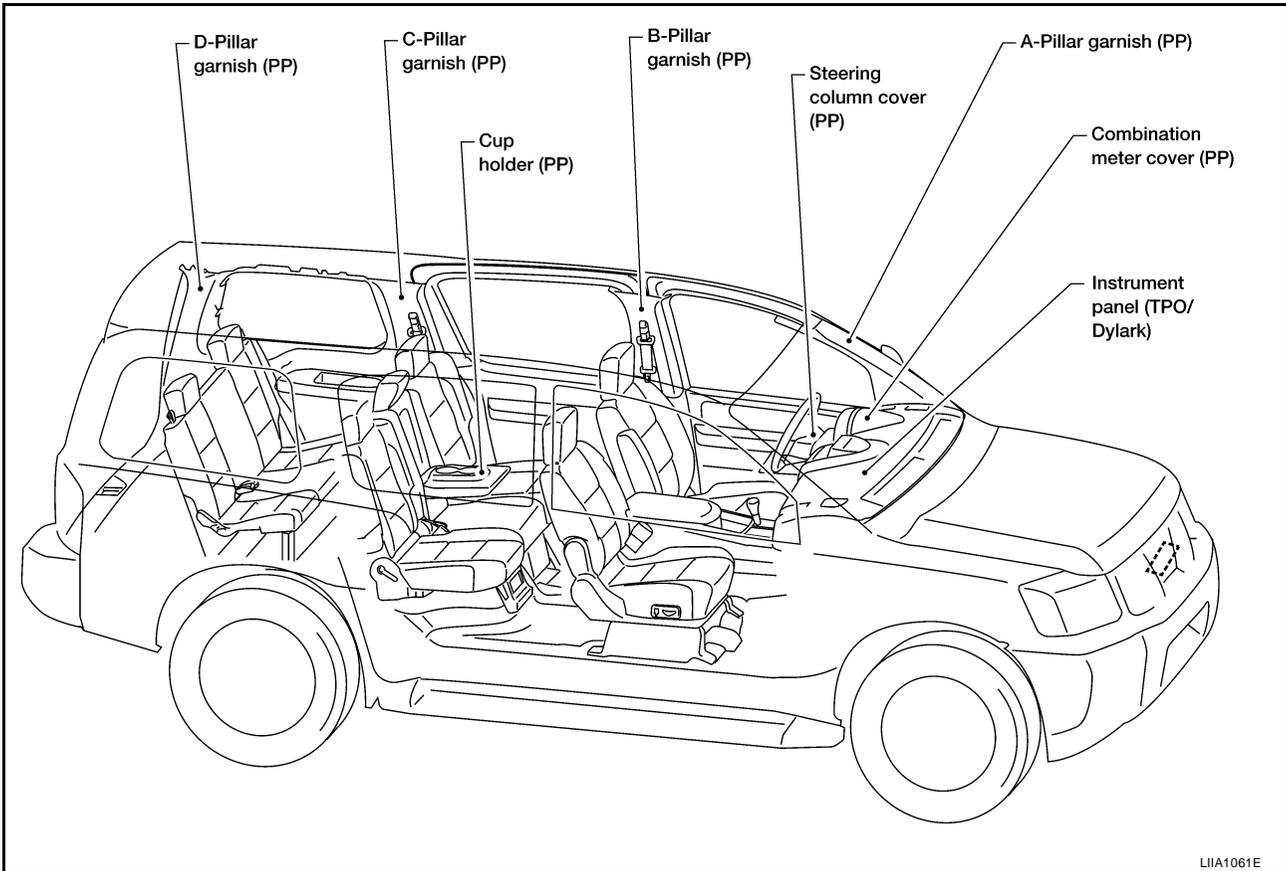

A

B

C

D

E

F

G

H

**BL**

J

K

L

M

# BODY REPAIR

EIS004KF

## Precautions in Repairing High Strength Steel

High strength steel is used for body panels in order to reduce vehicle weight. Accordingly, precautions in repairing automotive bodies made of high strength steel are described below:

### HIGH STRENGTH STEEL (HSS) USED IN NISSAN VEHICLES

Tensile strength	Nissan/Infiniti designation	Major applicable parts
373 N/mm <sup>2</sup> (38kg/mm <sup>2</sup> ,54klb/sq in)	SP130	<ul style="list-style-type: none"> <li>● Front inner pillar upper</li> <li>● Front pillar hinge brace</li> <li>● Outer front pillar reinforcement</li> <li>● Other reinforcements</li> </ul>
785-981 N/mm <sup>2</sup> (80-100kg/mm <sup>2</sup> 114-142klb/sq in)	SP150	<ul style="list-style-type: none"> <li>● Outer sill reinforcement</li> <li>● Main back pillar</li> </ul>


SP130 is the most commonly used HSS.

SP150 HSS is used only on parts that require much more strength.


Read the following precautions when repairing HSS:

#### 1. Additional points to consider


- The repair of reinforcements (such as side members) by heating is not recommended since it may weaken the component. When heating is unavoidable, do not heat HSS parts above 550°C (1,022°F). Verify heating temperature with a thermometer. (Crayon-type and other similar type thermometer are appropriate.)

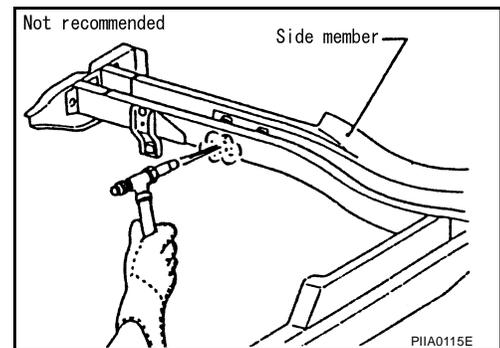

- When straightening body panels, use caution in pulling any HSS panel. Because HSS is very strong, pulling may cause deformation in adjacent portions of the body. In this case, increase the number of measuring points, and carefully pull the HSS panel.

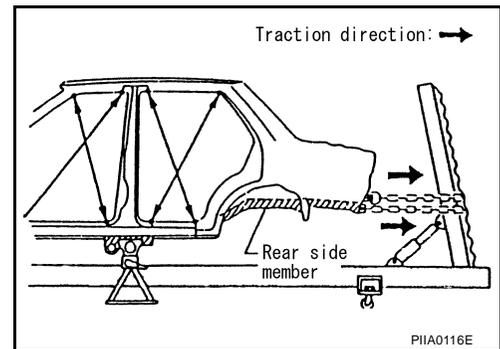


- When cutting HSS panels, avoid gas (torch) cutting if possible. Instead, use a saw to avoid weakening surrounding areas due to heat. If gas (torch) cutting is unavoidable, allow a minimum margin of 50 mm (1.97in).

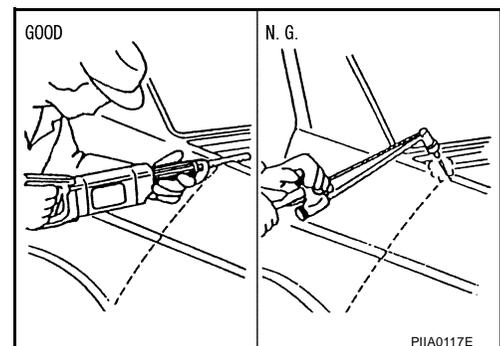


# BODY REPAIR

- When welding HSS panels, use spot welding whenever possible in order to minimize weakening surrounding areas due to heat. If spot welding is impossible, use M.I.G. welding. Do not use gas (torch) welding because it is inferior in welding strength.

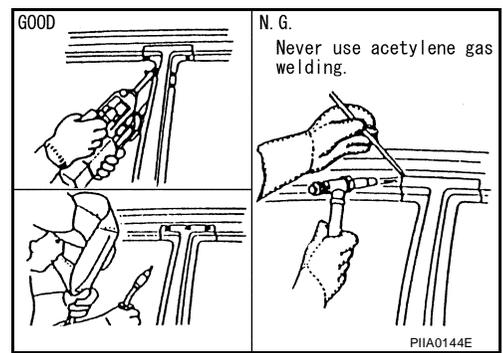


- The spot weld on HSS panels is harder than that of an ordinary steel panel. Therefore, when cutting spot welds on a HSS panel, use a low speed high torque drill (1,000 to 1,200 rpm) to increase drill bit durability and facilitate the operation.
- SP150 HSS panels with a tensile strength of 785 to 981 N/mm<sup>2</sup> (80 to 100 kg/mm<sup>2</sup>, 114 to 142 klb/sq in), used as reinforcement in the door guard beams, is too strong to repair. When these HSS parts are damaged, the outer panels also sustain substantial damage; therefore, the assembly parts must be replaced.

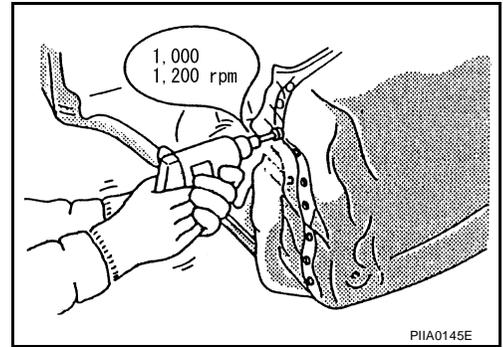


## 2. Precautions in spot welding HSS

This work should be performed under standard working conditions. Always note the following when spot welding HSS:

- The electrode tip diameter must be sized properly according to the metal thickness.

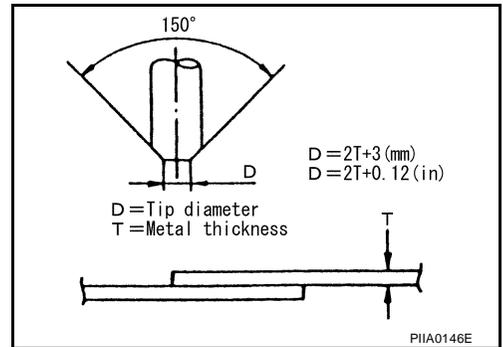

- The panel surfaces must fit flush to each other, leaving no gaps.

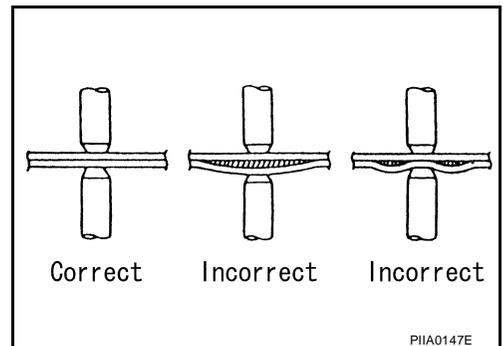


# BODY REPAIR

- Follow the specifications for the proper welding pitch.

Thickness (t)	Minimum pitch (ℓ)
0.6 (0.024)	10 (0.39) or over
0.8 (0.031)	12 (0.47) or over
1.0 (0.039)	18 (0.71) or over
1.2 (0.047)	20 (0.79) or over
1.6 (0.063)	27 (1.06) or over
1.8 (0.071)	31 (1.22) or over

Unit:mm

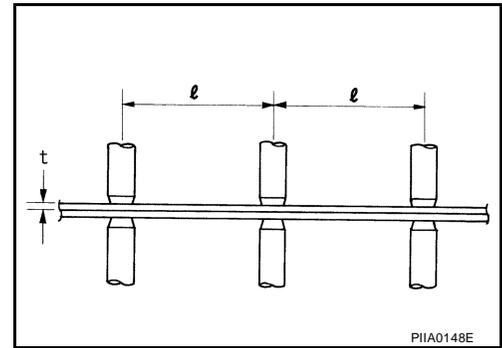

EIS004KG

## Foam Repair


During factory body assembly, foam insulators are installed in certain body panels and locations around the vehicle. Use the following procedure(s) to replace any factory-installed foam insulators.

### URETHANE FOAM APPLICATIONS

Use commercially available spray foam for sealant (foam material) repair of material used on vehicle. Read instructions on product for fill procedures.

### FILL PROCEDURES

1. Fill procedures after installation of service part.
  - Remove foam material remaining on vehicle side.
  - Clean area in which foam was removed.
  - Install service part.
  - Insert nozzle into hole near fill area and fill foam material or fill in enough to close gap with the service part.

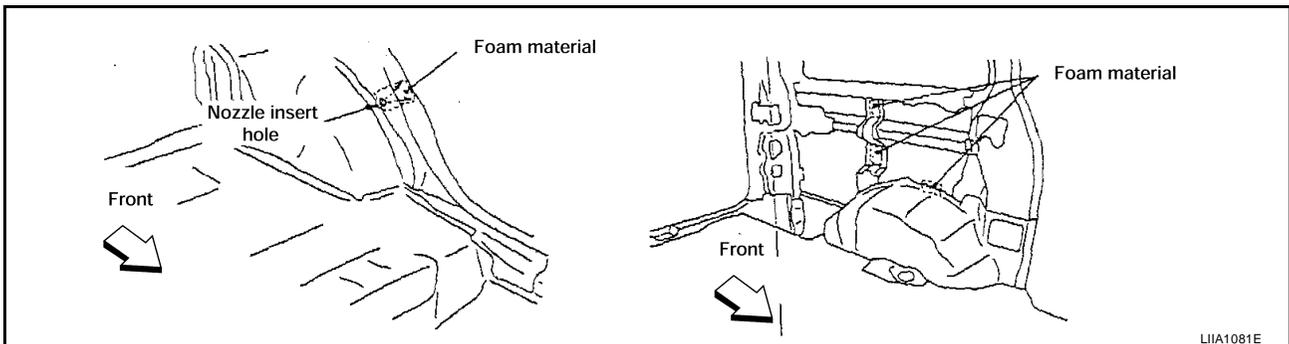

2. Fill procedures before installation of service part.
  - Remove foam material remaining on vehicle side.
  - Clean area in which foam was removed.
  - Fill foam material on wheelhouse outer side.


**NOTE:**

Fill in enough to close gap with service part while avoiding flange area.

- Install service part.

**NOTE:**

Refer to label for information on working times.

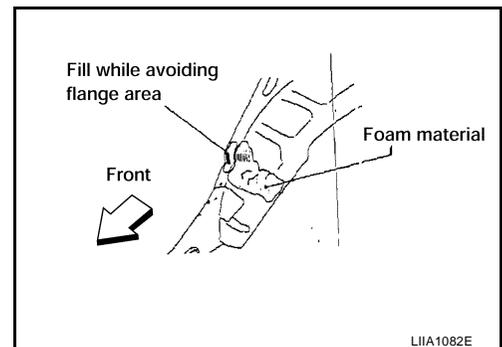

# BODY REPAIR

## Replacement Operations

EIS004KH

### DESCRIPTION

This section is prepared for technicians who have attained a high level of skill and experience in repairing collision-damaged vehicles and also use modern service tools and equipment. Persons unfamiliar with body repair techniques should not attempt to repair collision-damaged vehicles by using this section.

Technicians are also encouraged to read Body Repair Manual (Fundamentals) in order to ensure that the original functions and quality of the vehicle can be maintained. The Body Repair Manual (Fundamentals) contains additional information, including cautions and warnings, that are not including in this manual. Technicians should refer to both manuals to ensure proper repairs.












Please note that this information is prepared for worldwide usage, and as such, certain procedures may not apply in some regions or countries.

A  
B  
C  
D  
E  
F  
G  
H  
J  
K  
L  
M

**BL**


# BODY REPAIR

The symbols used in this section for cutting and welding / brazing operations are shown below.

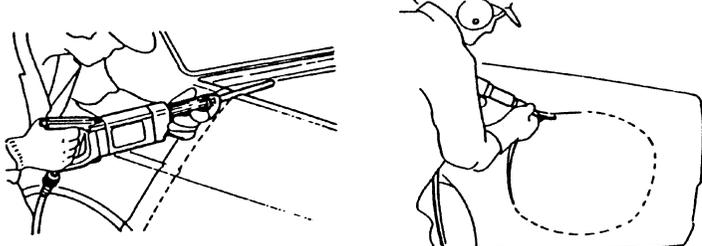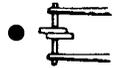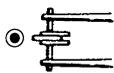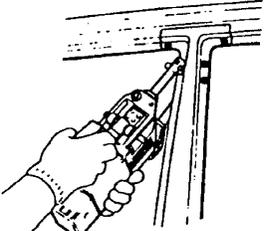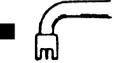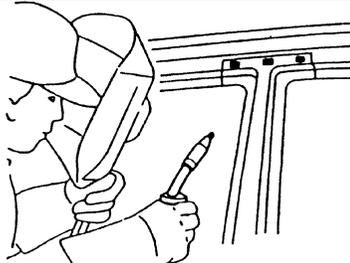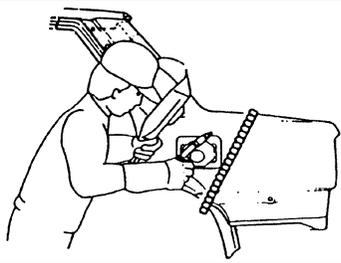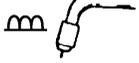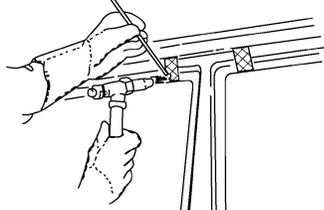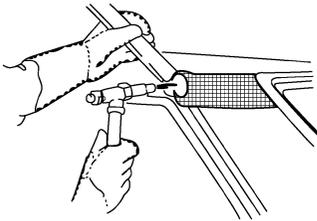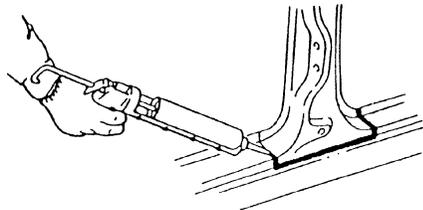
 <p>Saw cut or air chisel cut</p>		
<p>Spot weld</p> <p>● ● ● ● 2-spot welds</p>  <p>● ● ● ● 3-spot welds</p> 	<p>2-spot welds (2-panel overlapping portions)</p>  <p>3-spot welds (3-panel overlapping portions)</p>	
<p>■ ■ ■ ■ MIG plug weld</p> 		
<p>~~~~~ MIG seam weld/ Point weld</p> 		
<p>▨ ▨ ▨ ▨ Brazing</p> 		
<p>▨ ▨ ▨ ▨ Soldering</p> 		
<p>————— Sealing</p>		

# BODY REPAIR


- Front pillar butt joint can be determined anywhere within shaded area as shown in the figure. The best location for the butt joint is at position A due to the construction of the vehicle. Refer to the front pillar section.

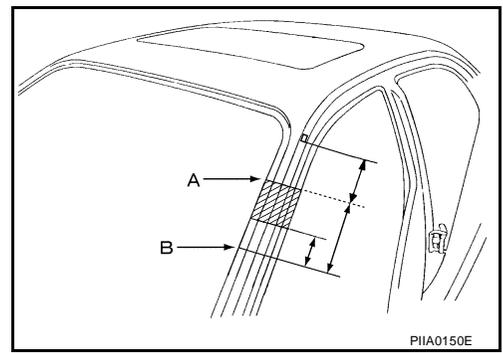

- Determine cutting position and record distance from the locating indent. Use this distance when cutting the service part. Cut outer front pillar over 60 mm above inner front pillar cut position.

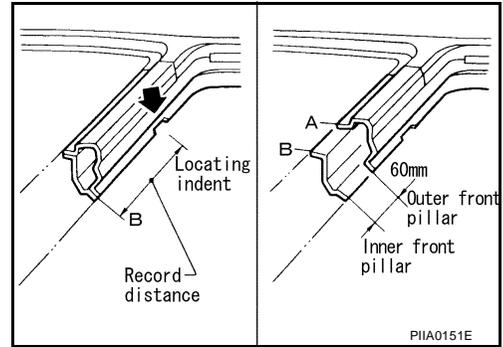


- Prepare a cutting jig to make outer pillar easier to cut. Also, this will permit service part to be accurately cut at joint position.

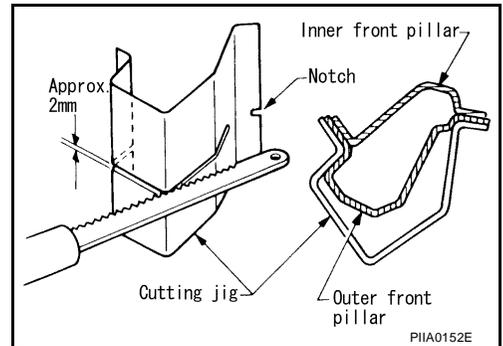

- An example of cutting operation using a cutting jig is as follows.

1. Mark cutting lines.  
A: Cut position of outer pillar  
B: Cut position of inner pillar
2. Align cutting line with notch on jig. Clamp jig to pillar.
3. Cut outer pillar along groove of jig. (At position A)
4. Remove jig and cut remaining portions.
5. Cut inner pillar at position B in same manner.

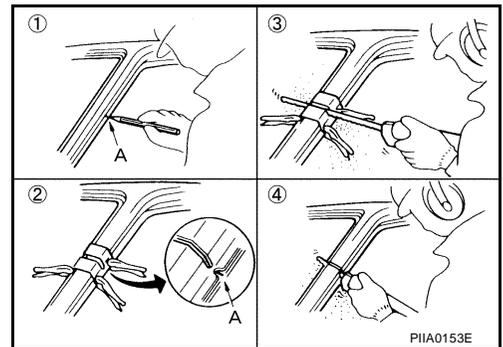


A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

# BODY REPAIR

## HOODLEDGE

- Work after radiator core support has been removed.

### Service Joint

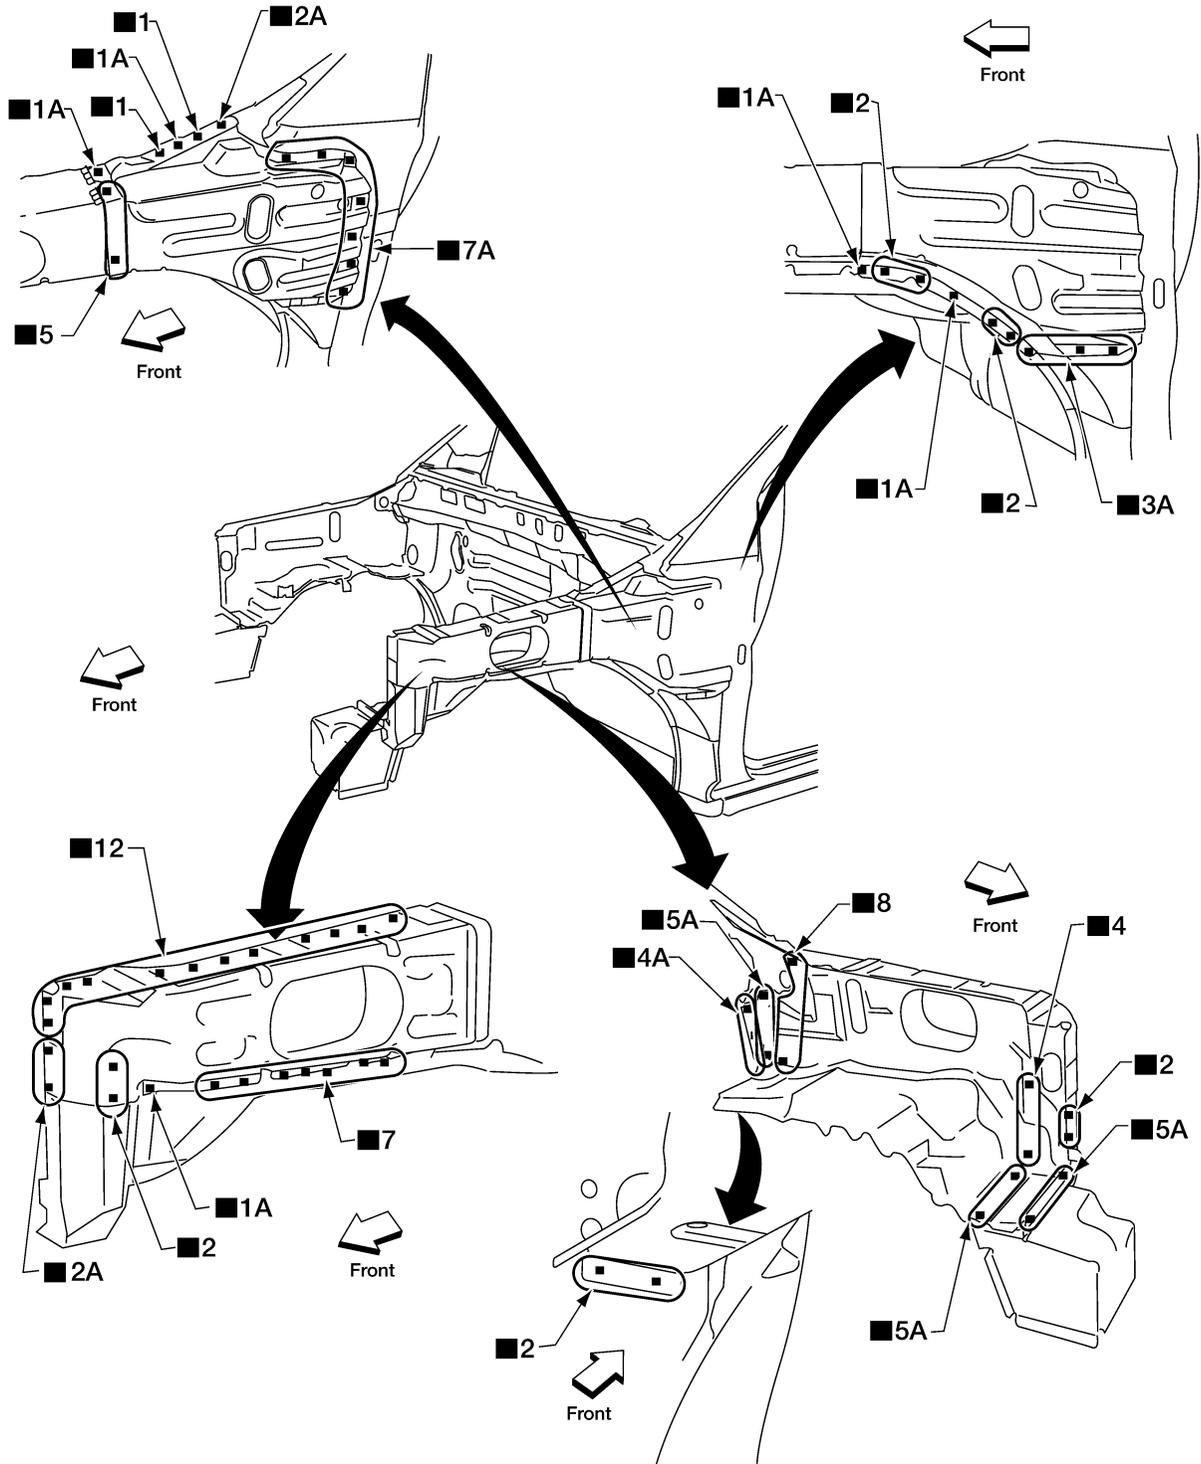



2-spot welds



3-spot welds



MIG Plug weld

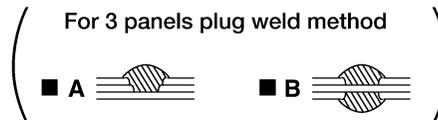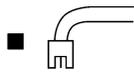

MIG seam weld/  
Point weld




LIA1154E

# BODY REPAIR

## FRONT PILLAR


- Work after rear hoodedge reinforcement has been removed.

### Service Joint

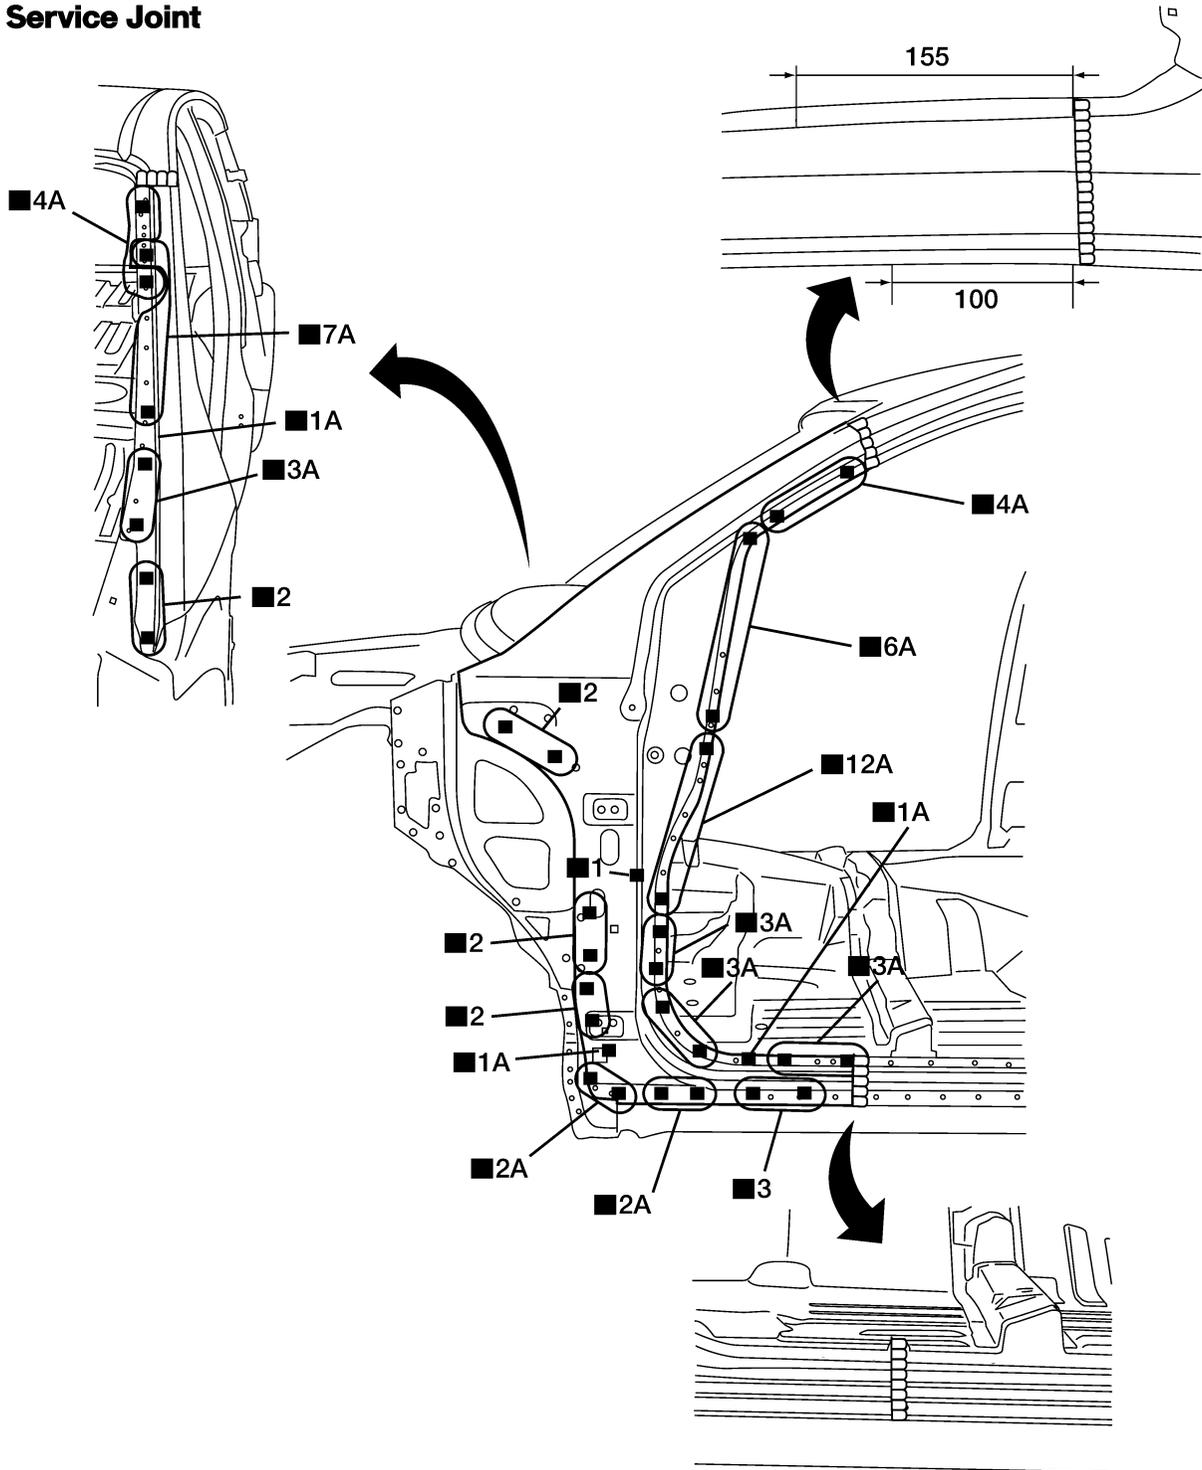


Unit : mm


2-spot welds

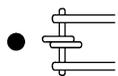

3-spot welds

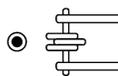

MIG Plug weld

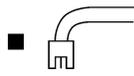

( For 3 panels plug weld method )




MIG seam weld/  
Point weld



LIA1108E


# BODY REPAIR

## Service Joint

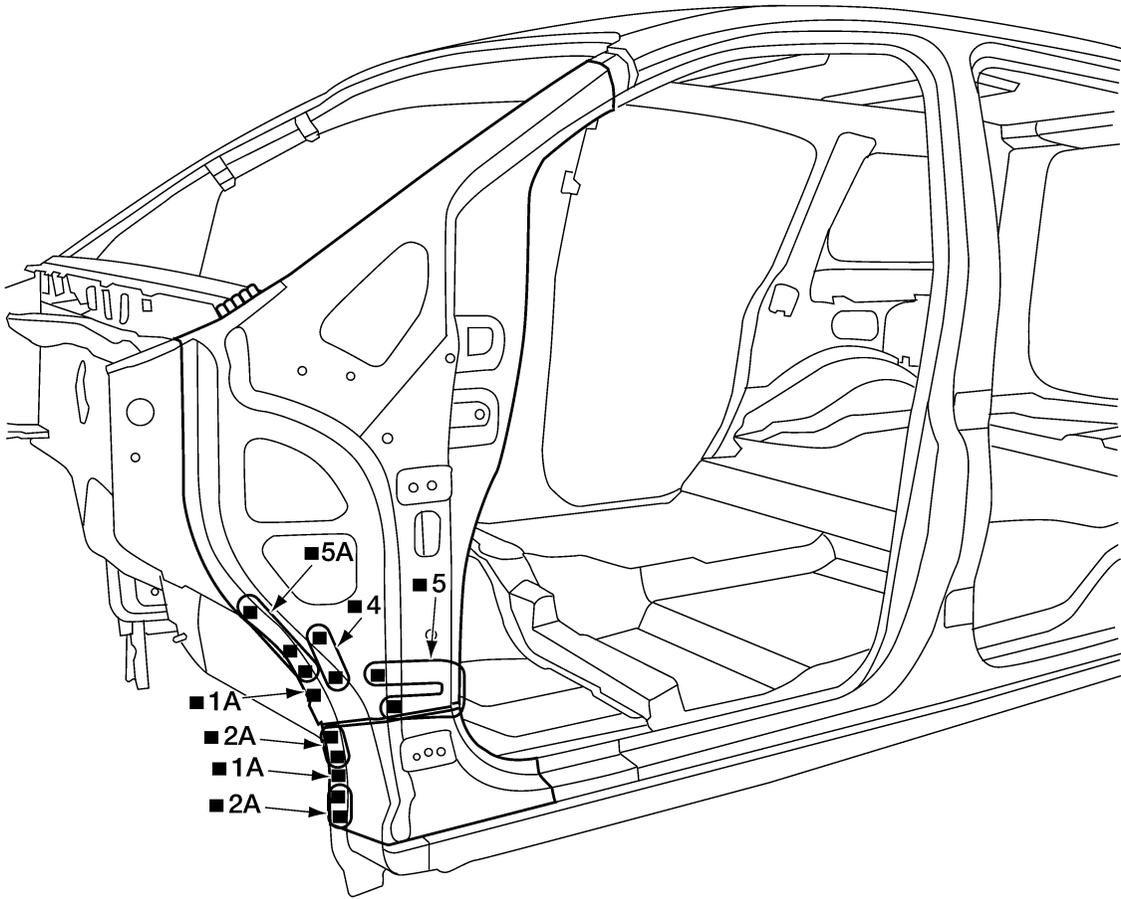


Unit : mm


2-spot welds

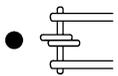


3-spot welds

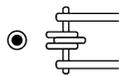

MIG Plug weld

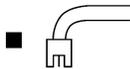

For 3 panels plug weld method

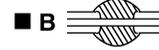


MIG seam weld/  
Point weld



LIA1109E

# BODY REPAIR


## Service Joint

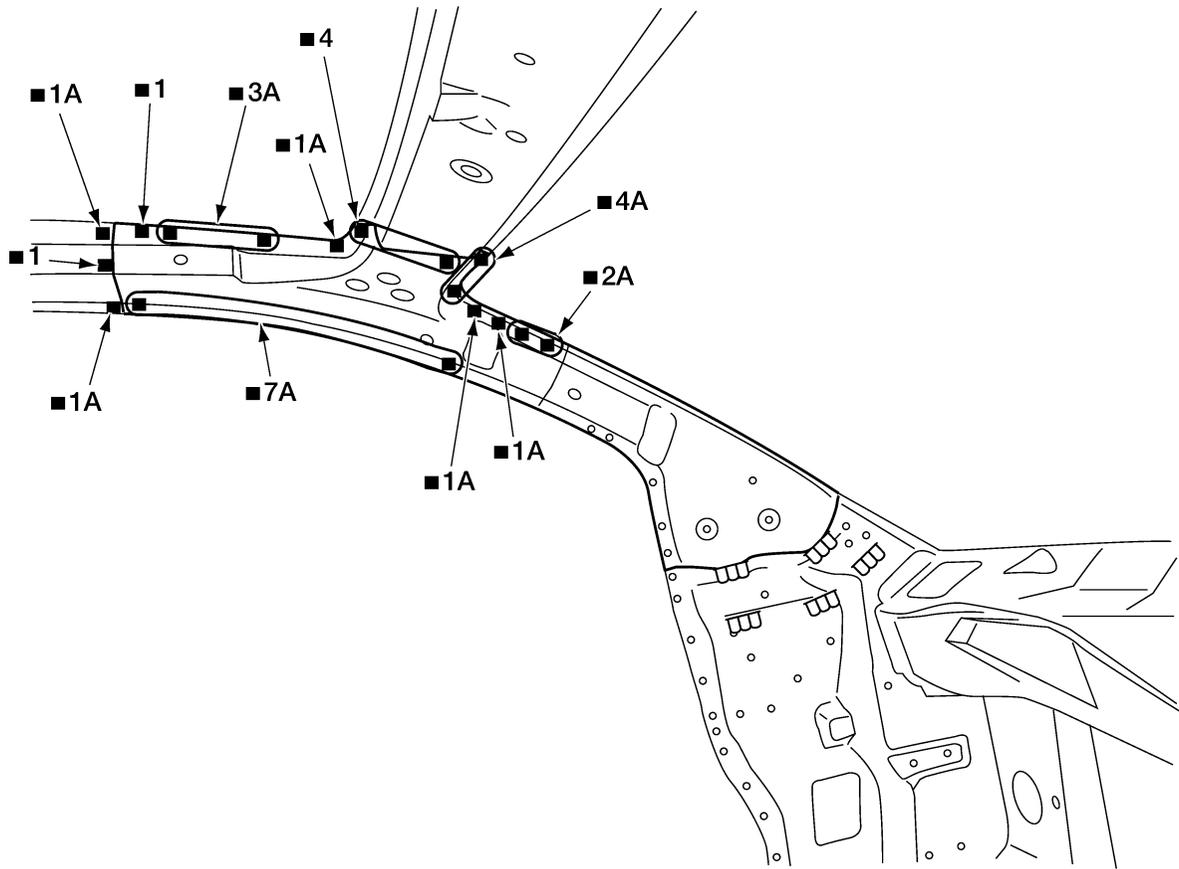


A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

Unit : mm


2-spot welds

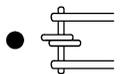

3-spot welds

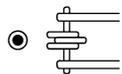

MIG Plug weld

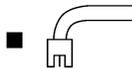

For 3 panels plug weld method



MIG seam weld/  
Point weld




LIA1110E

# BODY REPAIR

## CENTER PILLAR


### Service Joint

\* Reinforcement is retained with the same welds as the b-pillar outer sheet metal.

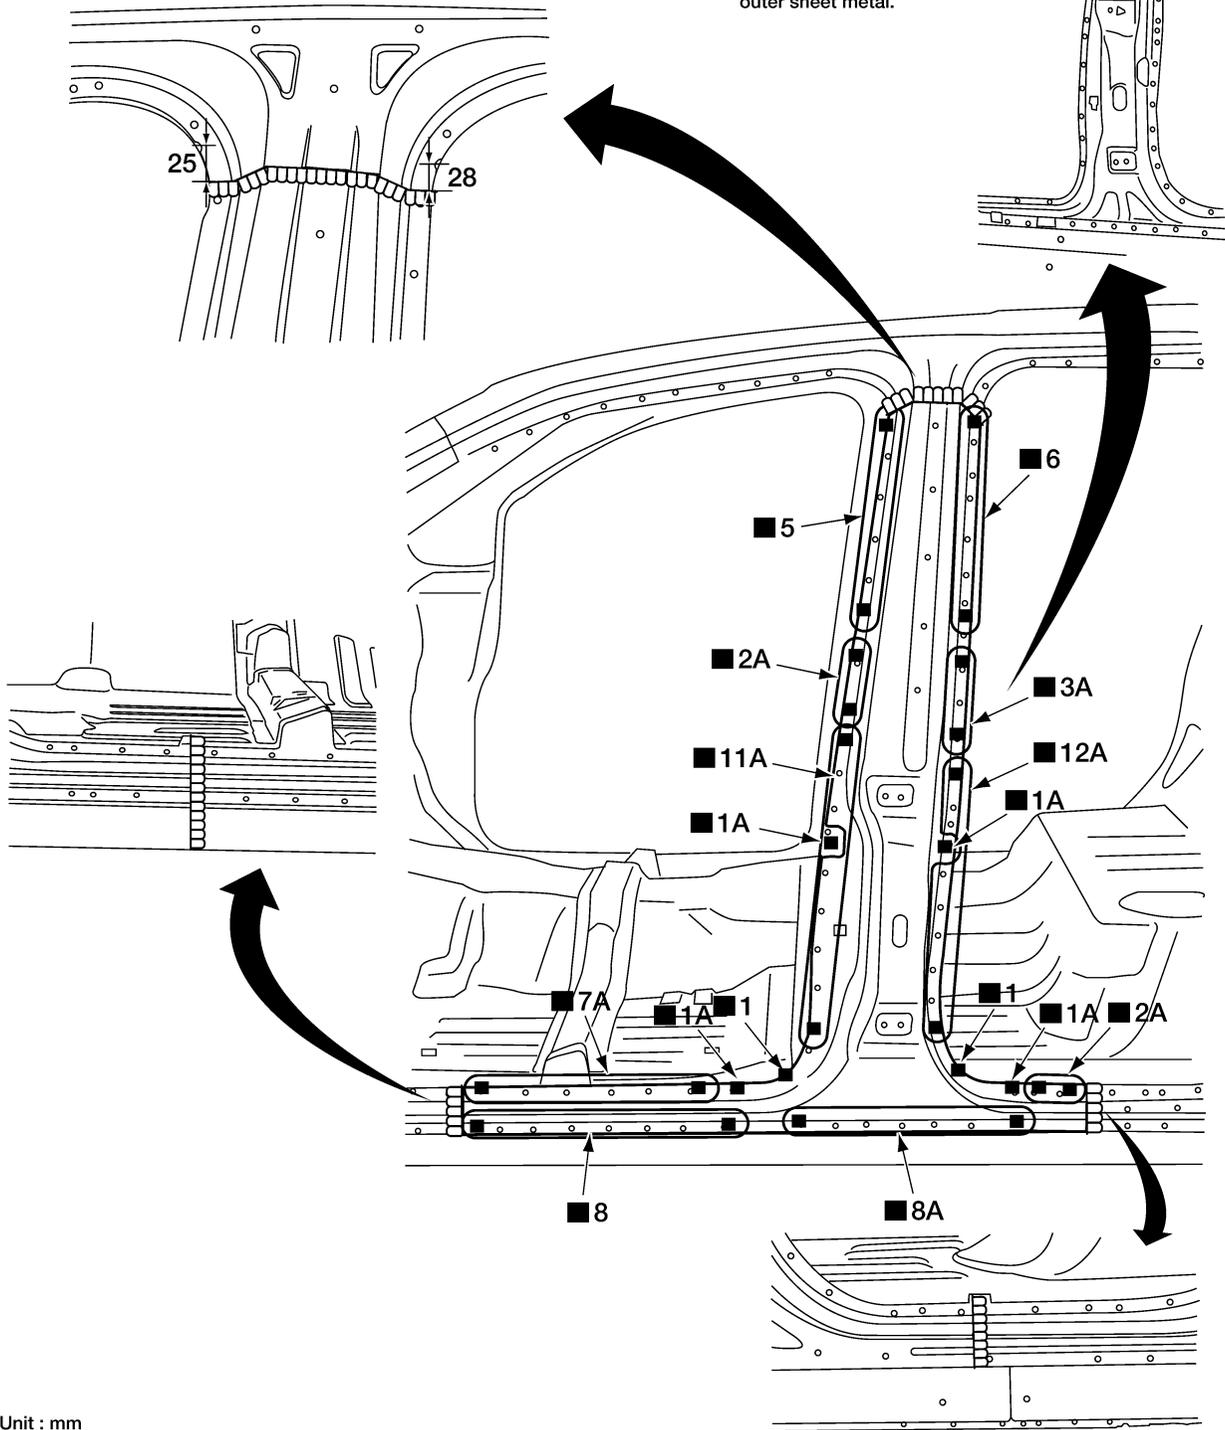


Unit : mm



2-spot welds

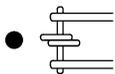

3-spot welds

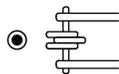

MIG Plug weld

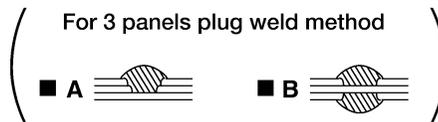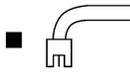


MIG seam weld/  
Point weld



LIA1111E

# BODY REPAIR


## Service Joint

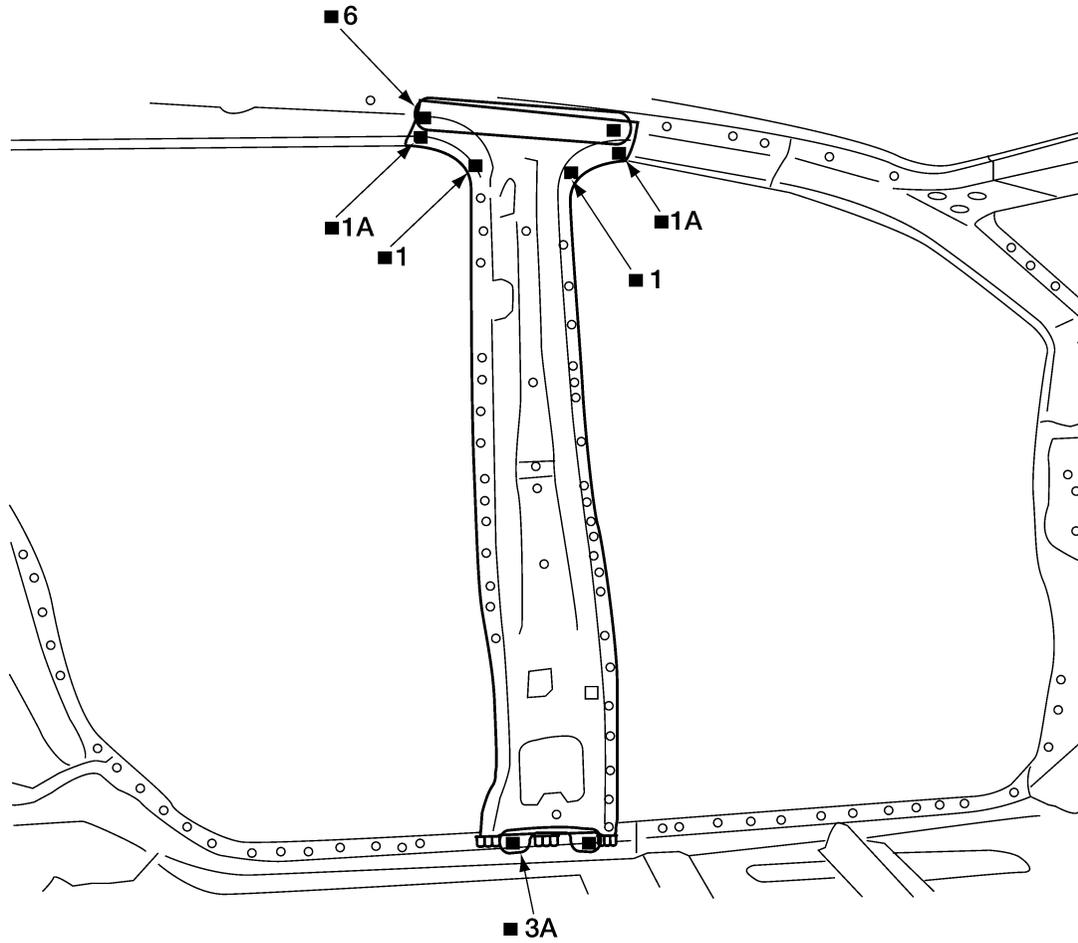


A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

Unit : mm

2-spot welds

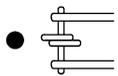


3-spot welds

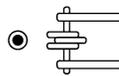

MIG Plug weld



For 3 panels plug weld method

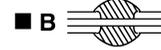

MIG seam weld/  
Point weld




LIIA1112E

# BODY REPAIR

## OUTER SILL


### Service Joint

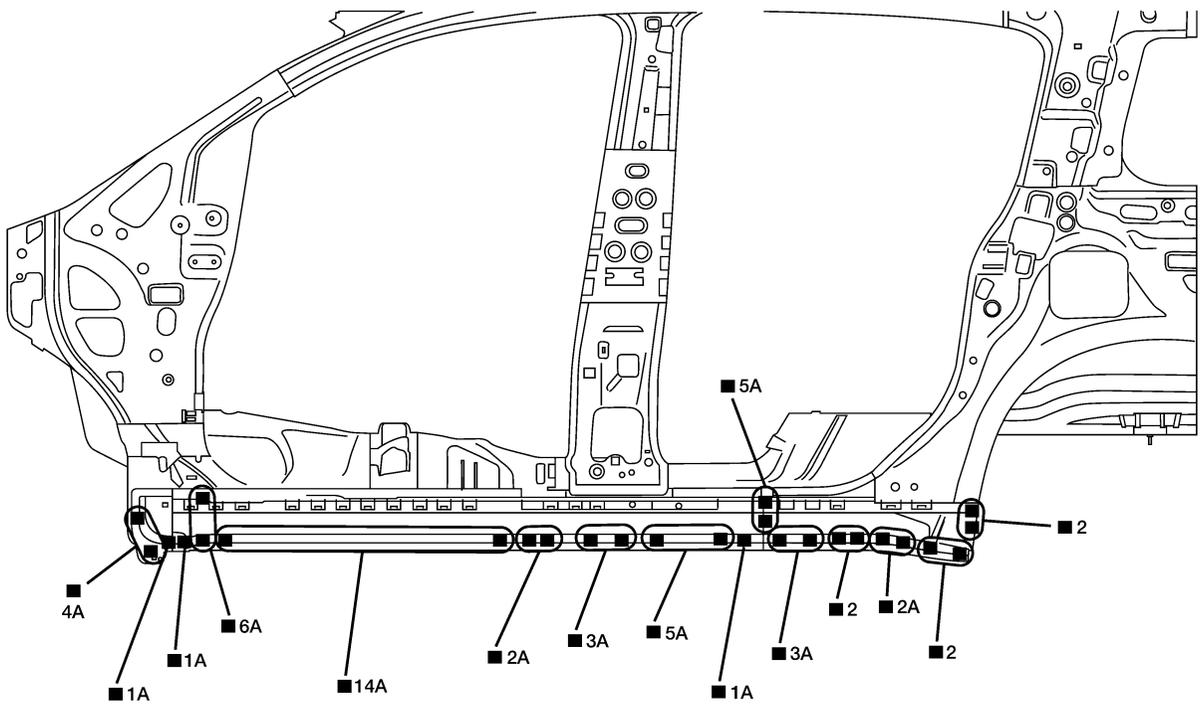



2-spot welds



3-spot welds

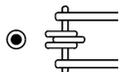

MIG Plug weld

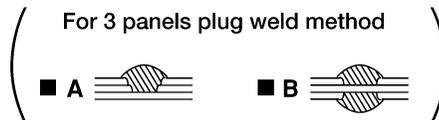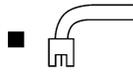

MIG seam weld/  
Point weld




LIA1118E

# BODY REPAIR


## REAR FENDER

### Service Joint

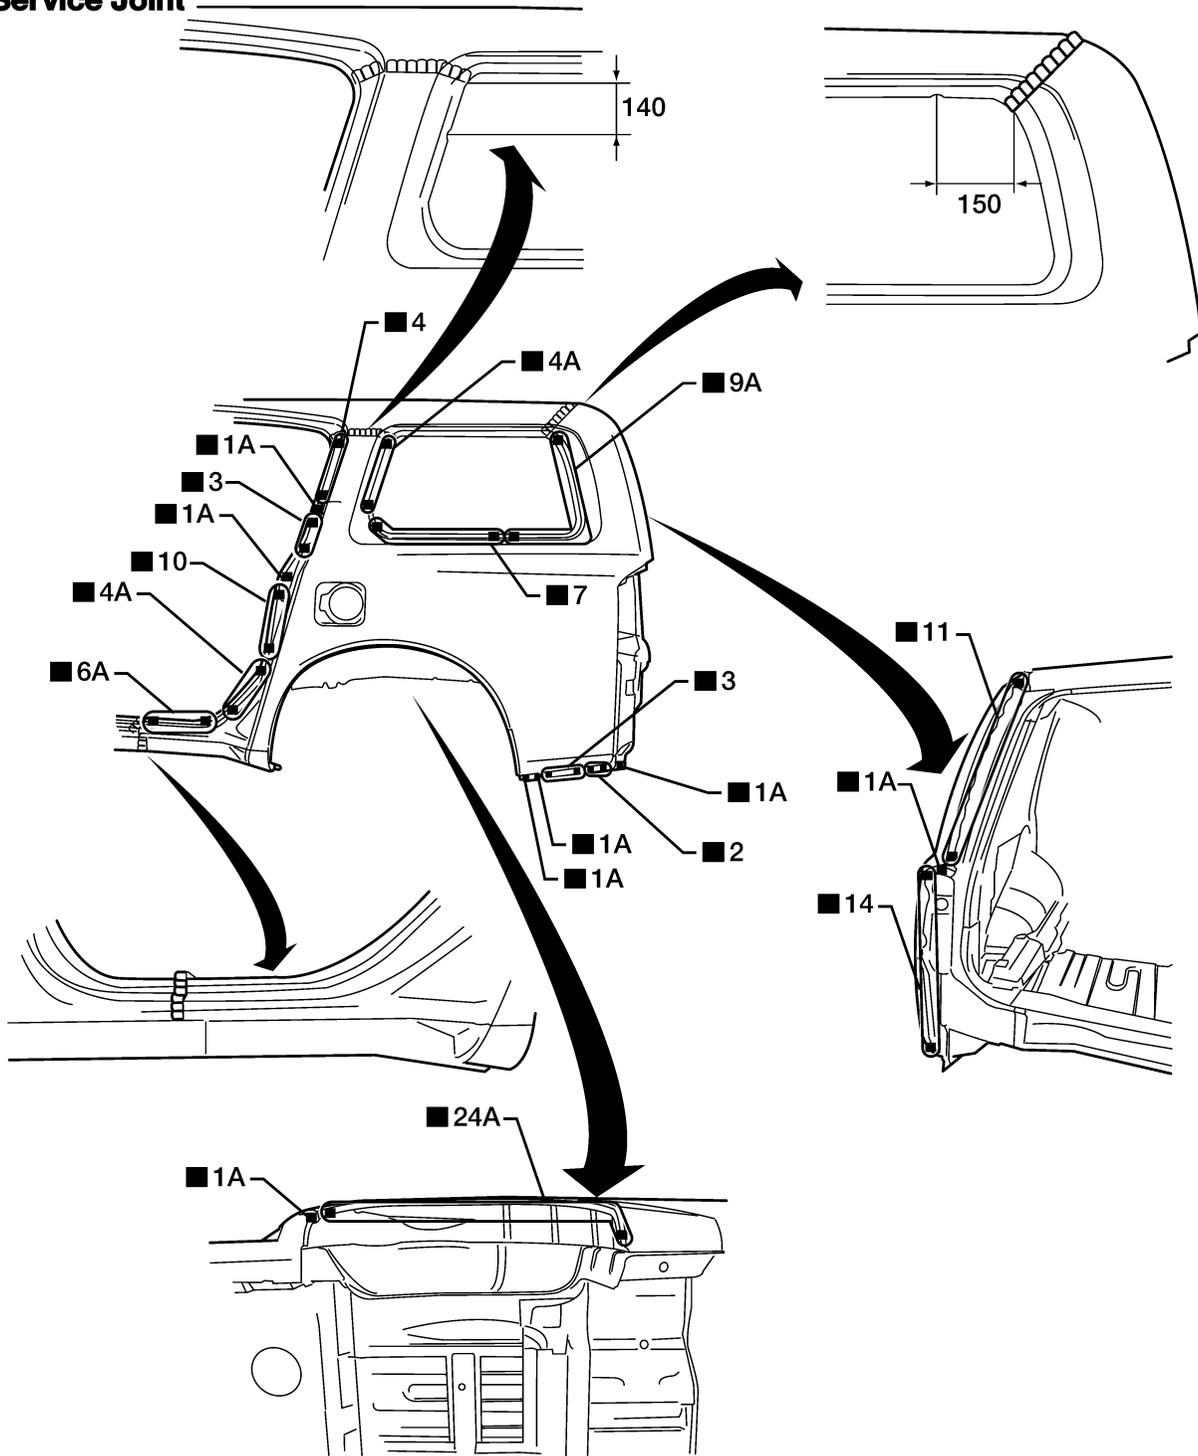


A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M


2-spot welds

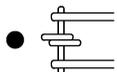


3-spot welds

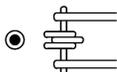

MIG Plug weld

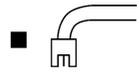

( For 3 panels plug weld method )

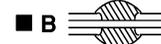


MIG seam weld/  
Point weld




WHIA0285E

# BODY REPAIR


## Service Joint

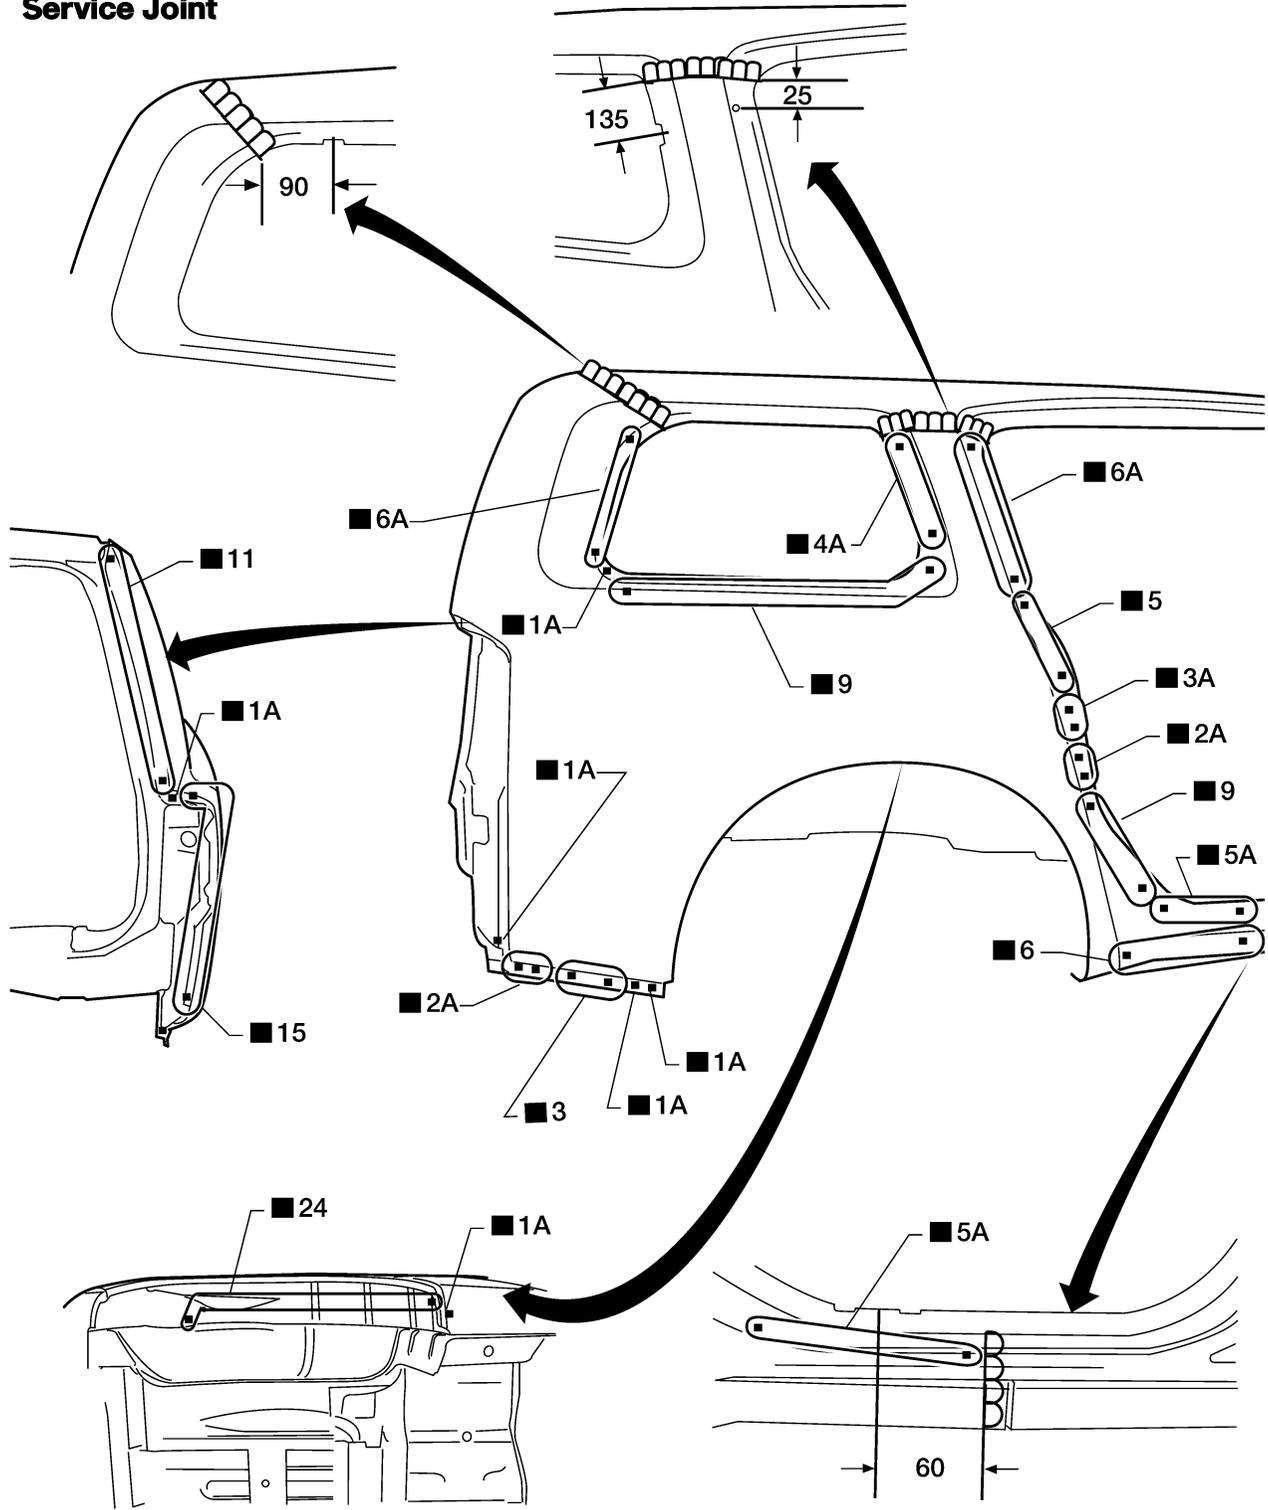



2-spot welds

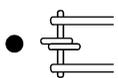

3-spot welds

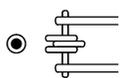

MIG Plug weld

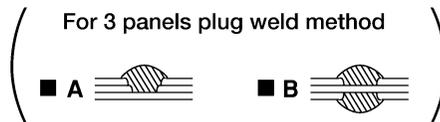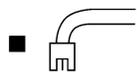

MIG seam weld/  
Point weld




WI1A0283E

# BODY REPAIR


## REAR SIDE MEMBER

### Service Joint

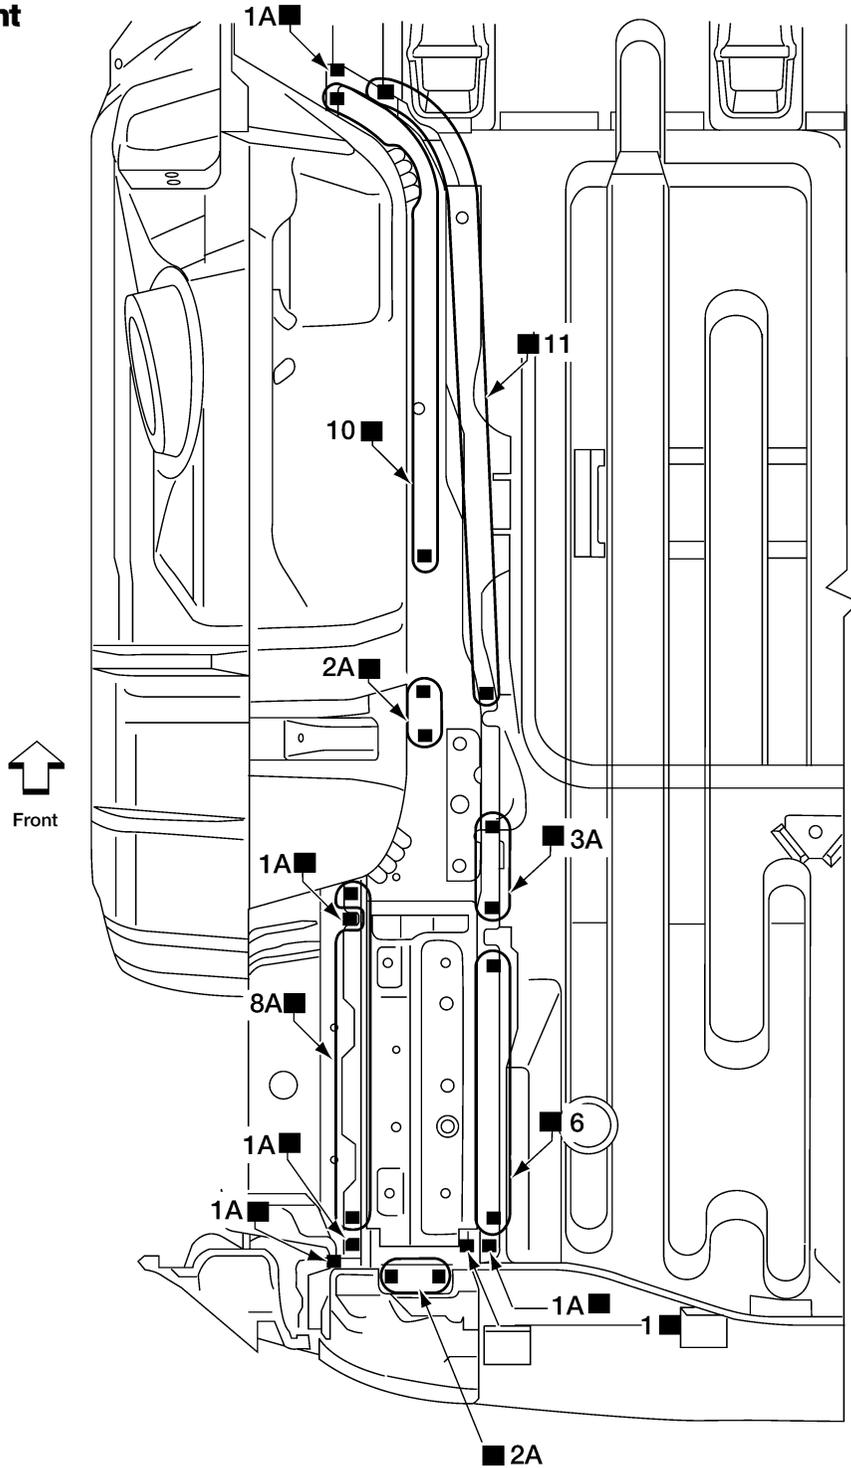


Unit : mm



2-spot welds

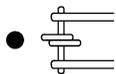

3-spot welds

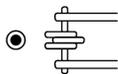

MIG Plug weld

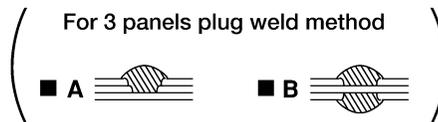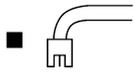

MIG seam weld/  
Point weld




WHIA0281E

# BODY REPAIR

## REAR FLOOR REAR

### Service Joint

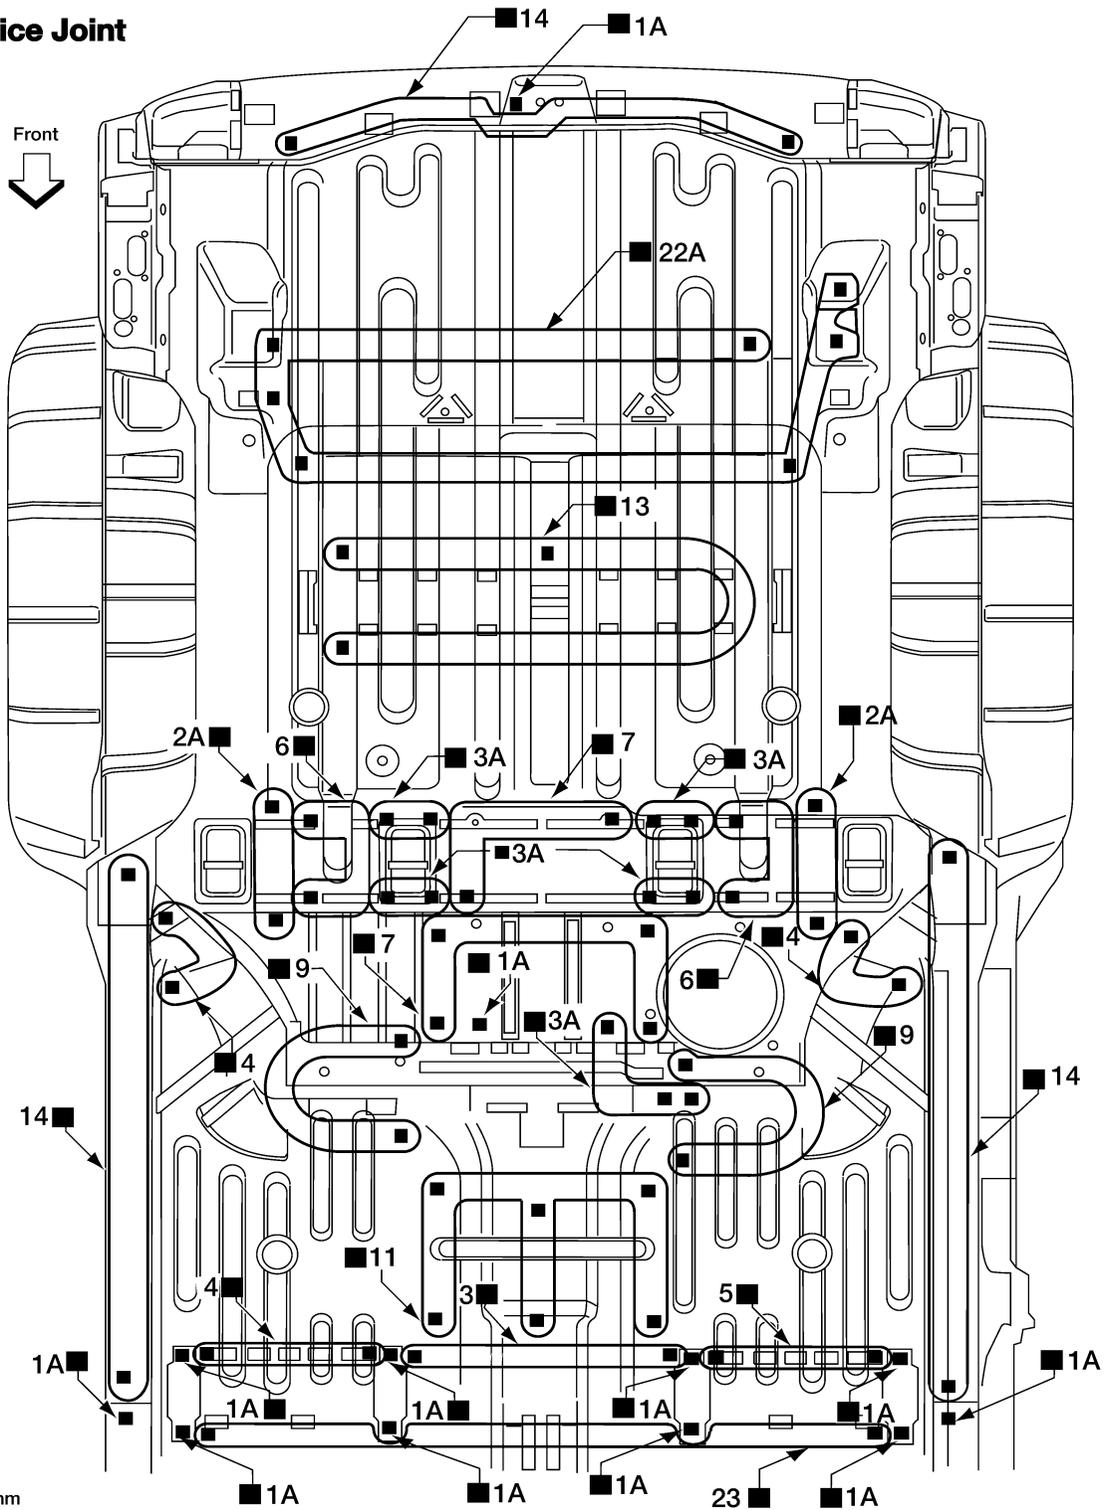

Unit : mm




2-spot welds

3-spot welds

MIG Plug weld

( For 3 panels plug weld method )

MIG seam weld/  
Point weld

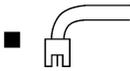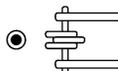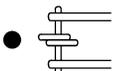


WIIA0282E

# BODY REPAIR

## CRUSH HORN

- Work after 1st crossmember has been removed.

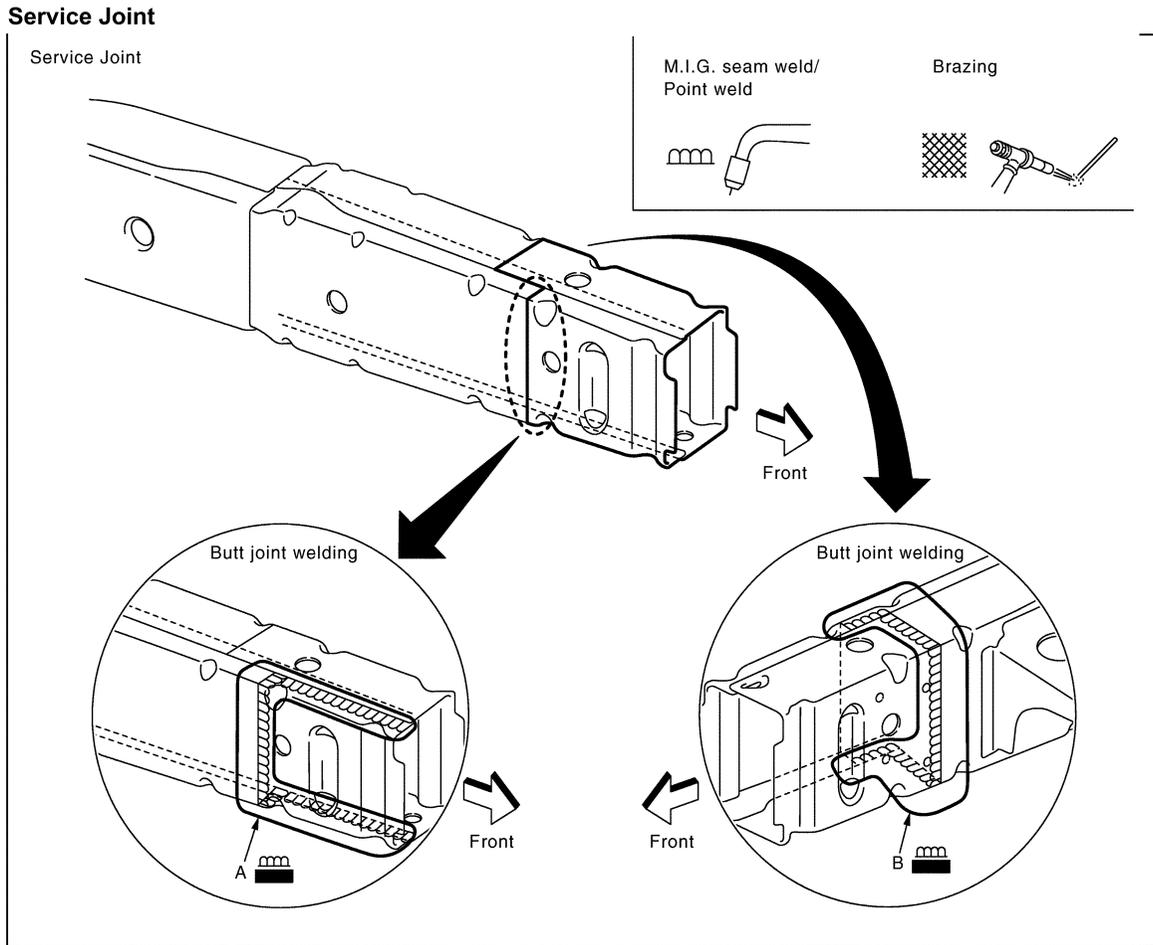

LIA1083E

### Portions to be welded:


- A. Inner side rail crush horn, inner side rail crush horn and outer side rail crush horn.  
B. Outer side rail crush horn, outer side rail crush horn and inner side rail crush horn.

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M


# BODY REPAIR

## Removal Notes

- Scribe a straight line on the outer side rail crush horn and inner side rail crush horn along the hole center as shown in the figure.

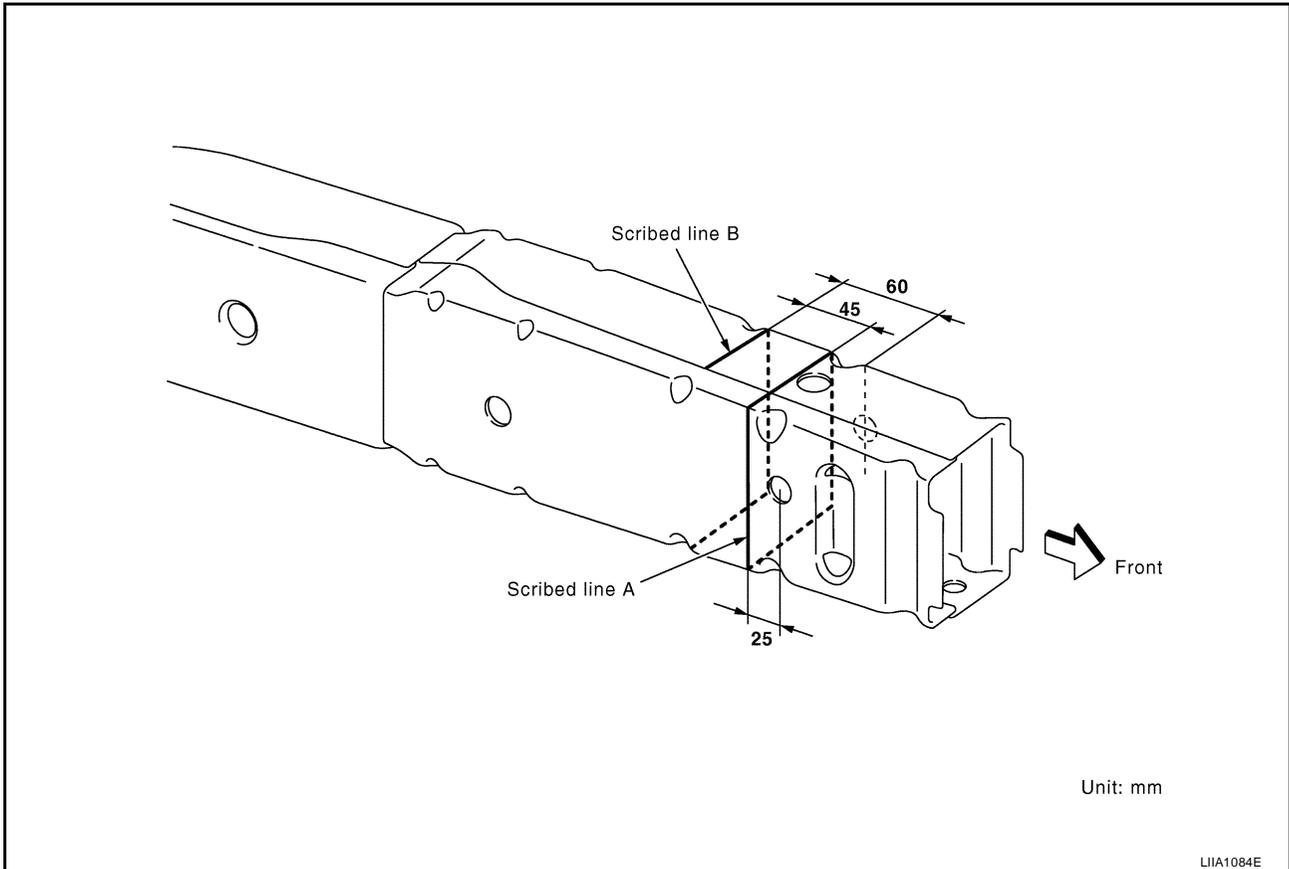


- Cut off outer side rail crush horn and inner side rail crush horn along scribed line A. Do not cut on the hole.

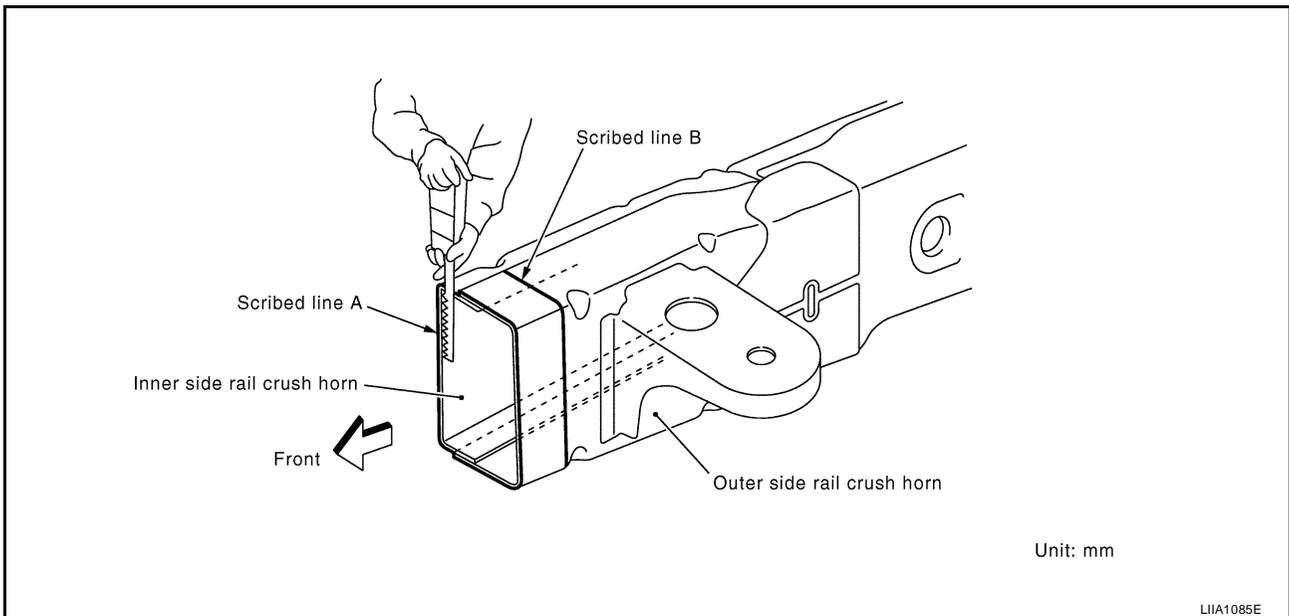

- Cut inner side rail crush horn at 45 mm backward cut position of cut line A. (along line B)

# BODY REPAIR

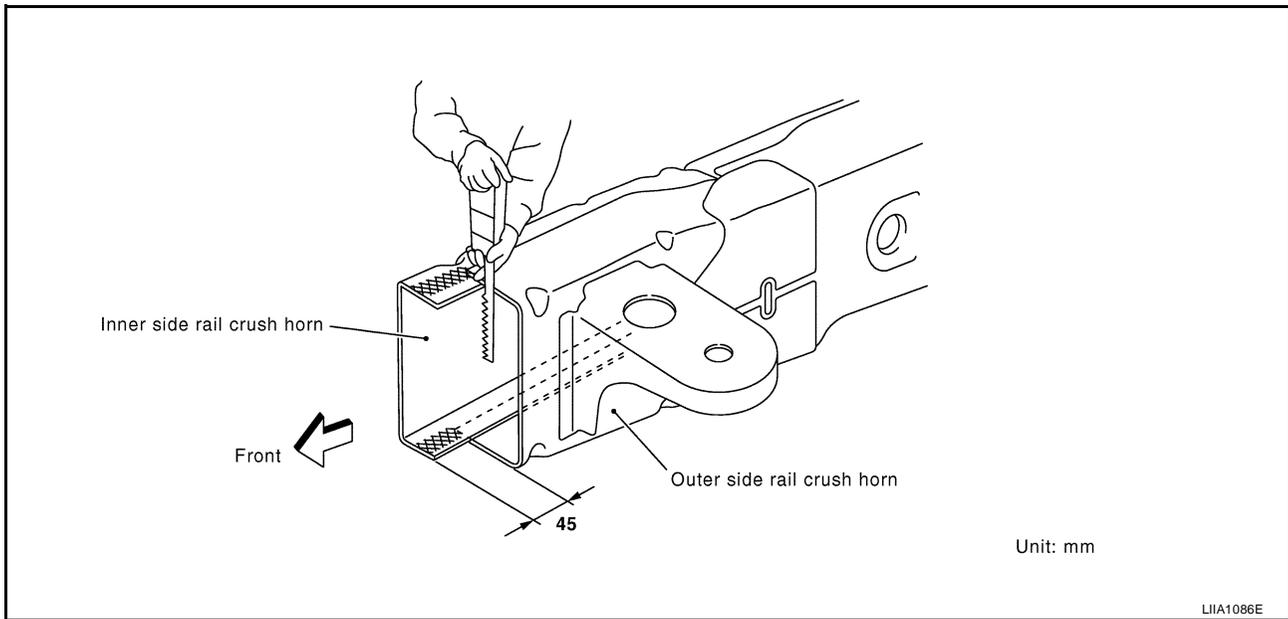


- After removing outer panel, dress area on the inner panel surface with a sander or equivalent.


A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

# BODY REPAIR

## Installation Notes

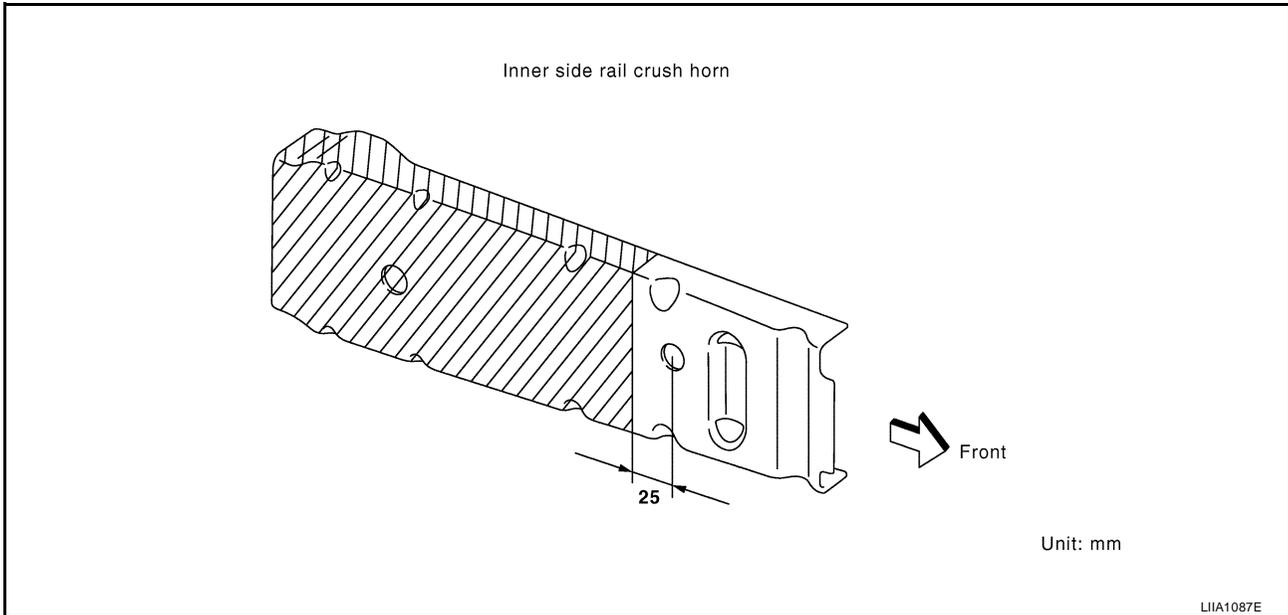


- Scribe a straight line on the inner side rail crush horn along the hole center as shown in the figure. Cut off inner side rail crush horn along scribed line.

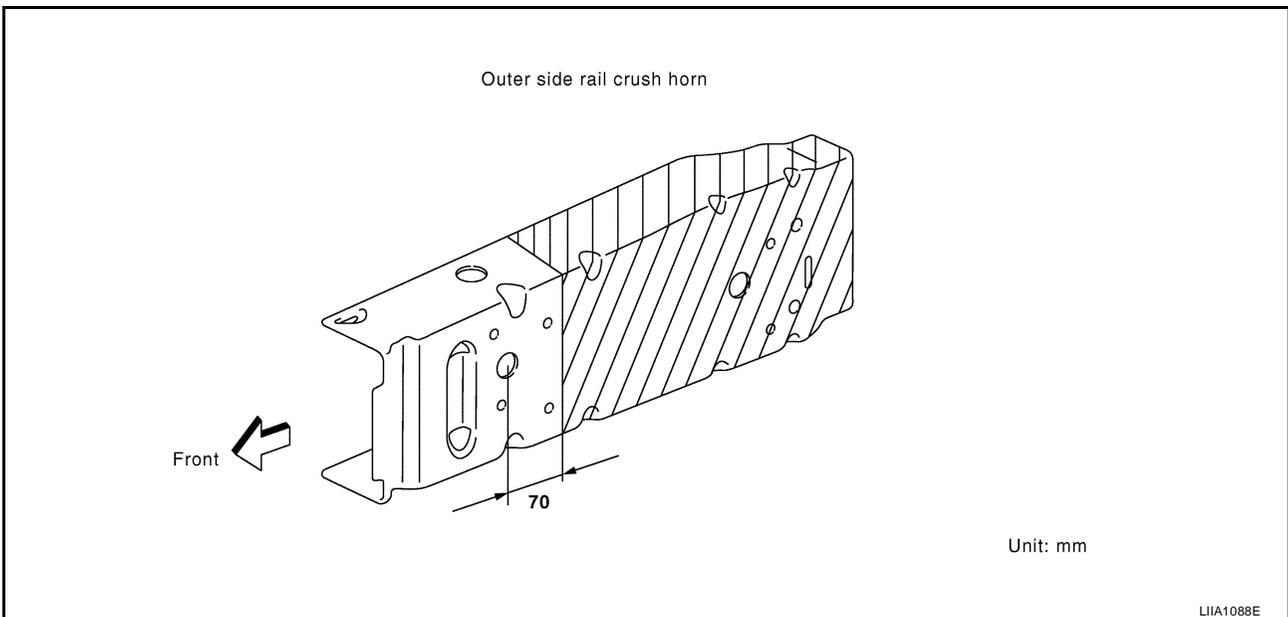

- Scribe a straight line on the outer side rail crush horn along the hole center as shown in the figure. Cut off outer side rail crush horn along scribed line.

# BODY REPAIR

- Weld part to be butt-welded and seam-welded corner to corner as shown in the figure.

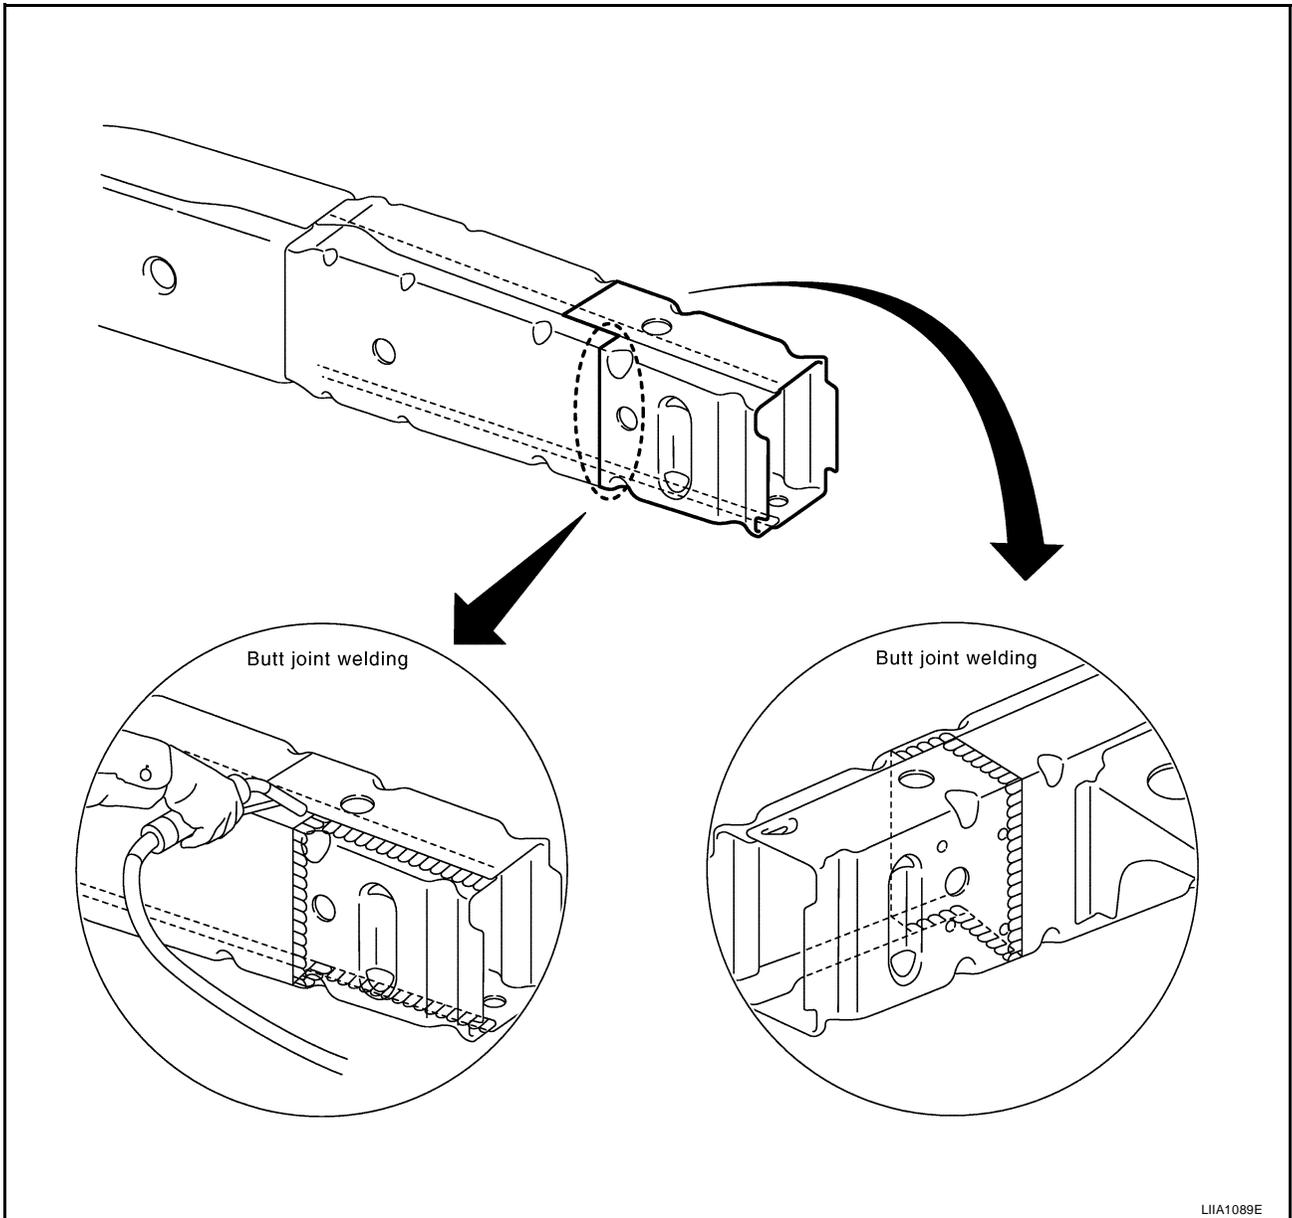

A  
B  
C  
D  
E  
F  
G  
H  
BL  
J  
K  
L  
M

# BODY REPAIR

---